

[Manuals.plus](#) /

› [ZWP](#) /

› ZWP RM-L5308S Universal Replacement Remote Control for LG TVs User Manual

ZWP RM-L5308S

ZWP RM-L5308S Universal Replacement Remote Control for LG TVs User Manual

Model: RM-L5308S

INTRODUCTION

This manual provides comprehensive instructions for the ZWP RM-L5308S Universal Replacement Remote Control, designed for use with various LG TV models. Please read this manual carefully to ensure proper setup and operation of your new remote control.





Image: The ZWP RM-L5308S universal replacement remote control, showcasing its ergonomic design and button layout.

Stable.Smarter

Smart and stable signal enjoy your life



Image: An illustration of the remote control's core features, including stable signal transmission, quick response time, integrated smart chip technology, and power-saving design.

COMPATIBILITY

The ZWP RM-L5308S remote control is compatible with a wide range of LG TV models and replaces several original LG remote control models. No programming is required; simply insert batteries for immediate use.

Compatible LG Remote Models:

- AKB75095308
- AKB75095307
- AKB74475401
- AKB74475433
- AKB73975702
- AKB75055701

- AKB73975711
- AKB73715608
- AKB75375604
- AGF76631064
- AKB74915324
- And more.

Compatible LG TV Series:

- **UHD TVs:** UP70, UP75, UP76, UP80, UP87 Series
- **OLED TVs:** OLED A1, OLED A2, OLED B1, OLED B2, OLED C1, OLED C2, OLED G1, OLED G2, OLED Z2, ZX Series
- **QNED Mini-LED TVs:** QNED 90, QNED 80, QNED 85, QNED 99 Series
- **NanoCell TVs:** Nano 55, Nano 75, Nano 80, Nano 85, Nano 90, Nano 99, UQ9000, UQ7070, UQ7570, UQ8000 Series

SETUP

To begin using your ZWP RM-L5308S remote control, follow these simple steps for battery installation.

1. **Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide the cover downwards or press the latch and lift to open.
2. **Insert Batteries:** Insert two (2) AAA batteries into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries match the markings inside the compartment. *Batteries are not included.*
3. **Close the Battery Compartment:** Replace the battery cover by sliding it back into position until it clicks securely.

The remote control is designed to work immediately with compatible LG TVs after battery installation, requiring no additional programming.



Work Right Out of The Box After Putting Batteries

Requires Two AAA batteries
(Batteries are not included)

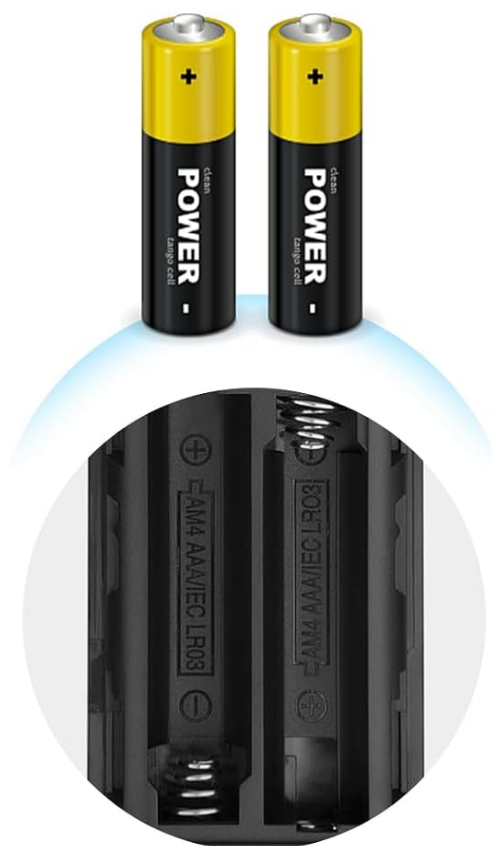


Image: Front and back view of the remote control, with an inset showing the battery compartment and two AAA batteries. This illustrates the correct way to insert batteries.

OPERATING INSTRUCTIONS

The ZWP RM-L5308S remote control provides intuitive access to your LG TV's functions. Below is a general guide to its buttons and their primary uses.

Quick Response



Image: The ZWP RM-L5308S remote control positioned in front of a television displaying a smart TV interface, illustrating its quick response capability.

Key Functions:

- **Power Button** (●): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down** (▲/▼): Adjusts the volume level.
- **Channel Up/Down** (P Page ▲/▼): Changes channels sequentially.
- **Mute** (): Mutes or unmutes the TV audio.
- **Navigation Pad** (Up, Down, Left, Right, OK): Navigates menus and confirms selections.
- **Back** (←): Returns to the previous screen or menu.
- **Exit**: Exits the current menu or application.
- **Home** (): Accesses the TV's home screen or smart features.
- **Input**: Selects input sources (HDMI, AV, etc.).
- **Netflix, Prime Video (AMZ), Disney+, Rakuten TV**: Dedicated buttons for quick access to streaming services.
- **Menu**: Opens the TV's main settings menu.
- **Subtitle**: Toggles subtitles on/off.
- **Ratio**: Adjusts the screen aspect ratio.

- **Guide:** Displays the electronic program guide.
- **Q.VIEW:** Quick view of previously watched channels.
- **LIST:** Displays a list of channels.
- **Quick Access/FAV:** Customizable quick access or favorite channels.
- **TEXT:** Accesses teletext services.
- **MY APPS:** Accesses the TV's installed applications.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and application.
- **Play/Pause (▶ / ||), Stop (■), Rewind (◀◀), Fast Forward (▶▶):** Media playback controls.
- **REC:** Records live TV (if supported by TV and external storage).
- **INFO:** Displays information about the current program.
- **LIVE TV:** Switches to live television broadcast.

Long Distance Precise Control



Image: A hand holding the ZWP RM-L5308S remote control, pointing towards a television, demonstrating its effective long-range (26 feet) and multi-angle (120 degrees) control capabilities.

MAINTENANCE

Proper care will extend the life and functionality of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle with care.

Comfortable feel

Extremely long life

L

Environmentally friendly

ABS

Comfortable feel



Quality assurance





Image: The ZWP RM-L5308S remote control highlighting its comfortable feel, durable ABS material, long lifespan, and quality assurance features.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

Problem	Solution
Remote is not responding.	Check if the batteries are inserted correctly with the correct polarity. Replace old batteries with new AAA batteries. Ensure there are no obstructions between the remote and the TV's infrared sensor. Point the remote directly at the TV's sensor.
Some buttons are not working.	Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. Ensure the TV model is listed as compatible.
Remote range is reduced.	Replace batteries with new ones. Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor.

SPECIFICATIONS

- **Model:** RM-L5308S
- **Brand:** ZWP
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** High-quality ABS
- **Color:** Black
- **Dimensions:** Approximately 10 x 3 x 1 inches
- **Item Weight:** Approximately 2.4 ounces
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 1 (Television)

WARRANTY AND SUPPORT

This ZWP remote control is manufactured with quality materials and undergoes rigorous testing. For any questions, concerns, or support needs regarding your remote control, please do not hesitate to contact the seller directly. We are committed to assisting you with any issues you may encounter.

Please refer to your purchase documentation for specific warranty details and contact information.