

[Manuals.plus](#) /

› [LOUISWARE](#) /

› LOUISWARE Portable Waist Fan FS-30 Instruction Manual

LOUISWARE FS-30

LOUISWARE Portable Waist Fan FS-30 Instruction Manual

Model: FS-30

1. INTRODUCTION

Thank you for choosing the LOUISWARE Portable Waist Fan FS-30. This versatile device is designed to provide personal cooling in various environments, featuring a powerful fan, a 10000mAh rechargeable battery, an LED flashlight, and a power bank function. Please read this manual carefully before use to ensure proper operation and maintenance.



Image: Overview of the LOUISWARE Portable Waist Fan FS-30 highlighting its key features.

2. PRODUCT OVERVIEW

Key Features:

- **5-in-1 Multifunctionality:** Can be clipped to waist, worn around the neck, used as a desk fan, emergency power bank, and features an LED flashlight with SOS function.
- **Powerful Airflow:** Up to 18000 RPM with 3 adjustable speed settings.
- **Long-Lasting Battery:** Built-in 10000mAh rechargeable battery provides up to 26 hours of continuous operation (at lowest speed).
- **Durable Design:** Silicone case offers dustproof, anti-slip, and drop-proof protection.
- **Bottom Air Inlet:** Ensures unobstructed, strong airflow even when clipped under clothing.
- **Charging Flexibility:** Type-C input and USB output for charging the fan and external devices.

Included Components:

- 1 x LOUISWARE Portable Waist Fan FS-30
- 1 x Belt
- 1 x Type-C Charging Cable
- 1 x Instruction Manual



Image: Contents of the LOUISWARE Portable Waist Fan FS-30 package.


3. SETUP

Wearing the Fan:

1. **Waist Clip:** Clip the fan directly onto your belt or pants. For optimal airflow, lift your shirt slightly to allow air circulation.
2. **Necklace Fan:** Attach the included belt/lanyard to the fan and wear it around your neck.
3. **Desk Fan:** Use the integrated stand to place the fan on a flat surface.



1. Super Bright LED Light

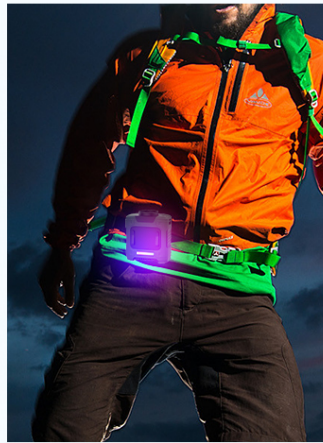

2. SOS Function



3. Emergency
Power Bank



4. Strong wind

Image: Step-by-step guide on how to attach and operate the waist fan.

Initial Charging:

Before first use, fully charge the fan. Connect the Type-C charging cable to the fan's Type-C input port and plug the other end into a USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status.

4. OPERATING INSTRUCTIONS

Power On/Off and Fan Speed Adjustment:

1. **Power On:** Press and hold the power button for 2 seconds to turn on the fan at the lowest speed setting.
2. **Adjust Speed:** Short press the power button to cycle through the 3 speed settings: Low (1st press), Medium (2nd press), High (3rd press).
3. **Power Off:** Press the power button a fourth time or press and hold for 2 seconds to turn off the fan.

How to Use



1. Clip fan to the belt



2. Clip your clothes



3. Push the button
to "on" status



4. Short press the button
to change fan speed

Image: Visual representation of the fan's three speed settings.

LED Flashlight and SOS Function:

The fan includes a built-in LED light for illumination and an SOS function for emergencies.

- **Turn On/Off LED:** Locate the dedicated LED button (usually separate from the fan power button). Press it once to turn

on the LED flashlight. Press again to turn it off.

- **Activate SOS:** With the LED flashlight on, press and hold the LED button to activate the SOS flashing mode. Press again to turn off SOS.

Power Bank Function:

The 10000mAh battery can also serve as an emergency power bank for your mobile devices.

- Connect your device's charging cable to the fan's USB output port.
- The fan will automatically begin charging your device.



Image: Demonstrating the LED flashlight, power bank, and SOS functions.

5. CHARGING

The LOUISWARE Portable Waist Fan FS-30 is equipped with a 10000mAh rechargeable battery.

- **Charging Time:** Approximately 4-5 hours for a full charge.
- **Working Time:** Up to 26 hours at the lowest speed, 12 hours at maximum speed.
- **Charging Input:** 5V-2A Type-C.
- **Power Bank Output:** 5V-2.4A USB.
- The fan can be used while charging.

LOUISWARE

NEWEST PORTABLE WAIST FAN



Strong Airflow



Up to 24H



Huge Capacity
10000mAh



LED&SOS Light



Safety



Emergency
Power Bank



Image: Battery life indications for various fan speeds.

6. MAINTENANCE

Cleaning:

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior with a soft, dry cloth.
- Use a soft brush or compressed air to gently remove dust from the air inlets and outlets.
- Do not use harsh chemicals or abrasive cleaners.

Storage:

- Store the fan in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every three months to prolong battery life.

The silicone case provides enhanced durability, making the fan dustproof, anti-slip, and drop-resistant for outdoor use.

7. TROUBLESHOOTING

Fan Not Turning On:

- Ensure the battery is charged. Connect the fan to a power source using the Type-C cable.
- Press and hold the power button for 2 seconds to ensure it is properly activated.

Weak Airflow:

- Check the fan speed setting and increase it if necessary.
- Ensure the air inlets and outlets are not obstructed by clothing or debris.
- Clean any dust accumulation from the fan grilles.

Fan Not Charging:

- Verify that the Type-C cable is securely connected to both the fan and the power adapter.
- Try using a different Type-C cable or power adapter.

- Ensure the power source is functional.

Power Bank Function Not Working:

- Ensure the fan's battery has sufficient charge.
- Verify that the USB cable connecting to your device is functional and properly inserted into the fan's USB output port.

8. SPECIFICATIONS

Feature	Specification
Brand	LOUISWARE
Model Name	FS-30
Color	Green
Electric Fan Design	Wearable Fan
Power Source	Battery Powered
Battery Capacity	10000mAh
Speed	18000 RPM (Max)
Number of Power Levels	3
Noise Level	50 Decibels
Wattage	5 watts
Voltage	5 Volts
Product Dimensions	1.8"D x 4.4"W x 3.4"H
Item Weight	12.6 ounces
Control Method	Touch
Mounting Type	Clip On
Special Features	LED Light, Neck Fan, Power Bank, Table Fan
Included Components	Belt, Fan, Instructions, Type-C Cable

9. SAFETY INFORMATION

- Do not insert fingers or foreign objects into the fan blades.
- Keep the fan away from water and excessive moisture.
- Do not expose the fan to high temperatures or direct sunlight for prolonged periods.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.
- Keep out of reach of children.
- Use only the provided Type-C cable for charging.

10. WARRANTY AND SUPPORT

LOUISWARE products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official LOUISWARE website.

If you encounter any issues not covered in this manual, please contact LOUISWARE customer service for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question