

[Manuals.plus](#) /

› [Ninja](#) /

› Ninja ProChef Wireless Meat Thermometer WP100 Instruction Manual

Ninja WP100

Ninja ProChef Wireless Meat Thermometer WP100 Instruction Manual

Model: WP100 | Brand: Ninja

1. PRODUCT OVERVIEW

The Ninja ProChef Wireless Meat Thermometer WP100 is designed to provide precise temperature monitoring for various cooking methods, both indoors and outdoors. It connects wirelessly to the Ninja ProConnect App on your smartphone, offering real-time updates and guided cooking to ensure optimal results without guesswork.

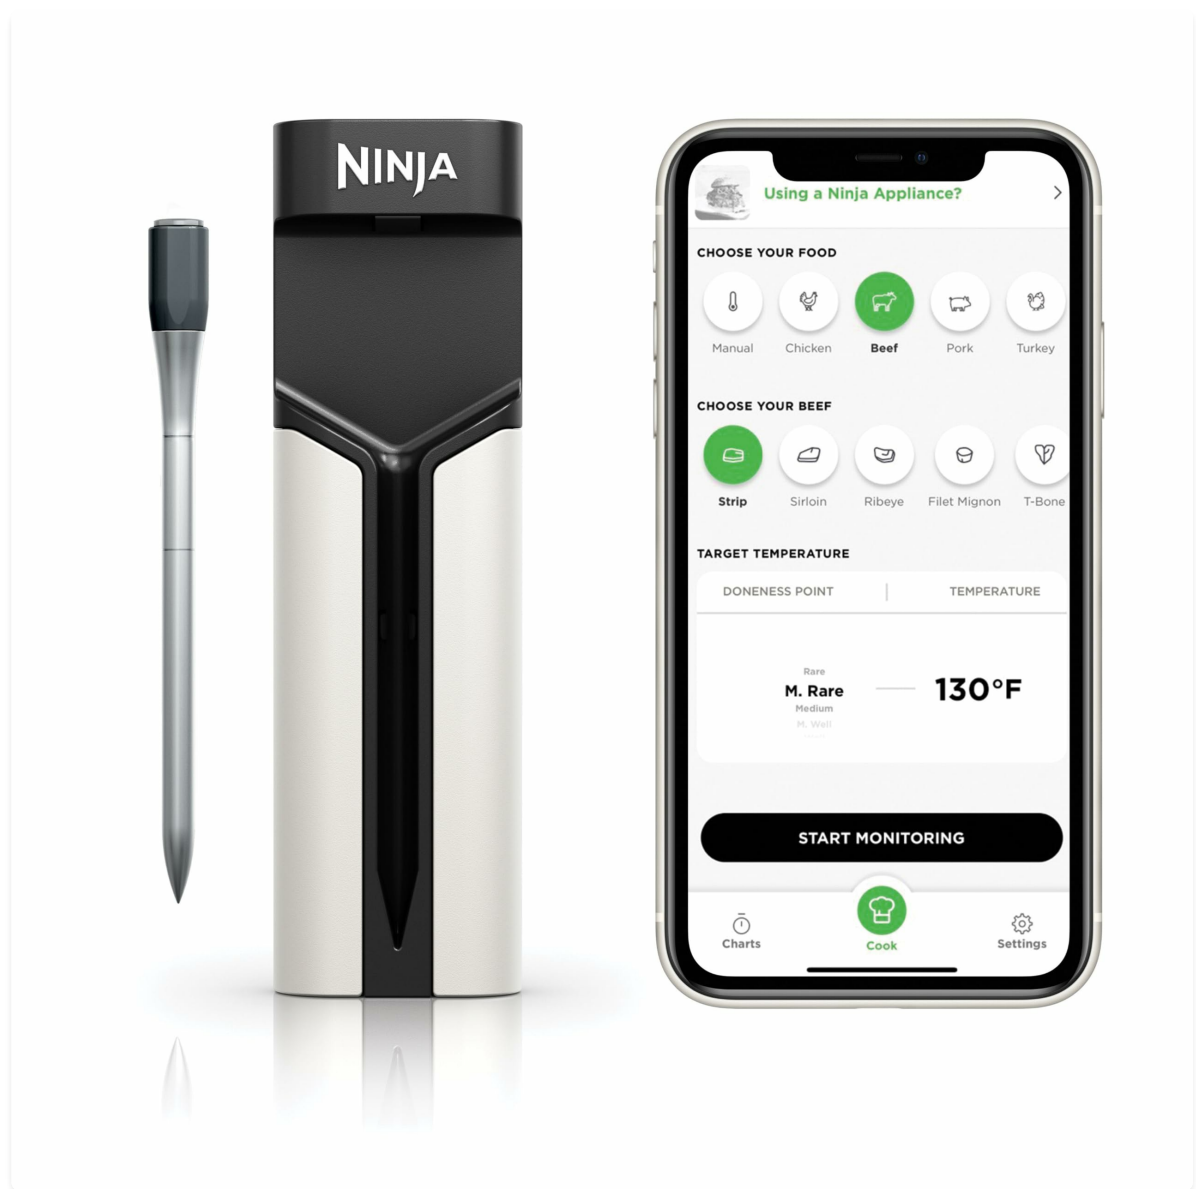


Image: The Ninja ProChef Wireless Meat Thermometer, its charging case, and a perfectly cooked sliced steak on a wooden cutting board. This illustrates the product's primary use for achieving precise meat temperatures.

Key features include:

- **Flareup Resistant:** Withstands temperatures up to 700°F, suitable for grilling, searing, and high-heat roasting.
- **Long-Range Bluetooth:** Monitors cooking from up to 165 feet away via the Ninja ProConnect App.
- **Waterproof Design:** Allows for easy handwashing and protection against grease and outdoor elements.
- **Dual-Sensor Probe:** Measures both internal meat temperature and ambient cooking temperature.
- **Long-Lasting Battery:** Up to 30 hours of battery life for extended cooking sessions.

2. SETUP

2.1 Unboxing and Initial Charge

Upon unboxing, ensure all components are present: the dual-sensor stainless steel thermometer, the protective charging case, and 1 AAA battery. The charging case requires the included AAA battery to

power the thermometer probe.



*For best results, keep charging case near probe during cooks

Indoors or outdoors

From your stovetop to outdoor grills and smokers, cook anything just about anywhere.*

Image: The Ninja ProChef Wireless Meat Thermometer resting in its sleek charging case, positioned beside a smartphone showing the Ninja ProConnect App interface. This highlights the product's design and app integration.

2.2 App Download and Connection

1. Download the **Ninja ProConnect App** from the Apple App Store or Google Play Store. This device and its corresponding app are compatible for use in the US only.
2. Ensure Bluetooth is enabled on your smartphone.
3. Remove the thermometer probe from its charging case. The probe will automatically attempt to connect to the app.
4. Follow the on-screen prompts in the app to pair your thermometer.

3. OPERATING INSTRUCTIONS

3.1 Inserting the Probe

Insert the stainless steel probe into the thickest part of the food, avoiding bone. Ensure the probe is inserted deep enough so that the black ceramic tip is fully embedded in the food, and the metal shaft is

exposed to the ambient cooking environment.

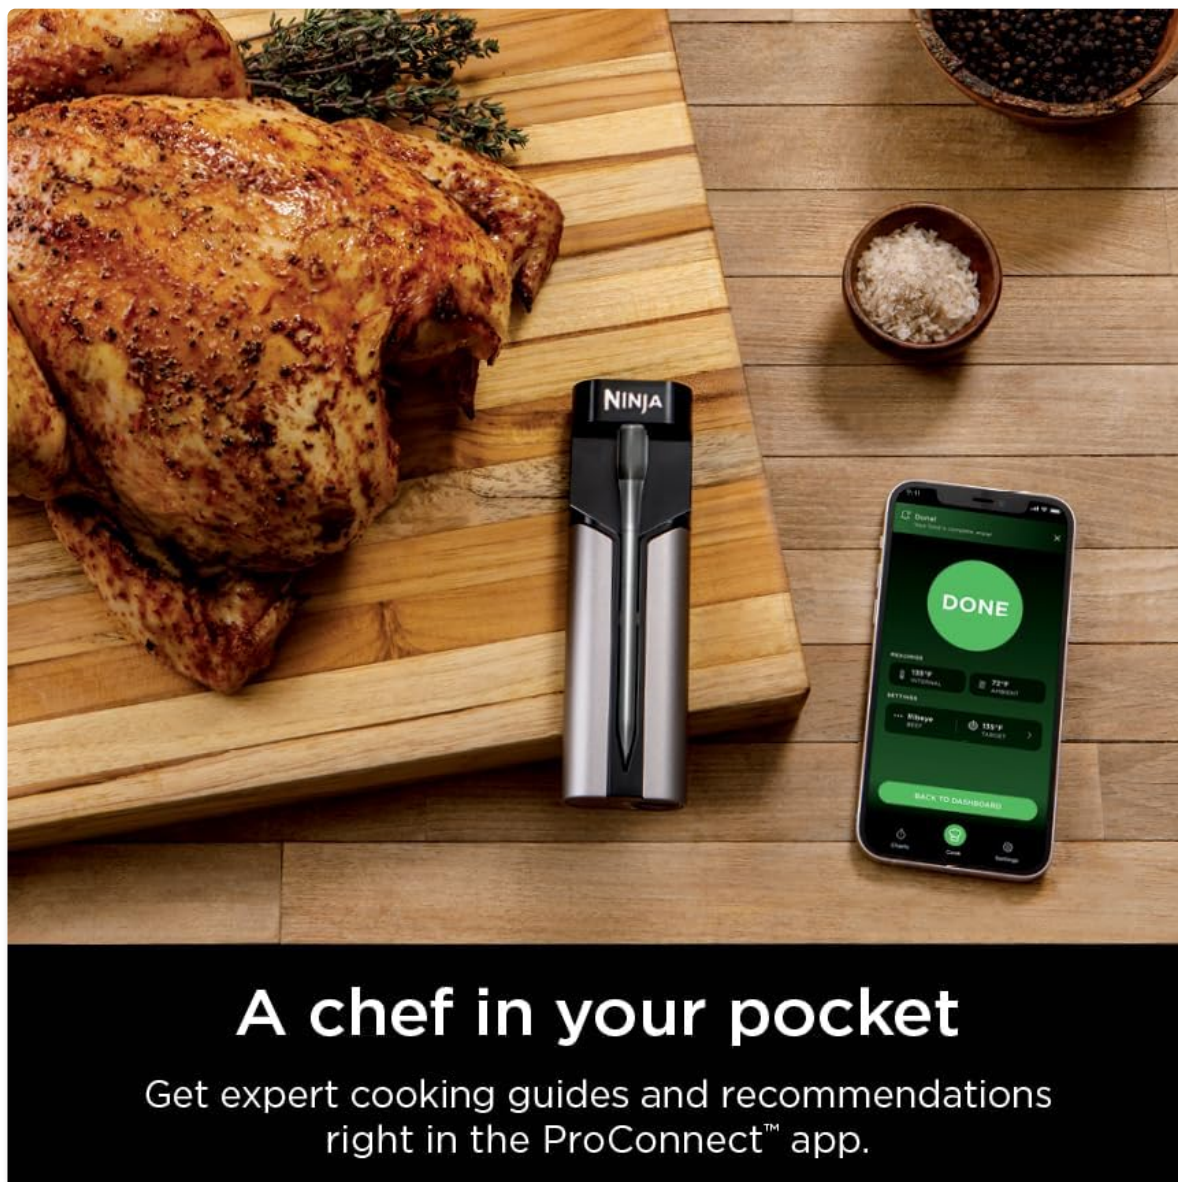


Image: The Ninja ProChef Wireless Meat Thermometer probe accurately inserted into the thickest part of a whole roasted turkey, demonstrating proper placement for internal temperature monitoring.

3.2 Using the Ninja ProConnect App

1. In the app, select the type of food you are cooking (e.g., chicken, beef, pork, turkey, fish, plant-based).
2. Choose your desired doneness level (e.g., rare, medium-rare, medium, well-done). The app will automatically set the target internal temperature.
3. The app will display real-time internal and ambient temperatures, along with an estimated remaining cook time.
4. You will receive notifications on your smartphone when your food is nearing or has reached its target temperature, including a 'rest' reminder to account for carryover cooking.

3.3 Wireless Range and Placement

The thermometer offers a wireless range of up to 165 feet in open air with a direct line of sight. To maintain optimal connection, keep the charging case as close as possible to the cooking appliance and the probe during cooking. Physical obstructions like walls or doors may reduce the effective range.



Long range

Dual sensors send you live cooking updates from up to 165 ft away—that's half a football field.*

*Tested in open air without physical obstructions

Image: Two individuals are seen smiling and engaging with a smartphone that displays the Ninja ProConnect App, showing cooking progress. A grill is visible in the background, emphasizing the thermometer's long-range monitoring capability for outdoor cooking.

3.4 Versatile Cooking Environments

The Ninja ProChef thermometer is designed for use in various cooking environments, including:

- Grills (up to 700°F flareup resistance)
- Ovens
- Smokers
- Air Fryers
- Stovetop (for searing)

Your browser does not support the video tag.

Video: An official product video from SharkNinja showcasing the Ninja ProChef Wireless Thermometer. It demonstrates how to insert the probe into various foods like chicken and steak, program the cook using the app, and monitor progress from a distance, highlighting its versatility for both indoor and outdoor cooking environments.

4. MAINTENANCE

4.1 Cleaning

The stainless steel probe is waterproof and designed for easy cleaning. After each use, allow the probe to cool completely. Hand wash the probe with soap and water. Do not immerse the charging case in water or place it in a dishwasher.

4.2 Charging and Storage

The thermometer probe charges when placed back into its protective charging case. The case itself is powered by 1 AAA battery (included). Store the probe in its charging case when not in use to ensure it is ready for your next cook. The magnetic base of the charging case allows for convenient storage on metal surfaces.

5. TROUBLESHOOTING

5.1 Connection Issues

If the thermometer frequently disconnects from the app:

- Ensure the charging case is within 165 feet of the probe and has a clear line of sight.
- Check the battery level of the charging case and replace the AAA battery if needed.
- Restart the Ninja ProConnect App and re-pair the device.
- Verify that your smartphone's Bluetooth is active.

5.2 Inaccurate Readings

If you suspect inaccurate temperature readings:

- Ensure the probe is inserted correctly into the thickest part of the meat, avoiding bone.
- Confirm that the black ceramic tip is fully submerged in the food.
- Allow sufficient time for the temperature to stabilize (response time is typically 3 seconds).

6. SPECIFICATIONS

Brand	Ninja
Model Name	Ninja WP100
Special Feature	App Companion, Fast Reading System, High Accuracy, Waterproof
Color	Black/Silver
Included Components	Dual-sensor stainless steel thermometer, charging case, 1 AAA battery.
Outer Material	Stainless Steel

Display Type	Digital (via App)
Connectivity Technology	Bluetooth
Power Source	Battery Powered (1 Lithium Ion battery included for probe, 1 AAA battery for case)
Upper Temperature Rating	700 Degrees Fahrenheit
Response Time	3 seconds
Indoor/Outdoor Usage	Indoor, Outdoor
Product Care Instructions	Hand Wash Only

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Ninja website. The Ninja ProConnect App provides ongoing support and updates for your device.