

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY X-ONE Replacement Remote Control User Manual for Xbox One, Xbox One S, and Xbox Series X

VINABTY X-ONE

VINABTY X-ONE Replacement Remote Control User Manual

For Xbox One, Xbox One S, and Xbox Series X

INTRODUCTION

This manual provides instructions for the VINABTY X-ONE infrared replacement remote control. This remote is designed to be a direct replacement for your original Xbox One, Xbox One S, or Xbox Series X console remote, offering convenient control for media playback and system navigation.

Key Features

- **Wide Compatibility:** Compatible with Xbox One, Xbox One S, and Xbox Series X consoles.
- **No Programming Required:** Operates immediately after battery installation.
- **Infrared Technology:** Ensures precise control up to 10 meters (33 feet).
- **Ergonomic Design:** Lightweight, portable, and comfortable to hold.
- **Durable Construction:** Made from high-quality ABS plastic with responsive, soft buttons.

SETUP

The VINABTY X-ONE remote control is designed for immediate use without any complex programming or pairing. Simply install the batteries, and it's ready to operate your compatible Xbox console.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA (R03) 1.5V batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.



Figure 1: Rear view of the VINABTY X-ONE remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries.

Once batteries are installed, the remote is ready for use. Point the remote directly at your Xbox console or TV (if controlling TV functions) for optimal performance.

OPERATING INSTRUCTIONS

The VINABTY X-ONE remote control provides intuitive buttons for navigating your Xbox console's interface and controlling media playback.



Figure 2: Front view of the VINABTY X-ONE remote control, highlighting the layout of its buttons.

Button Functions

Button	Function
--------	----------

Button	Function
Power (Green Button)	Turns the Xbox console on or off.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and selections.
OK/Select (Center Button)	Confirms selections.
Back/Return	Goes back to the previous screen or menu.
Menu/Options	Opens context-sensitive menus or options.
Volume Up (+) / Volume Down (-)	Adjusts the volume of your TV or audio system (if configured).
Channel Up (CH ^) / Channel Down (CH v)	Changes TV channels (if configured).
Mute	Mutes or unmutes audio.
Play/Pause	Plays or pauses media content.
Stop	Stops media playback.
Fast Forward / Rewind	Fast forwards or rewinds media content.
Skip Forward / Skip Backward	Skips to the next or previous track/chapter.

Note: Some functions, such as TV volume and channel control, may require your Xbox console to be configured for TV integration. Refer to your Xbox console's settings for more details.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your VINABTY X-ONE remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's responsiveness decreases or it stops functioning.
- Always replace both batteries at the same time with new ones of the same type (AAA 1.5V).
- Do not mix old and new batteries, or different types of batteries.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

If you experience issues with your VINABTY X-ONE remote control, try the following troubleshooting steps:

1. Remote Not Responding:

- Ensure the batteries are inserted correctly with the correct polarity (+/-).

- Replace the batteries with fresh AAA 1.5V batteries.
- Check for any obstructions between the remote and the Xbox console's IR receiver.
- Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the console.

2. Buttons Not Working:

- Press the buttons firmly. If only some buttons are unresponsive, it might indicate a specific button issue or a need for battery replacement.
- Clean the remote control as described in the Maintenance section to remove any dirt or debris that might be obstructing button presses.

3. Intermittent Operation:

- This often indicates low battery power. Replace the batteries.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

If these steps do not resolve the issue, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

Feature	Detail
Model Name	X-ONE
Brand	VINABTY
Compatible Devices	Xbox One, Xbox One S, Xbox Series X
Connectivity Technology	Infrared (IR)
Maximum Range	10 meters (approximately 33 feet)
Number of Buttons	15
Controller Type	Button Control
Power Source	2 x AAA (R03) 1.5V Batteries
Product Dimensions (L x W x H)	13L x 3W x 1.5H centimeters (approx. 5.1 x 1.2 x 0.6 inches)
Special Features	No programming required, Ergonomic design
Manufacturer	Vinabty manufacture

WARRANTY AND SUPPORT

VINABTY is committed to providing quality products and professional after-sales service.

Customer Support

If you encounter any issues with your VINABTY X-ONE remote control, or if your specific device model is not listed as compatible and you require assistance, please contact our customer support team.

You can typically find contact information (such as an email address) on the product packaging or through the retailer where you purchased the item. Please provide your product model (X-ONE) and a detailed description of the issue for

prompt assistance.

We strive to provide a satisfactory solution to all customer inquiries.

