

## BuTure VAC JR700

# BuTure VAC JR700 Cordless Vacuum Cleaner User Manual

Model: JR700 | Brand: BuTure VAC

## 1. INTRODUCTION

Thank you for choosing the BuTure VAC JR700 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

## 2. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.

# PACKAGE LIST

1 Main body	2 Battery	3 Charger
4 Telescopic Tube	5 Hepa Filter*3	6 Small Cleaning Tool
7 Round Brush	8 Crevice Brush	9 Wall Mount Stand
10 Floor & Carpet Universal Electric Brush		11 User Manual



Figure 2.1: Overview of included components.

- 1 x Vacuum Main Body
- 1 x 2200mAh Battery
- 1 x Electric Floor Brush
- 1 x Tangle-Free Roller Brush

- 1 x Dust Container (1.5L capacity)
- 1 x Telescopic Tube (adjustable 40-64cm)
- 1 x Crevice Nozzle
- 1 x Round Brush
- 1 x Brush Cleaning Tool
- 1 x Charger
- 1 x Wall Mount
- 1 x Instruction Manual
- 2 x HEPA Filters (extra gifts)

### 3. ASSEMBLY AND SETUP

---

Follow these steps to assemble your vacuum cleaner before first use.

1. **Charge the Battery:** Before initial use, fully charge the 2200mAh Lithium-Ion battery. Connect the charger to the battery or the main body and plug it into a power outlet. A full charge takes approximately 4-5 hours.
2. **Attach the Telescopic Tube:** Insert the telescopic tube into the main body until it clicks into place. The tube is adjustable from 40cm to 64cm for comfortable use.
3. **Attach the Floor Brush:** Connect the electric floor brush to the end of the telescopic tube. Ensure it clicks securely.
4. **Install the Dust Container:** Ensure the 1.5L dust container is properly attached to the main body.
5. **Wall Mount Installation (Optional):** Use the provided wall mount to store and charge your vacuum. Choose a suitable location near a power outlet.



Figure 3.1: Fully assembled vacuum cleaner with accessories.

## 4. OPERATION

The BuTure VAC JR700 features an intelligent color touch screen and multiple cleaning modes for versatile cleaning.

### 4.1 Power On/Off and Mode Selection

- To power on, press the power button on the main body.
- The intelligent color touch screen will display battery level, current suction mode, and other indicators.
- Press the "+/-" buttons on the touch screen to switch between three cleaning modes:
  - **Eco Mode:** Up to 55 minutes runtime, suitable for light cleaning and hard floors.

- **Standard Mode:** Balanced power and runtime.
- **Boost Mode:** Maximum suction (38KPA) for deep cleaning and stubborn dirt, approximately 20 minutes runtime.
- To power off, press the power button again.



Figure 4.1: Intelligent color touch display showing battery, suction, and error indicators.

## 4.2 Cleaning Features

- **2-in-1 Tangle-Free Roller:** The electric floor brush features integrated hard and soft bristles with a built-in comb structure and V-shaped roller, designed to prevent hair tangling and effectively clean both carpets and hard floors.
- **LED Headlights:** The floor brush is equipped with LED lights to illuminate dark areas and reveal hidden dust.
- **Maneuverability:** The brush head offers 180° horizontal and 90° vertical rotation for easy navigation around furniture and into tight spaces.
- **Versatile Attachments:** Use the crevice nozzle for narrow gaps and corners, and the round brush for upholstery, curtains, or car interiors. The telescopic tube can be removed for handheld use.

## ANTI-WINDING LED UNIVERSAL HEAD



Figure 4.2: The anti-winding LED universal head effectively cleans various surfaces.

# EFFICIENT FOR PET HAIR



38KPA



1.5 L



Pet



Figure 4.3: Efficient cleaning for pet hair on various floor types.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

## 5.1 Emptying the Dust Container

- Empty the 1.5L dust container regularly, especially when the "dust sensor blocked" indicator appears on the display.
- Press the release button to detach the dust container from the main body.
- Open the bottom flap of the dust container and empty contents into a trash bin.
- Close the flap and reattach the dust container to the main body.

## 5.2 Cleaning Filters

The JR700 features a multi-stage filtration system including HEPA, Stainless Steel, Multicone, and Cyclone filtration. Clean filters regularly to maintain suction power.

# MULTI-FILTRATION SYSTEM



Motor Air  
Cooling Filtration

Hepa Filtration

Stainless Steel  
Filtration

Multicone Filtration

Cyclone Filtration

Figure 5.1: Diagram of the multi-stage filtration system.

1. Twist and remove the filter assembly from the dust container.
2. Separate the HEPA filter, stainless steel filter, and multicone filter.
3. Tap off loose dust from all filters.
4. Rinse the filters under cold running water. Ensure they are completely dry before reassembling and placing them back into

the vacuum. Drying may take up to 24 hours.

5. Replace HEPA filters every 3-6 months, or as needed. Two extra HEPA filters are included.

### 5.3 Cleaning the Roller Brush

- If the "brush roller tangled" indicator appears, clean the roller brush.
- Detach the electric floor brush from the telescopic tube.
- Use the provided cleaning tool to remove any tangled hair or debris from the roller brush.
- The roller brush can be removed for deeper cleaning if necessary.

## 6. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dust container full, filters clogged, or brush roller tangled.	Empty dust container. Clean all filters. Remove tangled hair from roller brush.
Brush roller stops spinning.	Hair or debris tangled around the roller.	Turn off the vacuum and clear any obstructions from the roller brush.
Vacuum stops unexpectedly.	Overheating due to clogged filters or prolonged use in Boost mode.	Turn off the vacuum and allow it to cool down. Clean filters.

## 7. SPECIFICATIONS

Feature	Detail
Model	JR700
Brand	BuTure VAC
Motor Power	450W Brushless Motor
Suction Power	Up to 38KPA
Battery	2200mAh 7-cell Lithium-Ion (removable)
Runtime	Up to 55 minutes (Eco Mode), 20 minutes (Boost Mode)
Charging Time	4-5 Hours
Dust Cup Capacity	1.5 Liters
Filtration System	Multi-Stage (HEPA, Stainless Steel, Multicone, Cyclone)
Display	Intelligent Color Touch Screen
Roller Brush	2-in-1 Tangle-Free with LED Light
Extension Tube	Adjustable (40-64cm)
Product Dimensions	10" L x 7" W x 17" H

Feature	Detail
Item Weight	3.61 pounds

## 8. WARRANTY AND SUPPORT

BuTure VAC provides a **3-year free warranty** and **7\*24 after-sales service** for valued customers after product registration. For any questions, concerns, or support needs, please contact our customer service team.

Please refer to the contact information provided on the product packaging or the official BuTure VAC website for the most up-to-date support channels.



Figure 8.1: Our customer support team is ready to assist you.

© 2024 BuTure VAC. All rights reserved.