

PERFASCIN RC3026D

PERFASCIN RC3026D Remote Control Instruction Manual

For Digitrex/Hiteker LCD LED HDTV Televisions

INTRODUCTION

This manual provides instructions for the PERFASCIN RC3026D replacement remote control. This remote is designed to function with various Digitrex and Hiteker LCD LED HDTV television models without requiring programming.

Compatible Models include:

- LCD32A7
- RC-E32V7/WT
- TL236Z10EDTP
- TL236Z10ETPM
- TL50Z10AHTP
- RCLCD37A5F
- E32V7
- RCLCD32A7

If your specific TV model is not listed, please verify compatibility before use. This remote is a direct replacement and typically requires no setup beyond battery installation.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA-LR03 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.







Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

Initial Use

The PERFASCIN RC3026D remote control is designed for immediate use with compatible Digitrex/Hiteker televisions. No programming or code entry is required. Once batteries are installed, point the remote at your television and begin operation.

OPERATING INSTRUCTIONS

Button Functions Overview





Image: Front view of the remote control, highlighting the layout and labels of all functional buttons.

- **Power (Red Button):** Turns the television on or off.
- **EPG:** Accesses the Electronic Program Guide.
- **ASPECT:** Adjusts the screen aspect ratio.
- **SLEEP:** Sets a timer for the television to turn off automatically.
- **FAV:** Accesses favorite channels list.
- **CC:** Activates or deactivates Closed Captions.
- **MTS:** Selects Multi-channel Television Sound options (e.g., Stereo, SAP).
- **DISPLAY:** Shows on-screen information about the current program or input.
- **INPUT:** Cycles through available input sources (e.g., HDMI, AV).
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **MENU:** Opens the main television menu.
- **EXIT:** Exits current menu or on-screen display.
- **VOL +/-:** Increases or decreases the volume level.
- **SOUND:** Accesses sound settings.
- **CH (Channel) Up/Down:** Changes to the next or previous channel.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **-/--:** Toggles between single and double-digit channel entry.
- **(Return/Recall):** Returns to the previous channel or function.

Basic Operation

- **Power On/Off:** Press the **Power** button once.
- **Changing Channels:** Use the **CH Up/Down** buttons or enter the channel number directly using the **Number Buttons**.

- **Adjusting Volume:** Press the **VOL +** to increase volume and **VOL -** to decrease volume.
- **Accessing Menus:** Press the **MENU** button to open the main menu. Use the **Navigation Buttons** to move, and **OK** to select. Press **EXIT** to close the menu.

MAINTENANCE

To ensure optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control periodically with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA-LR03 1.5V). Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are correctly installed with the proper polarity (+/-).
 - Replace the batteries with fresh ones.
 - Ensure there is a clear line of sight between the remote control and the television's infrared sensor. Obstructions can block the signal.
 - Confirm that the television is powered on.
- **Buttons Not Working:**
 - If only specific buttons are not working, try cleaning the remote's surface around those buttons.
 - Ensure the remote is pointed directly at the TV.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Minimize sources of infrared interference, such as direct sunlight or strong fluorescent lighting.

SPECIFICATIONS

Model Number	RC3026D
Brand	PERFASCIN
Product Dimensions	5 x 2 x 0.6 inches (15.5 cm x 4.5 cm x 1.5 cm)
Item Weight	1 ounce
Color	Black
Compatible Devices	Television (Digitrex/Hiteker LCD LED HDTV)





Image: Remote control with labeled dimensions for length and width.

WARRANTY AND SUPPORT

All PERFASCIN products undergo thorough testing before delivery to ensure quality and functionality. If you have any questions, concerns, or require assistance with your RC3026D remote control, please do not hesitate to contact our customer service. We are committed to providing prompt support and will respond to your inquiries as quickly as possible.

For customer service, please refer to the contact information provided with your purchase or on the PERFASCIN official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question