

## OttLite CS3WCG5GH

# OttLite Good Housekeeping Circular LED Desk Lamp with Wireless Charging

Model: CS3WCG5GH

## INTRODUCTION

---

This manual provides instructions for the OttLite Good Housekeeping Circular LED Desk Lamp with Wireless Charging. This lamp features OttLite's exclusive ClearSun LED technology, designed to reduce eyestrain, an adjustable neck, three color temperature modes, and a convenient wireless charging base. Please read these instructions carefully before use and retain them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or injury to persons:

- Use only as intended by the manufacturer.
- Do not operate the lamp with a damaged cord or plug.
- Do not disassemble the lamp. There are no user-serviceable parts inside.
- Keep the lamp away from water or other liquids.
- Ensure the lamp is placed on a stable, flat surface.
- Unplug the lamp from the power outlet before cleaning.
- The wireless charging pad is for compatible devices only. Do not place metal objects or foreign materials on the charging pad.

## PACKAGE CONTENTS

---

- OttLite Good Housekeeping Circular LED Desk Lamp
- Power Cable

## SETUP

---

1. **Unpack the Lamp:** Carefully remove the lamp and all components from the packaging.
2. **Position the Lamp:** Place the lamp on a stable, flat surface where it will be used.

3. **Connect Power:** Insert the power cable into the power input port on the back of the lamp base. Plug the other end of the power cable into a standard electrical outlet.



Image: The OttLite Good Housekeeping Circular LED Desk Lamp, ready for use.

## OPERATING INSTRUCTIONS

### Power On/Off and Brightness Adjustment

The lamp features touch-activated controls located on the base.

1. **Power On/Off:** Lightly touch the power icon on the lamp base to turn the lamp on or off.
2. **Adjust Brightness:** With the lamp on, repeatedly touch the power icon to cycle through three brightness levels for the current color mode.

### Color Temperature Modes

The lamp offers three color temperature modes: Warm White, Bright White, and ClearSun Natural Daylight.

1. **Change Color Mode:** Lightly touch the mode icon (usually represented by a sun or color spectrum) on the lamp base to switch between the available color modes.

## Adjustable Neck

The lamp features a flexible neck that allows you to direct the light precisely where needed. Gently bend the neck to adjust the height and angle of the light head. The lamp's height can be adjusted from approximately 8.75 inches to 18.75 inches.



Image: Diagram illustrating the lamp's features including flexible neck, touch controls, wireless charging, and three color modes.

## WIRELESS CHARGING

The lamp base includes a wireless charging pad for compatible devices.

1. **Place Device:** Center your wireless charging-compatible device (e.g., smartphone) on the wireless charging pad located on the lamp base.
2. **Verify Charging:** The device should indicate that it is charging. If not, slightly adjust the position of your device on the pad.

**Note:** Ensure no metal objects or foreign materials are placed between your device and the charging pad, as this can interfere with charging or cause overheating.



## Reduces eyestrain up to 51%

Exclusive ClearSun LED technology matches  
the spectral output of natural daylight.

Image: A smartphone placed on the lamp's base, indicating active wireless charging.

## MAINTENANCE

---

To maintain your OttLite lamp in optimal condition:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** The integrated LEDs are designed for long-term use and are not replaceable.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cable not properly connected or no power from outlet.	Ensure the power cable is securely plugged into the lamp and the wall outlet. Test the outlet with another device.
Wireless charging is not working.	Device not compatible, not properly aligned, or foreign objects on pad.	Verify your device supports wireless charging. Re-center the device on the charging pad. Remove any metal objects or thick cases.
Light flickers or is dim.	Unstable power supply.	Ensure the lamp is plugged directly into a wall outlet, not a power strip or extension cord that may be overloaded.

## SPECIFICATIONS

---

- **Model Number:** CS3WCG5GH
- **Dimensions (Base):** 5.5 inches (Diameter)
- **Adjustable Height:** 8.75 inches to 18.75 inches
- **Item Weight:** 10.4 ounces
- **Light Source:** Integrated LED
- **Wattage:** 30 watts
- **Voltage:** 13 Volts
- **Material:** Plastic
- **Color:** Black
- **Special Features:** Wireless Charging, Flexible Neck, 3 Color Modes (Warm White, Bright White, ClearSun Natural Daylight), ClearSun LED Technology (95+ CRI)
- **UPC:** 761712022277





Image: Visual representation of the lamp's adjustable height and base dimensions.

## WARRANTY AND SUPPORT

### Good Housekeeping Seal Limited Warranty

This product has earned the Good Housekeeping Seal. If any product bearing this limited warranty Seal proves to be defective within two years from the date it was first sold to a consumer by an authorized retailer, Good Housekeeping will refund the purchase price or \$2,000, whichever is less. Alternatively, at Good Housekeeping's sole discretion, they may repair or replace the product. For details, please refer to [ghseal.com](https://www.gohousekeeping.com).



Image: The Good Housekeeping Seal, indicating product quality and warranty.

### Customer Support

For further assistance or inquiries, please contact OttLite Customer Support through their official website or the retailer where the product was purchased.

