

[Manuals.plus](#) /

› [HealSmart](#) /

› HealSmart 15-inch Adjustable 12-Speed Pedestal Stand Fan with Remote Control User Manual

HealSmart 14.5 Inch Pedestal Stand Fan

HealSmart 15-inch Adjustable 12-Speed Pedestal Stand Fan with Remote Control User Manual

Model: 14.5 Inch Pedestal Stand Fan

INTRODUCTION

Thank you for purchasing the HealSmart 15-inch Adjustable 12-Speed Pedestal Stand Fan. This manual provides important information regarding the assembly, operation, maintenance, and troubleshooting of your new fan. Please read these instructions carefully before use and retain them for future reference.





Image: Front view of the HealSmart 15-inch Pedestal Stand Fan. This image displays the complete fan unit, including the round base, adjustable stand pole, and the fan head with its protective grill.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Always unplug the fan before cleaning or performing any maintenance.
- Do not use the fan with a damaged cord or plug. If the cord or plug is damaged, contact qualified service personnel.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Keep children and pets away from the fan during operation. The metal grill provides protection, but supervision is always recommended.
- Do not insert fingers or any objects through the grill when the fan is operating.
- Do not operate the fan in wet or damp locations, such as bathrooms or laundry areas.
- This fan is for indoor use only.

- Do not block air openings.

PACKAGE CONTENTS

Verify that all components are present before assembly:

- Fan Head Assembly (Front and Rear Grills, Fan Blades)
- Motor Unit
- Adjustable Stand Pole
- Round Base
- Remote Control
- User Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully:

1. **Attach the Stand Pole to the Base:** Securely fasten the adjustable stand pole to the round base. Ensure it is stable and upright.
2. **Mount the Motor Unit:** Place the motor unit onto the top of the adjustable stand pole. Tighten any securing screws or knobs.
3. **Install the Rear Grill:** Position the rear grill onto the motor unit, aligning the mounting holes.
4. **Attach the Fan Blades:** Carefully slide the fan blades onto the motor shaft. Secure them with the provided spinner cap, turning it clockwise until tight.
5. **Install the Front Grill:** Place the front grill over the fan blades and align it with the rear grill. Secure the two grills together using the clips or screws provided around the perimeter. Ensure the grill is firmly closed for safety.

Wire Length: 63"
Weight: 12.76 LBS



Image: Assembled fan with dimensions. This image illustrates the overall size and proportions of the fan once assembled, including its height, fan head diameter, and base width.

OPERATING INSTRUCTIONS

Your HealSmart Pedestal Stand Fan can be operated using the control panel on the fan body or the included remote control.

Control Panel Functions:

- **Power ON/OFF Button:** Press to turn the fan on or off.
- **Speed Button:** Press repeatedly to cycle through 12 speed levels (0-12).
- **Oscillation Button:** Press to start or stop the 90° horizontal oscillation function.

Remote Control Functions:

The remote control allows you to operate the fan from a distance of up to 16.4 feet.



Fan Speed

-Press repeatedly to cycle through 0 to 12 speed



Oscillation

-Press to start / stop oscillating



Power ON/OFF

-Turn on / Standby mode

Using Your Fan Operation and Functions

Power ON/OFF

Fan Speed -



Timer

(Press repeatedly to select 0-9H timer)

Fan Speed +

Fan Speed

Oscillation

Image: Remote control and fan operation. This image displays the remote control with labels for each button: Power ON/OFF, Fan Speed -, Fan Speed +, Oscillation, and Timer. It also shows the corresponding icons on the fan's control panel.

- **Power ON/OFF ():** Turns the fan on or off.
- **Fan Speed + (+):** Increases the fan speed.
- **Fan Speed - (-):** Decreases the fan speed.
- **Oscillation ():** Activates or deactivates the 90° horizontal oscillation.
- **Timer ():** Press repeatedly to select a timer setting from 0 to 9 hours. The fan will automatically turn off after the set time.

Adjusting Fan Height and Tilt:

- **Height Adjustment:** Loosen the height adjustment knob on the stand pole, adjust to the desired height, and then securely tighten the knob.
- **Tilt Adjustment:** Manually tilt the fan head up or down to direct airflow.

90° Horizontal Oscillation



Image: 90° Horizontal Oscillation. This image visually represents the fan's ability to oscillate horizontally, distributing air across a wider area.

MAINTENANCE AND CLEANING

WARNING: Always unplug the fan from the power outlet before cleaning or performing any maintenance.

- **Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Grill and Blade Cleaning:** Periodically, dust may accumulate on the fan blades and grills. To clean, carefully remove the front grill (refer to assembly instructions in reverse). Wipe the blades and grills with a soft, dry or slightly damp cloth. Ensure all parts are completely dry before reassembling and operating the fan.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.



Image: Durable Materials. This image highlights the construction materials of the fan, showing the outer frame (ABS/PP/Metal), internal components, and AS plastic blades, indicating their durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power cord not securely plugged in.	Ensure the fan is plugged into a working electrical outlet. Check the power cord connection.
Fan makes unusual noise.	Loose parts. Obstruction in fan blades.	Unplug the fan and check for any loose components. Unplug the fan and carefully remove any obstructions from the blades or grill.
Fan oscillation is not working.	Oscillation function is not activated.	Press the oscillation button on the control panel or remote control.

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the signal path.

SPECIFICATIONS

Feature	Detail
Model Name	14.5 Inch Pedestal Stand Fan
Brand	HealSmart
Electric Fan Design	Floor Fan
Power Source	Corded Electric
Product Dimensions	17"D x 19"W x 7.5"H
Wattage	32 watts
Voltage	120V
Number of Blades	5
Control Method	Remote
Number of Power Levels	12
Oscillation	90° Horizontal
Timer Function	0-9 Hours
Remote Control Distance	Up to 16.4 ft
Indoor/Outdoor Usage	Indoor
Item Weight	15.22 pounds

WARRANTY AND CUSTOMER SUPPORT

HealSmart products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact HealSmart customer service. For assistance, please visit the official HealSmart website or contact their customer support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question