

[Manuals.plus](#) /

> [TRIUMPHKEY](#) /

> TRIUMPHKEY 120x60cm Computer Desk with Monitor Shelf and Storage, Black User Manual

TRIUMPHKEY TRIUMPHKEY

TRIUMPHKEY 120x60cm Computer Desk with Monitor Shelf and Storage, Black

User Manual

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Limits:** Respect the manufacturer's recommended weight and height limits for the monitor and all storage areas. Overloading can cause instability and damage.
- **Assembly:** Ensure correct desk assembly by following the detailed instructions provided. Do not skip steps or use unauthorized parts.
- **Stability:** For enhanced safety, especially in households with children or pets, consider securing the desk to the wall or floor using appropriate anchoring hardware (not included) according to installation instructions.
- **Placement:** Place the desk on a level, stable surface. Avoid placing it near heat sources, direct sunlight, or in damp environments.
- **Electrical Safety:** If the desk includes an integrated power outlet, ensure it is connected to a properly grounded electrical source. Do not overload the outlet.

2. PRODUCT OVERVIEW

The TRIUMPHKEY 120x60cm Computer Desk is designed for optimal functionality and space utilization. It features a multi-tiered storage system, an ergonomic monitor shelf, and a robust construction suitable for various uses.



Figure 1: Overall view of the TRIUMPHKEY Computer Desk, showcasing its monitor shelf, top storage, and under-desk compartments.

Key Features:

- **3-Layer Storage Structure:** Provides ample space for books, game controllers, office supplies, and a computer host.
- **Ergonomic Monitor Stand:** Helps maintain proper posture and includes a built-in power outlet for convenient device charging.
- **Spacious Desktop:** A 120x60cm surface accommodates most work or gaming setups while maintaining a compact footprint.
- **Stable Construction:** Durable metal legs and a wooden top ensure stability and longevity.
- **Versatile Use:** Suitable as an office desk, work table, or gaming station.

3. SETUP AND ASSEMBLY

This section provides step-by-step instructions for assembling your TRIUMPHKEY Computer Desk. It is recommended to have a second person assist with assembly.

3.1. Package Contents

Before starting, verify that all components are present and undamaged. Refer to the included parts list in your packaging.

3.2. Assembly Steps

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Base Frame:** Connect the metal leg frames using the provided screws and tools. Ensure all connections are secure but do not overtighten initially.
3. **Attach Desktop:** Place the wooden desktop onto the assembled base frame. Align the pre-drilled holes and secure the desktop with screws.
4. **Install Monitor Shelf:** Attach the monitor shelf supports to the main frame, then place the monitor shelf on top and secure it.
5. **Install Top Storage Shelf:** Mount the top storage shelf to the upper frame structure.
6. **Install Bottom Storage Shelves:** Secure the two bottom storage shelves to the lower sections of the metal frame.
7. **Final Tightening:** Once all components are in place, systematically tighten all screws to ensure maximum stability. Do not overtighten.
8. **Cable Management:** Utilize any integrated cable management features to organize wires and cables for a tidy workspace.



Figure 2: Detailed dimensions of the desk, including desktop height, monitor shelf height, and storage compartment sizes.

For detailed visual instructions, please refer to the assembly diagram included in your product packaging.

4. OPERATING INSTRUCTIONS

Your TRIUMPHKEY Computer Desk is designed for straightforward use. Here are some guidelines for optimal operation:

4.1. Utilizing Storage Features

- **Top Shelf:** Ideal for smaller items such as books, decorative pieces, game controllers, or charging docks.
- **Monitor Shelf:** Designed to elevate your monitor to an ergonomic viewing height. The integrated power outlet allows for convenient charging of devices like phones or tablets.
- **Under-Desk Shelves:** The two lower shelves are perfect for storing a computer tower, gaming console, printer, or other larger peripherals.



Figure 3: The top shelf provides organized storage for smaller items, keeping your main desktop clear.



Figure 4: Dedicated under-desk compartments offer ample space for computer towers or gaming consoles.

4.2. Ergonomic Use

The monitor stand is designed to promote a healthier posture. Position your monitor so the top of the screen is at or slightly below eye level when you are seated comfortably. This helps reduce neck and eye strain.



Figure 5: Proper ergonomic setup with the monitor stand, promoting a comfortable and healthy working posture.

5. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TRIUMPHKEY Computer Desk.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wooden top.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Avoid Overloading:** Do not exceed the recommended weight capacity for any part of the desk, especially the shelves and monitor stand.

6. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Loose screws; uneven floor; incorrect assembly.	Check and tighten all screws. Ensure the desk is on a level surface; use shims if necessary. Review assembly instructions.
Parts do not fit together.	Incorrect orientation of parts; manufacturing defect.	Double-check the assembly diagram for correct part orientation. If parts are defective, contact customer support.
Integrated power outlet not working.	Not plugged in; circuit breaker tripped; faulty outlet.	Ensure the desk's power cord is securely plugged into a working wall outlet. Check your home's circuit breaker. If the issue persists, contact customer support.

7. SPECIFICATIONS

Attribute	Detail
Brand	TRIUMPHKEY
Model Number	TRIUMPHKEY
Color	Black
Overall Product Dimensions (L x W x H)	120 x 60 x 162 cm
Desktop Dimensions (L x W x H)	120 x 60 x 75 cm (Height from floor)
Item Weight	27.4 Kilograms
Material	Engineered Wood (Top), Metal (Frame)
Finish Type	Varnished or Lacquered
Special Feature	Monitor Stand, Integrated Power Outlet (if applicable)

8. WARRANTY AND SUPPORT

8.1. Warranty Information

This product is covered by standard legal guarantees as per local consumer protection laws. Additionally, a 30-day return policy is typically offered from the date of purchase. Please retain your proof of purchase for any warranty claims.

8.2. Customer Support

For assembly assistance, missing parts, or any other inquiries, please contact TRIUMPHKEY Specialized Customer Support. You can typically find contact information on the seller's page or within your product packaging.

For online support, visit the [TRIUMPHKEY Store on Amazon](#).