

Tefal Cy851130

Tefal Cook4me Cy851130 Smart Multicooker Instruction Manual

Your guide to safe and efficient use of your Cook4me multicooker.

INTRODUCTION

Thank you for choosing the Tefal Cook4me Cy851130 Smart Multicooker. This appliance is designed to simplify your cooking experience with its intelligent features and versatile cooking modes. Please read this manual carefully before first use to ensure proper operation, maintenance, and safety.

The Cook4me Cy851130 combines the functions of a pressure cooker, steamer, and slow cooker, offering a wide range of pre-programmed recipes and manual cooking options. Its intuitive interface and smart connectivity aim to make meal preparation effortless.



Image: The Tefal Cook4me Cy851130 multicooker displayed on a kitchen counter, surrounded by several plates of diverse, freshly prepared meals, showcasing its versatility in cooking.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- Always ensure the lid is properly closed and locked before operating the pressure cooking function.
- Do not fill the inner pot above the MAX fill line to prevent overflow and ensure safe pressure release.
- Keep hands and face clear of the steam release valve during and after cooking, as hot steam can cause burns.
- Do not immerse the main unit in water or any other liquid. Clean with a damp cloth only.
- This appliance is for household use only. Do not use outdoors.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Children should be supervised to ensure that they do not play with the appliance.

PRODUCT OVERVIEW

The Tefal Cook4me Cy851130 is an advanced multicooker designed for convenience and versatility. Familiarize yourself with its components:



Image: The Tefal Cook4me Cy851130 multicooker shown alongside its removable inner pot and steam basket accessory. This illustrates the main components that come with the appliance, ready for assembly and use.

Main Components:

- **Main Unit:** Houses the heating element, control panel, and safety mechanisms.
- **Removable Inner Pot:** Non-stick coated pot for cooking. Dishwasher safe.
- **Lid:** Features a pressure release valve, safety lock, and sealing gasket.
- **Control Panel:** Intuitive display with touch controls and a central dial for navigation.
- **Steam Basket:** Accessory for steaming food.
- **Condensation Collector:** Gathers excess moisture during cooking.

SETUP AND FIRST USE

Unpacking:

- Carefully remove all components from the packaging.
- Remove any protective films or stickers from the appliance.
- Retain packaging for future storage or transport if needed.



Image: The retail packaging box for the Tefal Cook4me Cy851130 multicooker. This image shows the product's branding and key features as presented on its original packaging.

Before First Use:

1. **Clean Components:** Wash the inner pot, steam basket, and lid gasket with warm, soapy water. Rinse thoroughly and dry completely. The inner pot and steam basket are dishwasher safe.
2. **Wipe Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Install Condensation Collector:** Attach the condensation collector to the back of the appliance.
4. **Place Inner Pot:** Insert the clean, dry inner pot into the main unit. Ensure it sits correctly.
5. **Position Appliance:** Place the Cook4me on a stable, flat, heat-resistant surface, away from walls and cabinets to allow for proper ventilation.
6. **Plug In:** Connect the power cord to the appliance and then to a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Cook4me Cy851130 offers various cooking modes and an intuitive interface.



Image: The Tefal Cook4me Cy851130 multicooker with its lid open, revealing the inner pot. A person is shown preparing ingredients on a cutting board next to the appliance, demonstrating its readiness for cooking.

Basic Operation:

1. **Add Ingredients:** Place your desired ingredients into the inner pot. Ensure liquid levels are within the MIN and MAX markings.
2. **Close Lid:** Place the lid on the main unit and rotate it clockwise until it locks into place. Ensure the steam release valve is in the correct position for your chosen cooking method (e.g., sealed for pressure cooking).
3. **Select Cooking Mode:**
 - **Recipes:** Browse through the 150 pre-programmed recipes using the control panel. Select a recipe, and the Cook4me will guide you step-by-step.
 - **Manual Mode:** Choose from various cooking methods like pressure cook, steam, brown, simmer, slow cook, or reheat. Adjust time and temperature as needed.
 - **Ingredients:** Select an ingredient, and the Cook4me will suggest the appropriate cooking time and method.
4. **Start Cooking:** Press the 'Start' button to begin the cooking process. The appliance will preheat, cook, and then often switch to a 'Keep Warm' function automatically.

5. **Pressure Release (if applicable):** For pressure cooking, once the cooking cycle is complete, carefully release the pressure. Refer to the recipe or manual mode instructions for natural or quick pressure release methods. Always use a utensil to turn the steam release valve to avoid direct contact with steam.
6. **Serve:** Once pressure is fully released and the lid can be opened, carefully remove the lid and serve your meal.



Image: The Tefal Cook4me Cy851130 multicooker on a kitchen counter, displaying "Bon Appetit" on its screen. Several plates of freshly cooked food are arranged around it, indicating a successful cooking session.

Using the App:

The Cook4me Cy851130 may connect to a companion app for enhanced features, recipe updates, and remote control. Refer to the app's instructions for pairing and usage.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your Cook4me multicooker.

After Each Use:

- **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Inner Pot:** Remove the inner pot and wash it with warm, soapy water or place it in the dishwasher. Avoid abrasive cleaners or scouring pads.
- **Lid:** Disassemble the lid components (sealing gasket, steam release valve, anti-clog shield) if possible, and wash them with warm, soapy water. Rinse and dry thoroughly. Ensure the gasket is correctly reinstalled.
- **Condensation Collector:** Empty and clean the condensation collector.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or immerse in water.

Storage:

Ensure all parts are clean and dry before storing. Store the appliance in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Cook4me Cy851130, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; damaged cord.	Check power cord connection; try a different outlet; contact customer service if cord is damaged.
Lid cannot be closed or opened.	Inner pot not correctly seated; pressure inside the cooker.	Ensure inner pot is properly placed; release all pressure before attempting to open.
Steam leaks from the lid during pressure cooking.	Sealing gasket improperly installed or damaged; food debris on gasket; lid not properly closed.	Check and reposition gasket; clean gasket and lid rim; ensure lid is fully locked. Replace gasket if damaged.
Food is undercooked or overcooked.	Incorrect cooking time/temperature; insufficient liquid; recipe variations.	Adjust cooking time/temperature; ensure adequate liquid for pressure cooking; refer to recipe guidelines.
Error code displayed.	Specific internal issue.	Note the error code and consult the full user manual online or contact Tefal customer support.

If the problem persists after trying these solutions, please contact Tefal customer support for assistance.

SPECIFICATIONS

- **Model:** Cy851130
- **Brand:** Tefal
- **Capacity:** 6 Liters
- **Material:** Stainless Steel
- **Control Method:** Touch, App

- **Operating Mode:** Automatic
- **Dishwasher Safe:** Yes (Inner pot, steam basket, lid components)
- **Pre-programmed Recipes:** 150
- **ASIN:** B0D846BJ8J
- **GTIN:** 03045386381869

WARRANTY AND CUSTOMER SUPPORT

Tefal products are manufactured to high-quality standards. For information regarding your product's warranty, please refer to the warranty card included in your product packaging or visit the official Tefal website.

For technical assistance, troubleshooting beyond this manual, or to order replacement parts, please contact Tefal customer support. Contact details can typically be found on the Tefal website or in your product's documentation.

Online Resources: www.tefal.com