

[Manuals.plus](#) /

› [Teamson Kids](#) /

› Teamson Kids Wooden Multiactivity Table (Model TD-13955C) Instruction Manual

Teamson Kids TD-13955C

Teamson Kids Wooden Multiactivity Table (Model TD-13955C) Instruction Manual

Brand: Teamson Kids | Model: TD-13955C

INTRODUCTION

This instruction manual provides essential information for the assembly, operation, and maintenance of the Teamson Kids Wooden Multiactivity Table (Model TD-13955C). This children's table features a reversible tabletop with a building block baseplate and a dry-erase surface, along with integrated storage. Designed for creative play and learning, this durable wooden table is easy to clean and suitable for young users.

SAFETY INFORMATION

- For ages 3 years and up.
- Adult supervision is recommended during use.
- Contains small parts. Not suitable for children under 3 years due to choking hazard.
- Ensure all screws and fasteners are securely tightened before use and periodically check for looseness.
- Do not allow children to climb on the table or chairs.
- Place the table on a flat, stable surface to prevent tipping.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. Refer to the packaging for a detailed list of parts. Typically includes:

- Wooden Multiactivity Table frame
- Reversible tabletop (one side building block baseplate, one side dry-erase)
- Two chairs
- Assembly hardware (screws, dowels, etc.)

- Assembly instructions sheet

SETUP AND ASSEMBLY

Assembly is required for this product. Please follow the included assembly instructions carefully. It is recommended to assemble the table and chairs on a soft, clean surface to prevent scratches.

1. Unpack all components and lay them out. Verify against the parts list.
2. Assemble the table frame according to the diagrams in the separate assembly guide. Ensure all connections are secure.
3. Assemble the two chairs following the provided instructions.
4. Once assembled, place the reversible tabletop into the designated slot on the table frame.
5. Ensure the table and chairs are stable before allowing children to use them.

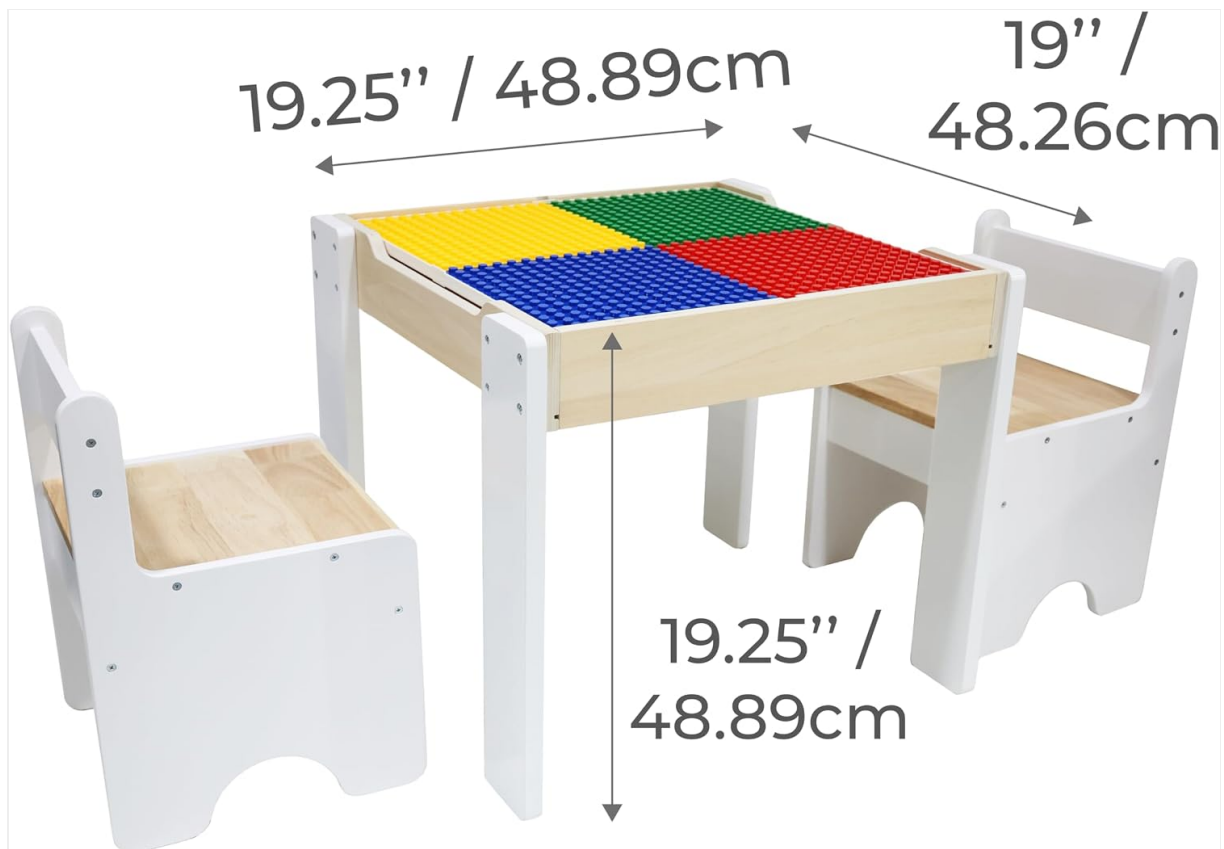


Image: Dimensions of the assembled table and chairs. Table dimensions are approximately 19.25" L x 19.0" W x 19.25" H.

OPERATING INSTRUCTIONS

Using the Reversible Tabletop:

The tabletop is designed for versatility, offering two distinct play surfaces.

- **Building Block Baseplate Side:** This side features a textured surface compatible with most major brands of building blocks. Simply place the tabletop with the baseplate facing up for construction activities.
- **Dry-Erase Surface Side:** Flip the tabletop over to reveal a smooth, white dry-erase surface. Use dry-erase markers for drawing, writing, and other creative endeavors. Always use dry-erase markers and erasers to prevent damage.



Image: Child engaged in building block play on the table's baseplate side.



Image: Child drawing on the table's dry-erase surface.

Accessing Under-Table Storage:

The table features a convenient storage compartment located directly beneath the reversible tabletop.

1. To access storage, carefully lift the reversible tabletop from its seated position.
2. The compartment can hold art supplies, blocks, small toys, or other items.
3. When finished, gently place the tabletop back into its slot, ensuring it is flush with the table frame.


Dry Erase
Marker Top



Building Block
Baseplate Top



Underneath
Storage

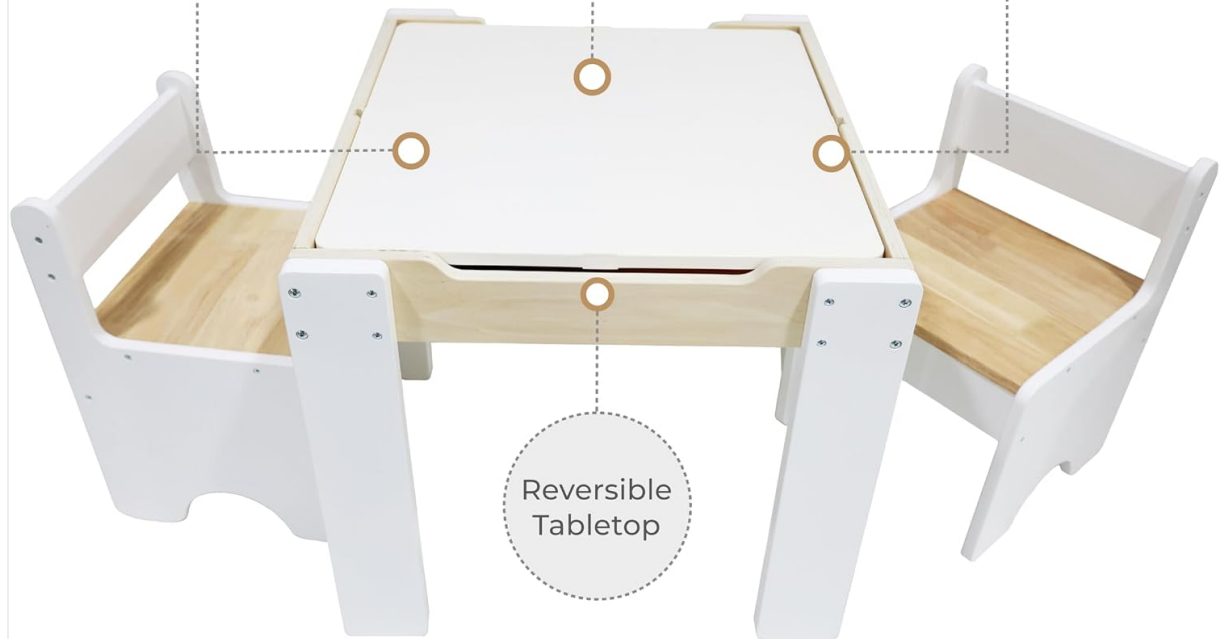

Reversible
Tabletop

Image: Visual guide showing the reversible tabletop and the spacious storage underneath.



Image: Close-up of the table's storage area, showing its depth and capacity.

Integrated Book/Paper Slots:

The table frame includes slots on both sides for storing books, papers, or thin activity boards, keeping them easily accessible.

Your browser does not support the video tag.

Video: Demonstration of the table's features, including the reversible tabletop, under-table storage, and side book slots. This video highlights the versatility of the 4-in-1 kids table and chairs set.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the table and chairs with a damp cloth and mild soap. Dry immediately. Avoid abrasive cleaners or harsh chemicals.
- **Dry-Erase Surface:** Use only dry-erase markers. Clean with a dry-erase eraser or a soft cloth. For stubborn marks, use a dry-erase board cleaner.
- **Wood Care:** The natural wood components can be cleaned with a soft, damp cloth. Avoid prolonged exposure to moisture.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as necessary to maintain stability and safety.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table/Chairs are wobbly.	Loose fasteners. Uneven surface.	Check and tighten all screws. Move to a flat, even surface.
Dry-erase surface has ghosting/stains.	Non-dry-erase markers used. Old marker residue.	Ensure only dry-erase markers are used. Clean with a dry-erase board cleaner.
Tabletop does not sit flush.	Obstruction in the storage compartment. Incorrect placement.	Remove any items from the storage area that might be blocking the tabletop. Re-align the tabletop carefully.

SPECIFICATIONS

- **Model Number:** TD-13955C
- **Brand:** Teamson Kids
- **Material:** Engineered Wood
- **Color:** White
- **Item Dimensions (Table):** 19.25" L x 19.0" W x 19.25" H (48.89 cm L x 48.26 cm W x 48.89 cm H)
- **Item Weight:** 24.91 Pounds (11.3 kg)
- **Included Components:** Building block baseplate (integrated into reversible tabletop)
- **Required Assembly:** Yes
- **UPC:** 810136542400

WARRANTY INFORMATION

This product comes with a 30-day warranty against manufacturer defects. For warranty claims or further details, please contact Teamson Kids customer service.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Teamson Kids Wooden Multiactivity Table, please contact our customer support team. Refer to the product packaging or the Teamson Kids official website for contact details.

Manufacturer: Teamson US Inc.