

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [JOYROOM](#) /

> [JOYROOM Portable Charger for Apple Watch 10, 2500mAh Fast Charging iWatch Charger Keychain USB C Cable, Magnetic Wireless Travel for Apple Watch Series 9/8/7/6/SE/5/4/3/2/Nike/Ultra/Ultra 2-Pink](#)

JOYROOM JR-W09

JOYROOM Portable Charger for Apple Watch User Manual

Model: JR-W09 | Brand: JOYROOM

PRODUCT OVERVIEW

The JOYROOM Portable Charger for Apple Watch is a compact and powerful wireless charging solution designed for convenience on the go. Featuring a built-in 2500mAh battery and a versatile 2-in-1 hybrid input/output USB-C cable, it provides reliable power for your Apple Watch and other compatible devices.

Key features include:

- **2500mAh Battery:** Offers multiple charges for Apple Watch Series 9-2 and Ultra Series.
- **Wireless Charging:** Magnetic alignment ensures stable and efficient charging for your Apple Watch.
- **Built-in USB-C Cable:** For recharging the power bank and providing emergency charge to other USB-C devices.
- **Real-time Battery Display:** Digital screen shows current battery percentage.
- **Keychain Design:** Ultra-compact and convenient for travel and daily carry.



Figure 1: The JOYROOM Portable Charger wirelessly charging an Apple Watch, displaying 86% battery. The integrated USB-C cable is visible.

SETUP

Initial Charging of the Power Bank

Before first use, it is recommended to fully charge your JOYROOM Portable Charger.

1. Locate the built-in USB-C cable on the side of the charger.
2. Unfold the USB-C cable and plug it into a compatible USB-C power adapter (not included) or a USB-C port on a computer.
3. The digital display will show the charging progress. The charger is fully charged when the display shows 100%.



Figure 2: The portable charger being recharged using its built-in USB-C cable connected to a wall adapter. An Apple Watch is also shown charging on the device.

OPERATING INSTRUCTIONS

Charging Your Apple Watch

1. Ensure the portable charger has sufficient battery life (check the digital display).
2. Place your Apple Watch onto the magnetic charging pad of the JOYROOM Portable Charger. The watch will automatically align.
3. The Apple Watch screen will indicate that it is charging. The portable charger's display will show its remaining battery percentage.
4. Remove your Apple Watch once it is fully charged. The charger will automatically stop charging when the watch is full or disconnected.

Compact Yet Powerful

Wireless Fast 3~4 Charges for Apple Watch



Figure 3: The portable charger with an Apple Watch placed on its charging surface, highlighting its 2500mAh capacity and compact design.

Using the Built-in USB-C Cable for Other Devices

The integrated USB-C cable can also be used to provide an emergency charge to other USB-C compatible devices, such as smartphones or earbuds.

1. Unfold the built-in USB-C cable.
2. Plug the USB-C connector into the charging port of your compatible device.
3. The portable charger will begin to supply power. Note that the output for other devices is 5 watts, suitable for a small charge boost.



Figure 4: The portable charger connected to an iPhone via its built-in USB-C cable, demonstrating its capability to provide emergency power to other devices.

MAINTENANCE

Cleaning

To maintain the performance and appearance of your charger:

- Disconnect the charger from all power sources and devices before cleaning.
- Wipe the surface with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.

Storage

When not in use for extended periods:

- Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid storing in highly humid environments.
- It is advisable to charge the power bank to about 50-70% before long-term storage to preserve battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Charger not turning on/displaying battery level.	Battery is completely depleted.	Connect the charger to a power source using the built-in USB-C cable and allow it to charge for a few minutes.

Problem	Possible Cause	Solution
Apple Watch not charging wirelessly.	Incorrect placement of Apple Watch; Charger battery is low; Foreign objects on charging pad.	Ensure the Apple Watch is centered on the magnetic pad; Recharge the portable charger; Remove any debris from the charging surface.
Slow charging of Apple Watch.	Environmental factors (e.g., high temperature); Watch case interference.	Ensure charging in a cool environment; Remove any thick or metallic watch cases.
Built-in USB-C cable not charging other devices.	Device not compatible with USB-C input; Cable not fully inserted; Charger battery low.	Verify device compatibility; Ensure cable is securely connected; Recharge the portable charger.

SPECIFICATIONS

Brand: JOYROOM

Model Number: JR-W09

Battery Capacity: 2500mAh

Product Dimensions: 4 x 2 x 0.75 inches

Item Weight: 2.47 ounces

Connectivity: Wireless (for Apple Watch), USB Type C (for power bank recharge and other devices)

Special Features: Ultra Compact, Built-in Type-C Cable, Keychain Storage, Real-time Battery Display

Compatible Apple Watch Series: 2, 3, 4, 5, 6, SE, 7, 8, 9, 10, Ultra, Ultra 2, Nike

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact JOYROOM customer service directly. You may also visit the official JOYROOM website for further assistance.

The product typically comes with a standard return policy of 30 days for refund or replacement, as per retailer terms.

For online support, you can visit the [JOYROOM Store on Amazon](#).