

ROBUD RB-WCF05

ROBUD Wooden Play Kitchen Set Instruction Manual

Model: RB-WCF05

Brand: ROBUD

INTRODUCTION

Thank you for choosing the ROBUD Wooden Play Kitchen Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Please read these instructions carefully before use and retain them for future reference.



Image: The ROBUD Wooden Play Kitchen Set in a bean green color, featuring a child interacting with the various kitchen components.

Safety Information

- Suitable for children aged 3 years and above.
- Contains small parts; do not ingest to avoid choking hazards.
- Do not climb on the product to prevent falling and injury.
- Adult supervision is recommended during play.
- Ensure all parts are securely fastened during assembly and periodically check for loose components.

PACKAGE CONTENTS

The ROBUD Play Kitchen Set includes the main kitchen unit and various accessories to enhance playtime. Please verify all components are present before assembly.

Accessories



X1



X1



X2



X2



X1



X2



X1



X1



X1

Image: Detailed view of the included kitchen accessories: a pot, a pan, two plates, two cups, two ice cubes, a whisk, a slotted spoon, and a spatula.

Included Accessories:

- Play Kitchen Unit (main structure)
- Refrigerator
- Ice Maker
- Coffee Machine
- Juicer
- Microwave
- Oven
- Dishwasher
- Kitchen Utensils (e.g., whisk, spatula, slotted spoon)
- Pots and Pans
- Coffee Cups and Plates

SETUP AND ASSEMBLY

The ROBUD Play Kitchen Set is designed for easy assembly. Follow the clear instructions provided in the separate assembly guide included with your product. Ensure all parts are correctly oriented and securely fastened.

1. Unpack all components and verify against the parts list in the assembly guide.
2. Assemble the main kitchen frame according to the step-by-step diagrams.
3. Attach all appliances (refrigerator, oven, microwave, dishwasher) and features (sink, coffee machine, ice maker).
4. Secure all handles, knobs, and decorative elements.
5. Place the kitchen in a stable, flat location away from heat sources or direct sunlight.



Image: The play kitchen demonstrating its ample storage space within the refrigerator and lower cabinets, designed to help organize play items.

OPERATING INSTRUCTIONS

The ROBUD Play Kitchen Set features multiple interactive elements for realistic play. Below are general instructions for using each component.



Multifunctional



Image: A collage highlighting the microwave, coffee maker, juicer, refrigerator, ice maker, and oven features of the play kitchen.



Multifunctional



Image: A collage showcasing the stoves, sink with faucet, dishwasher, and a storage area with a fabric curtain.

General Operation:

- **Stoves:** Turn the vocal knobs to simulate cooking sounds. Place pots and pans on the stovetop.
- **Oven:** Open the oven door to place play food inside. The knobs can be turned to simulate temperature settings.
- **Microwave:** Open the microwave door and place play food inside. The keypad is for imaginative play.
- **Refrigerator:** Open the refrigerator door to store play food items.
- **Ice Maker:** Press the dispenser to release play ice cubes.
- **Coffee Machine & Juicer:** Use the buttons and cups to simulate brewing coffee or making juice.
- **Sink:** Turn the faucet handles to simulate water flow for washing play dishes or vegetables.
- **Dishwasher:** Open the dishwasher door to place play dishes inside for cleaning.



Image: Visual examples of interactive play, including using the coffee maker, ice dispenser, sink, utensil storage, stovetop, dishwasher, and oven.

Product Demonstration Videos:

Your browser does not support the video tag.

Video: A demonstration of the 'Play kitchen WCF05' features, showcasing various interactive elements and overall design.

Your browser does not support the video tag.

Video: A detailed review highlighting the various features and design aspects of the kitchen set.

MAINTENANCE

Regular maintenance will ensure the longevity and cleanliness of your ROBUD Play Kitchen Set.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the wood finish.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary.

- **Storage:** Store the play kitchen in a dry environment, away from extreme temperatures or humidity, to prevent warping or damage to the wood.
- **Damage:** If any part becomes damaged, discontinue use immediately and contact customer support for replacement parts or advice.

Specification

Weight: 37.5 lbs (16 kg)

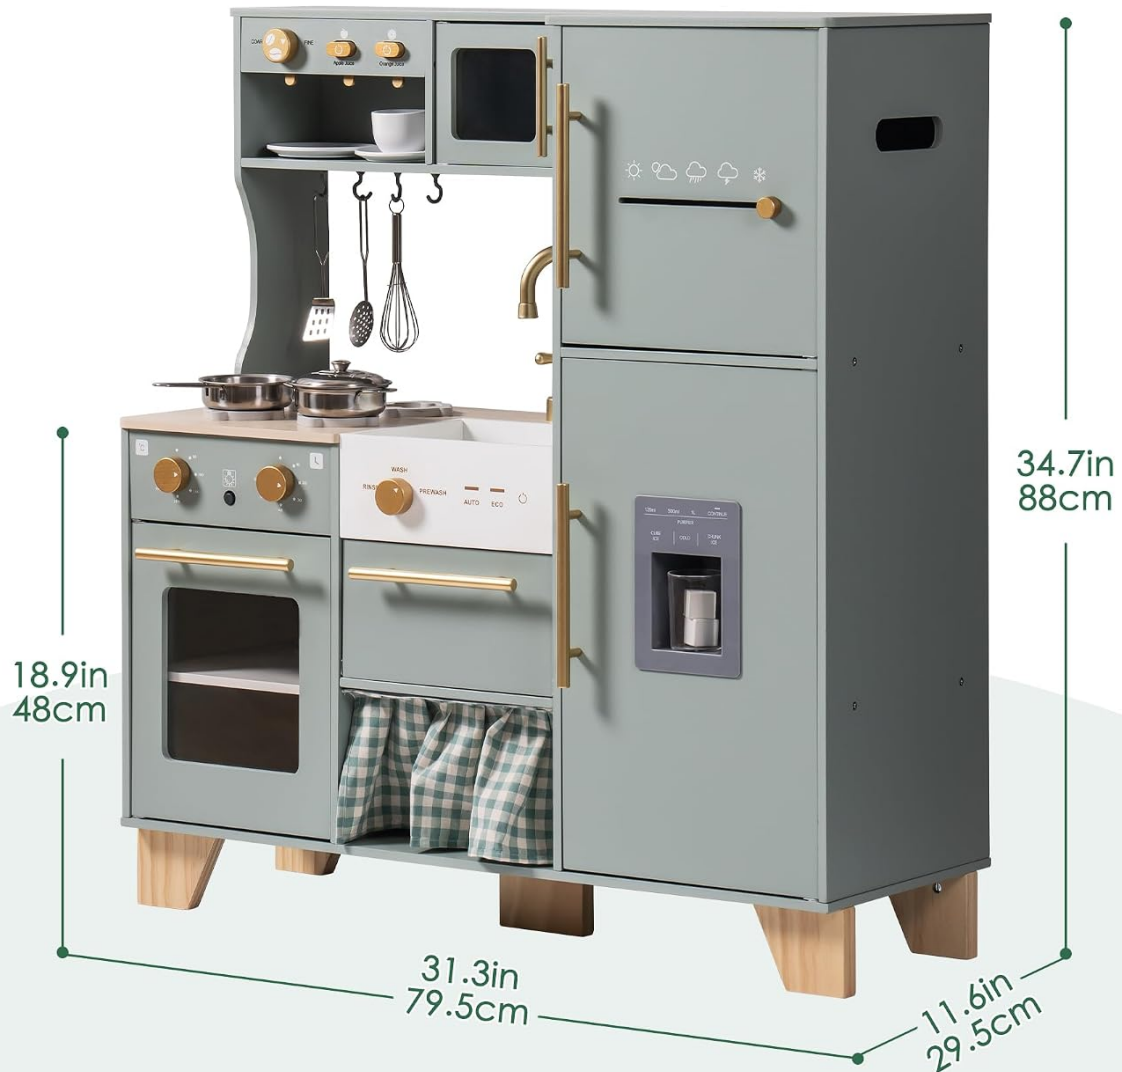


Image: Features highlighting the kid-friendly design, including smooth edges for safety, vocal knobs for interactive play, lightweight and durable accessories, and a soft color palette.

TROUBLESHOOTING

Most issues with the play kitchen can be resolved with simple checks.

- **Loose Parts:** If any part feels loose, gently tighten the corresponding screw. Do not overtighten.
- **Sticking Doors/Drawers:** Ensure no foreign objects are obstructing the movement. Check for proper alignment during assembly.
- **Missing Accessories:** Refer to the 'Package Contents' section. If an item is missing upon unboxing, contact customer support.

SPECIFICATIONS

KIDS-FRIENDLY
DESIGN



Image: A visual representation of the play kitchen's dimensions, indicating its width, depth, and height.

Feature	Detail
Model Number	RB-WCF05
Brand	ROBUD
Material Type	Wood
Dimensions (W x D x H)	31.3 x 11.6 x 34.7 inches (79.5 x 29.5 x 88 cm)
Item Weight	37.5 Pounds (16 kg)
Recommended Age	3 years and up
Color	Bean Green

WARRANTY AND SUPPORT

ROBUD is committed to providing high-quality products. For any questions, concerns, or support needs regarding your play kitchen set, please refer to your purchase documentation for specific warranty details or contact ROBUD customer service directly.

Please visit the official ROBUD website or your retailer's support page for the most up-to-date contact information.

© 2026 ROBUD. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question