

[Manuals.plus](#) /

› [arungo](#) /

› arungo MP10 MP3 Player User Manual

arungo MP10

arungo MP10 MP3 Player User Manual

Model: MP10

1. INTRODUCTION

Thank you for choosing the arungo MP10 MP3 Player. This device is designed to provide a portable and versatile audio experience, featuring HiFi lossless sound, a built-in speaker, voice recording, e-book reading, and FM radio functions. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.



Figure 1: arungo MP10 MP3 Player

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x arungo MP10 MP3 Player
- 1 x 128GB TF Card (pre-inserted)
- 1 x Earphone
- 1 x Charging Cable
- 1 x User Manual (this document)



Figure 2: Package Contents

3. SETUP

3.1. Inserting the TF Card

The 128GB TF card is typically pre-inserted into the player. If you need to insert or replace it, locate the TF card slot on the side of the device. Gently push the card into the slot until it clicks into place. To remove, push the card again until it springs out.

Important: It is recommended to format the memory card on a computer before initial use to ensure optimal performance and compatibility.



Figure 3: TF Card Insertion

3.2. Charging the Device

Connect the provided charging cable to the MP3 player's charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The battery icon on the screen will indicate charging status. When the battery icon turns stable green, the device is fully charged. A full charge typically takes 3-4 hours.



Figure 4: Charging the MP3 Player

3.3. Transferring Music Files

To transfer music or other files, connect the MP3 player to your computer using the charging cable. The player will appear as a removable disk drive. Drag and drop your desired files into the appropriate folders on the player's memory card. Ensure the memory card is inserted before transferring files.

4. OPERATING INSTRUCTIONS

4.1. Button Guide

Familiarize yourself with the player's buttons for easy navigation:



Figure 5: Button Functions

- **M (Menu/Up):** Short press to enter the menu. Long press to return to the main interface.
- **◀◀ (Left/Previous):** When playing music, short press to select the previous music file. Long press to rewind the music.
- **▶▶ (Confirm/Play/Pause):** Short press to confirm selection or play/pause music. Long press to turn the player on or off.
- **▶▶ (Right/Next):** When playing music, short press to select the next music file. Long press to fast forward the music.
- **VOL (Volume/Down/Return):** Short press to return to the previous step. Long press to enter the volume adjustment menu, then use ◀◀ or ▶▶ to adjust.

4.2. Main Functions Overview

The arungo MP10 offers several functions accessible from the main menu:

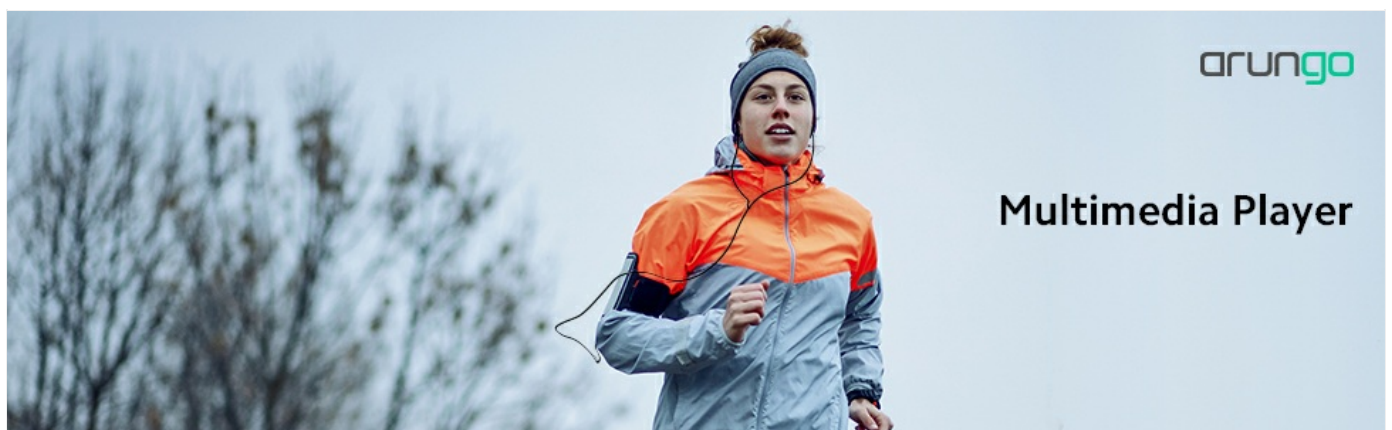


Figure 6: Main Menu Functions

- **Music:** Play audio files (MP3, WMA, APE, FLAC, WAV, AAC).
- **Videos:** Play video files (specific formats may apply).
- **FM Radio:** Listen to FM radio stations.
- **Picture:** View image files.
- **Record:** Use the built-in voice recorder.
- **E-book:** Read text files.

- **Files:** Browse and manage files on the memory card.
- **Games:** Access pre-loaded games.
- **Settings:** Adjust device preferences.

4.3. Using the FM Radio

To use the FM radio function, ensure earphones are connected to the player, as they act as the antenna. Navigate to the 'FM Radio' option from the main menu. You can then scan for stations, save presets, and adjust the frequency range.



Figure 7: FM Radio Interface

5. MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the screen and body with a soft, dry cloth. Do not use abrasive cleaners.
- Avoid extreme temperatures. Store the player in a cool, dry place.
- Do not attempt to disassemble or repair the device yourself. This may void the warranty.
- Regularly back up important files from the memory card to prevent data loss.

6. TROUBLESHOOTING

If you encounter issues with your arungo MP10 MP3 Player, please refer to the following common solutions:

Problem	Possible Solution
Device does not turn on	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a soft reset by holding the power button for an extended period.
Cannot transfer files to the device	Check if the USB cable is properly connected. Ensure the TF card is correctly inserted and formatted. Try connecting to a different USB port or computer.
"Format error" message when playing music/viewing pictures	The file format may not be supported. Refer to the specifications for supported formats. The memory card might also require reformatting (back up data first).
Poor sound quality	Check earphone connection. Ensure the audio file is not corrupted. Adjust equalizer settings if available.
FM Radio not working	Ensure earphones are plugged in, as they serve as the antenna. Try rescanning for stations.

7. SPECIFICATIONS

Feature	Detail
Brand	arungo
Model Name	MP10
Memory Storage Capacity	128 GB (via TF Card)
Screen Size	1.8 Inches
Display Technology	LCD
Connectivity Technology	Aux (for earphones)
Special Feature	Built-In Speaker
Supported Audio Formats	MP3, WMA, APE, FLAC, WAV, AAC
Battery Average Life	Up to 10 Hours
Item Dimensions (D x W x H)	0.28"D x 1.54"W x 3.54"H

8. WARRANTY

The arungo MP10 MP3 Player comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. For warranty claims, please retain your proof of purchase. Additionally, a 30-day refund/replacement return policy is typically offered through the retailer.

9. SUPPORT

For further assistance, technical support, or inquiries regarding your arungo MP10 MP3 Player, please contact arungo customer service. Refer to the contact information provided with your product packaging or visit the official arungo website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question