



[Manuals.plus](#) /

› [Brother](#) /

› [Brother DCP-L2605DW Laser Printer Instruction Manual](#)

Brother DCP-L2605DW

Brother DCP-L2605DW Laser Printer Instruction Manual

Model: DCP-L2605DW

[Introduction](#) [What's in the](#)

[Box](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Brother DCP-L2605DW Auto Duplex Laser Printer. This multifunction device offers print, scan, and copy capabilities, designed for home and small office environments. Please read this manual thoroughly before operating the printer and keep it for future reference.



Image: The Brother DCP-L2605DW multifunction laser printer, a compact device for printing, scanning, and copying.

2. WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- Brother DCP-L2605DW Laser Printer Unit
- Power Cable
- USB Cable
- Installation CD (for drivers and software)
- Inbox Toner Cartridge (TN-2570XL, approximately 3000 pages yield)

3. SETUP

3.1 Unpacking and Initial Placement

Carefully remove the printer from its packaging. Place the printer on a stable, flat surface with adequate ventilation. Ensure sufficient space around the printer for paper trays and cable connections.

3.2 Toner Cartridge Installation

1. Open the front cover of the printer.
2. Remove the drum unit and toner cartridge assembly from its protective bag.
3. Gently shake the toner cartridge horizontally several times to distribute the toner evenly.
4. Insert the toner cartridge firmly into the drum unit until it locks into place.
5. Slide the drum unit and toner cartridge assembly back into the printer.

6. Close the front cover.

3.3 Loading Paper

1. Pull out the paper tray completely from the printer.
2. Adjust the paper guides to fit the size of the paper you are loading.
3. Load up to 250 sheets of paper (up to 163 GSM) into the tray. Ensure the paper is flat and not curled.
4. Gently push the paper tray back into the printer until it clicks into place.

3.4 Power Connection

Connect the power cable to the printer and then to a grounded electrical outlet. Turn on the printer using the power button.

3.5 Connectivity Options

Your printer supports multiple connectivity methods:

- **USB 2.0:** Connect the printer directly to your computer using the provided USB cable.
- **Ethernet (LAN):** Connect the printer to your network router or switch using an Ethernet cable for wired network access.
- **Wi-Fi (Wireless LAN):** Connect the printer to your wireless network. Follow the on-screen instructions on the printer's LCD display to configure Wi-Fi settings.
- **Wi-Fi Direct:** Allows direct connection from mobile devices without a router. Refer to the printer's LCD menu for Wi-Fi Direct setup.

3.6 Driver and Software Installation

Insert the included Installation CD into your computer's CD-ROM drive and follow the on-screen instructions to install the necessary drivers and software. Alternatively, download the latest drivers from the official Brother support website.

Video: A short overview of the Brother DCP-L2605DW printer, highlighting its features and specifications. This video provides a visual summary of the product's capabilities and design.

4. OPERATING INSTRUCTIONS

4.1 Printing Documents

To print from your computer or mobile device:

- Ensure the printer is powered on and connected to your device or network.
- Open the document or image you wish to print.
- Select **Print** from the application's menu.
- Choose **Brother DCP-L2605DW** as your printer.
- Adjust print settings such as paper size, orientation, and number of copies.
- For **Automatic Duplex Printing (2-sided printing)**, select the duplex option in your printer settings.
- Click **Print**.



Image: Icon representing automatic duplex printing, a feature that allows printing on both sides of the paper automatically.

4.2 Scanning Documents

You can scan documents using the flatbed scanner:

1. Place the document face down on the scanner glass.
2. From your computer, open the Brother ControlCenter software or a compatible scanning application.
3. Select **Scan** and choose your desired scan settings (e.g., resolution, color mode, destination).
4. Initiate the scan. The scanned image will be saved to your specified location.

4.3 Copying Documents

To make copies directly from the printer:

1. Place the document face down on the scanner glass.
2. Use the control panel on the printer to select **Copy**.
3. Adjust settings such as number of copies, enlarge/reduce, and quality.
4. Press the **Start** button to begin copying.

4.3.1 2-in-1 (ID) Copy Function

This feature allows you to copy both sides of an ID card onto a single sheet of paper.

1. Place the ID card on the scanner glass, aligning it with the indicated marks.
2. Press the **2 in 1 (ID) Copy** button on the control panel.
3. Follow the prompts on the LCD display to scan the first side, then flip the card and scan the second side.
4. The printer will print both sides onto one page.



Image: Close-up of the printer's control panel, highlighting the '2 in 1 (ID) Copy' button for convenient ID card copying.

5. MAINTENANCE

5.1 Replacing the Toner Cartridge

When the 'Toner Low' or 'Replace Toner' message appears on the LCD, it's time to replace the toner cartridge.

1. Open the front cover of the printer.
2. Remove the drum unit and old toner cartridge assembly.
3. Press the release lever on the drum unit and remove the old toner cartridge.
4. Unpack the new TN-2570XL toner cartridge and gently shake it.
5. Insert the new toner cartridge into the drum unit until it clicks.
6. Slide the drum unit and new toner cartridge assembly back into the printer.
7. Close the front cover.

5.2 Cleaning the Printer

Regular cleaning helps maintain print quality and extends printer life.

- **Exterior:** Wipe the exterior of the printer with a soft, lint-free cloth.
- **Scanner Glass:** Clean the scanner glass with a soft, dry cloth. For stubborn marks, use a small amount of glass cleaner applied to the cloth (not directly to the glass).
- **Corona Wire:** Periodically clean the corona wire inside the drum unit by sliding the green tab from left to right several times. Return the tab to its home position.

5.3 Clearing Paper Jams

If a paper jam occurs, the printer's LCD will display an error message. Follow the on-screen instructions or refer to the full user guide for detailed steps to clear the jam from various locations (e.g., paper tray, fuser unit, back cover).

6. TROUBLESHOOTING

This section addresses common issues you might encounter. For more detailed troubleshooting, refer to the comprehensive user manual or Brother's support website.

- **Printer Not Responding:** Check power connections, USB/Ethernet cables, and Wi-Fi status. Restart the printer and computer.
- **Poor Print Quality:** Check toner levels. Clean the corona wire. Ensure correct paper type and quality settings.
- **Paper Jams:** Follow the instructions in Section 5.3 to clear any jammed paper. Ensure paper is loaded correctly and not overfilled.
- **Network Connectivity Issues:** Verify Wi-Fi password, network cable connection, and router status. Try restarting your router and printer.
- **Driver Issues:** Reinstall printer drivers from the installation CD or Brother's website.

7. SPECIFICATIONS

Feature	Description
---------	-------------

Printer Type	Monochrome Laser
Functions	Print, Scan, Copy
Print Speed (Monochrome)	Up to 30 ppm (pages per minute)
Print Resolution	Up to 1200 x 1200 dpi
Duplex Printing	Automatic (2-sided)
Connectivity	Hi-Speed USB 2.0, Ethernet, Wi-Fi (IEEE 802.11a/b/g/n), Wi-Fi Direct
Memory	256 MB
Paper Input Capacity	250 sheets (standard tray)
Media Types	Plain Paper
Media Sizes	A4, Letter, B5 (JIS), B5 (ISO), A5, A6, Executive, Legal, Folio, etc.
Scanner Type	Flatbed
Copy Speed (Monochrome)	Up to 30 cpm (copies per minute)
Dimensions (D x W x H)	39.9D x 41W x 27.2H Centimeters
Weight	10.1 Kilograms
Compatible OS	Windows, Mac, Linux
Mobile Compatibility	Android, iOS



Image: Diagram showing the dimensions of the Brother DCP-L2605DW printer: 399 mm (D), 410 mm (W), 272 mm (H).

8. WARRANTY INFORMATION

Your Brother DCP-L2605DW printer comes with a **1 Year Manufacturer Warranty**. Please retain your purchase receipt as proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Brother website.

9. SUPPORT AND CONTACT

For technical assistance, product inquiries, or service requests, please contact Brother support:

- **Toll-Free Numbers:**

- 1-800-222-422 (For MTNL and BSNL users)
- 1-800-209-8904 (For Others and all Mobiles)

Operating Hours: Monday to Friday - 8:30 AM - 6:30 PM | Saturday - 9:00 AM - 6:00 PM

- **Email Support:** customercare@brother.in
- **WhatsApp Support:** 7045 450 450
- **Official Website:** www.brother.in



Get in **TOUCH** with us

For Free Installation* Or Any Product Related Information
*T&C Apply



Drop your query on
our **chatbot** at
www.brother.in



Now get 24x7 support
on WhatsApp
7045 450 450



Drop your
Query, Feedback, Request
customercare@brother.in



TOLL FREE NUMBER

1-800-222-422 | **1-800-209-8904**

(For MTNL and BSNL users) (For Others and all Mobiles)

Monday to Friday - 8:30 AM - 6:30 PM | Saturday - 9:00 AM - 6:00 PM

for more information

www.brother.in

Image: Graphic displaying Brother's customer support contact details, including toll-free numbers, email, WhatsApp, and website.