

## Housoul FS-2+1DSG-BL

# Housoul 71-inch Black TV Stand Instruction Manual

**Brand:** Housoul | **Model:** FS-2+1DSG-BL

## 1. INTRODUCTION

Thank you for choosing the Housoul 71-inch Black TV Stand. This manual provides detailed instructions for the assembly, operation, and maintenance of your new entertainment center. Please read this manual thoroughly before beginning assembly and retain it for future reference.

### Safety Information

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before assembly. Do not use damaged parts.
- For safety and ease of assembly, it is recommended that two adults assemble this TV stand.
- Do not overtighten screws, as this may damage the material.
- Place the TV stand on a level surface to prevent tipping.
- Do not exceed the recommended weight capacity for the top surface or shelves.

## 2. INCLUDED COMPONENTS

Your Housoul TV Stand package includes all necessary hardware and components for assembly. Please verify that all items listed in your separate parts list (provided in the packaging) are present before proceeding.

### Typical components include:

- Main panels (top, bottom, side, back)
- Shelf panels
- Cabinet doors and sliding door panel
- Adjustable feet and support legs

- Hardware kit (screws, dowels, cam locks, hinges, handles, etc.)
- Assembly tools (e.g., Allen wrench, screwdriver)

Refer to the detailed parts diagram in your packaging for specific identification of each component.


### 3. ASSEMBLY INSTRUCTIONS

---

Follow the numbered steps in the provided assembly manual carefully. Each hardware component is individually packaged and labeled with codes for easy reference.

#### General Assembly Steps:

1. **Unpack and Identify:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface. Match each part to the corresponding label in the instruction manual.
2. **Attach Cam Locks and Dowels:** Insert cam locks and wooden dowels into the designated holes on the panels as per the diagram.
3. **Assemble Base Structure:** Connect the bottom panel to the side panels using screws and cam locks. Ensure connections are secure.
4. **Install Shelves and Dividers:** Insert fixed and adjustable shelves into their positions.
5. **Attach Back Panel:** Secure the back panel to the main structure using small nails or screws. Ensure proper alignment.
6. **Install Doors:** Attach hinges to the cabinet doors and then to the main frame. Adjust hinges for proper door alignment. Install the sliding door into its track.
7. **Attach Handles and Feet:** Secure the golden cabinet handles to the doors. Attach the adjustable golden feet to the bottom of the TV stand.
8. **Final Check:** Ensure all screws are tightened, and the stand is stable. Adjust the feet to level the stand on uneven floors.

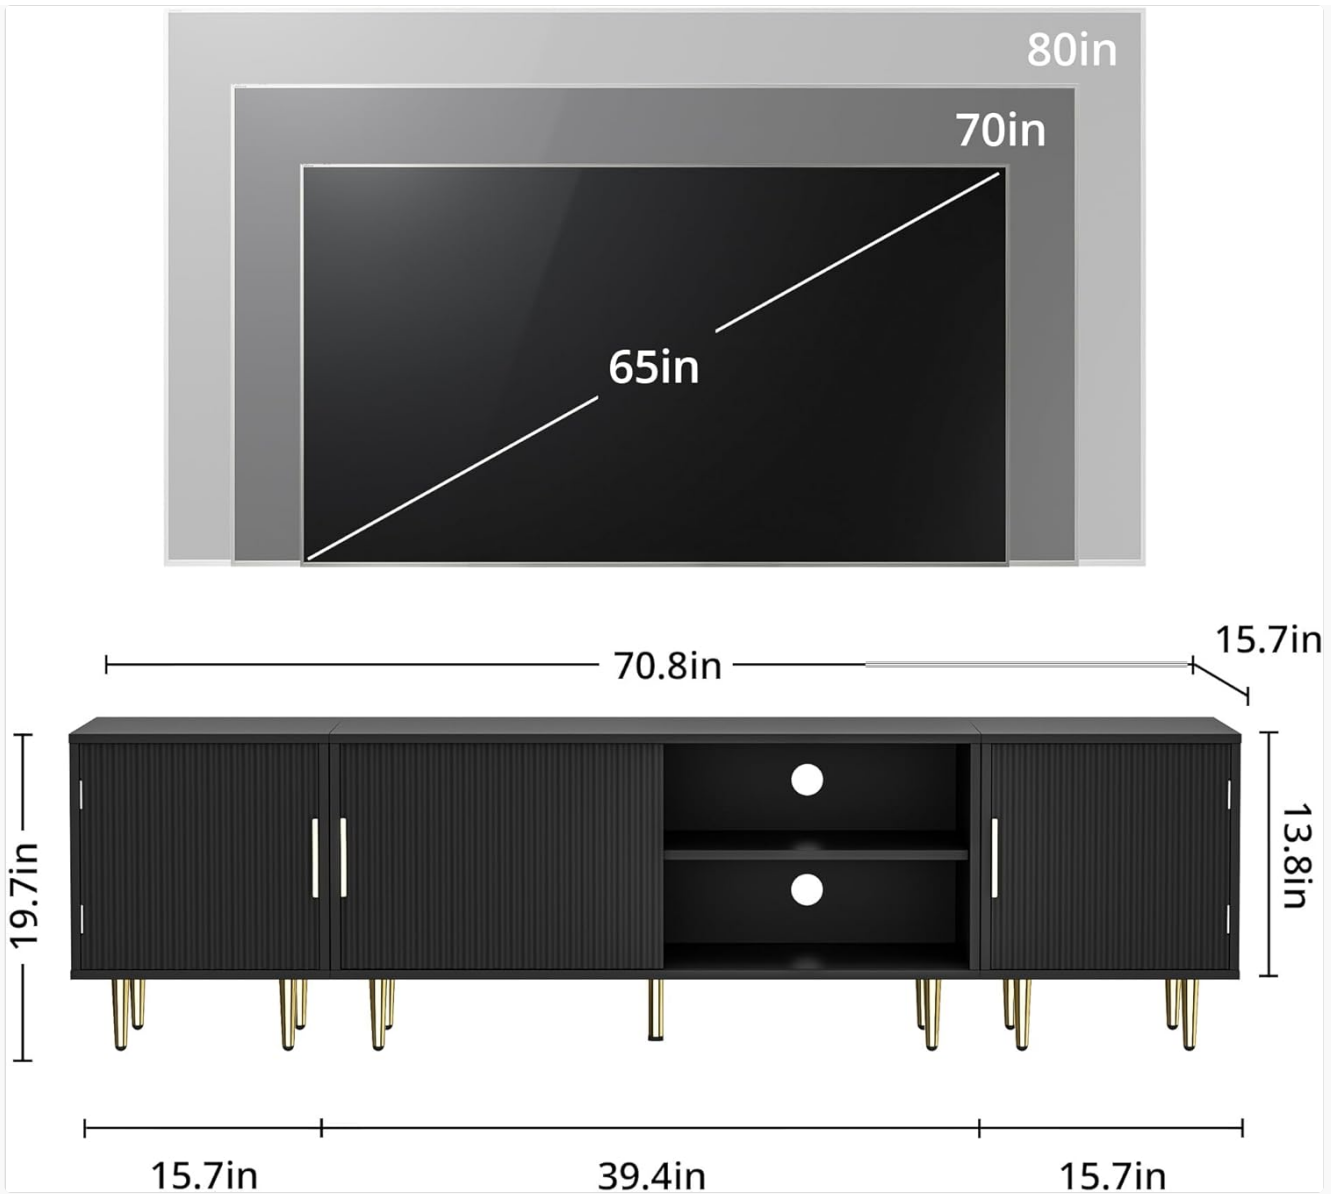

**Image 1:** Dimensions of the Housoul 71-inch TV Stand. The stand measures 70.8 inches in length, 15.7 inches in depth, and 19.7 inches in height. It is suitable for TVs up to 80 inches, with a visual representation showing a 65-inch TV fitting comfortably within a 70-inch space on the stand.



**Image 2:** The Housoul 71-inch TV Stand configured with its two side cabinets moved away from the central unit, demonstrating their versatility as separate end tables or nightstands. The main unit features a sliding door and open shelving, while the side cabinets have hinged doors, all with golden handles and legs.

## 4. OPERATING INSTRUCTIONS

### Storage Cabinets and Sliding Door

- The TV stand features two storage cabinets with hinged doors on the ends and two open spaces with a central sliding door.
- The hinged doors are equipped with magnetic devices for easy opening and secure closing. Gently pull the golden handles to open.
- The central sliding door allows you to conceal or reveal the two open storage compartments as desired. Slide it smoothly along its track.
- The two small cabinets on the left and right are designed to be movable, offering flexibility to be used as sofa side tables or nightstands, accenting your room as needed.

### Adjustable Feet

- The TV stand is equipped with adjustable feet. These can be rotated to fine-tune the height and level the stand on uneven floor surfaces.
- Ensure the stand is stable and does not wobble after placement.

## 5. MAINTENANCE

---

### Cleaning

- Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- For stubborn marks, use a mild soap solution and immediately dry with a clean cloth.
- Regular dusting with a dry, soft cloth is recommended to maintain the appearance.

### Care and Protection

- Avoid direct sunlight and extreme temperature changes to prevent warping or fading.
- Use coasters or mats under hot or wet items to protect the surface.
- Periodically check all screws and connections to ensure they remain tight. Retighten if necessary, but do not overtighten.

## 6. TROUBLESHOOTING

---

### Common Issues and Solutions

- **Stand is Wobbly:**

Ensure the TV stand is placed on a level surface. Adjust the individual feet by rotating them until the stand is stable. Check that all assembly screws and cam locks are fully tightened.

- **Doors Do Not Align Properly:**

Adjust the hinges on the cabinet doors. Most hinges have adjustment screws that allow for vertical, horizontal, and depth alignment. Refer to the hinge manufacturer's instructions if specific adjustments are needed.

- **Difficulty During Assembly:**

Review the assembly instructions carefully, paying close attention to the orientation of each panel and the correct hardware for each step. Ensure you are using the correct screws and dowels as indicated by their labels. If a part seems incorrect, double-check the part number against the manual.

- **Surface Scratches or Marks:**

For minor scuffs, a furniture repair marker or polish matching the finish color may help. For deeper scratches, professional repair may be required. Always handle components carefully during assembly to prevent damage.

- **Missing or Damaged Parts:**

If you find any parts missing or damaged upon opening the package, do not proceed with assembly. Contact Housoul customer service immediately for assistance and replacement parts.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Housoul

Feature	Detail
Model Name	FS-2+1DSG-BL
Color	Black
Product Dimensions	15.7"D x 70.8"W x 19.7"H
Recommended Uses	TV (up to 80 inches)
Special Feature	Adjustable Feet
Mounting Type	Floor Mount
Room Type	Bedroom, Living Room
Door Style	Arc Wave
Included Components	Hardware
Finish Type	Rustic
Number of Shelves	4
Item Weight	82 Pounds
Material	Engineered Wood
Assembly Required	Yes

## 8. WARRANTY INFORMATION

---

For specific warranty details regarding your Housoul TV Stand, please refer to the documentation included with your purchase or contact the seller directly. Additional protection plans may be available for purchase separately.

## 9. CUSTOMER SUPPORT

---

Should you have any questions, require assistance with assembly, or encounter any issues with your Housoul TV Stand, please do not hesitate to contact our professional customer service team. We are committed to ensuring you receive a satisfactory solution.

Please refer to your purchase documentation or the Housoul brand website for contact information.