

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FCXJTU](#) /
- › [FCXJTU YS-805C Simple Stopwatch Countdown Timer User Manual](#)

## FCXJTU YS-805C


# FCXJTU YS-805C Simple Stopwatch Countdown Timer User Manual

Model: YS-805C

## INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your FCXJTU YS-805C Simple Stopwatch Countdown Timer. This device is designed for ease of use, featuring both stopwatch and countdown timer functions with a clear, large display. It is suitable for various applications including sports, training, and classroom activities.

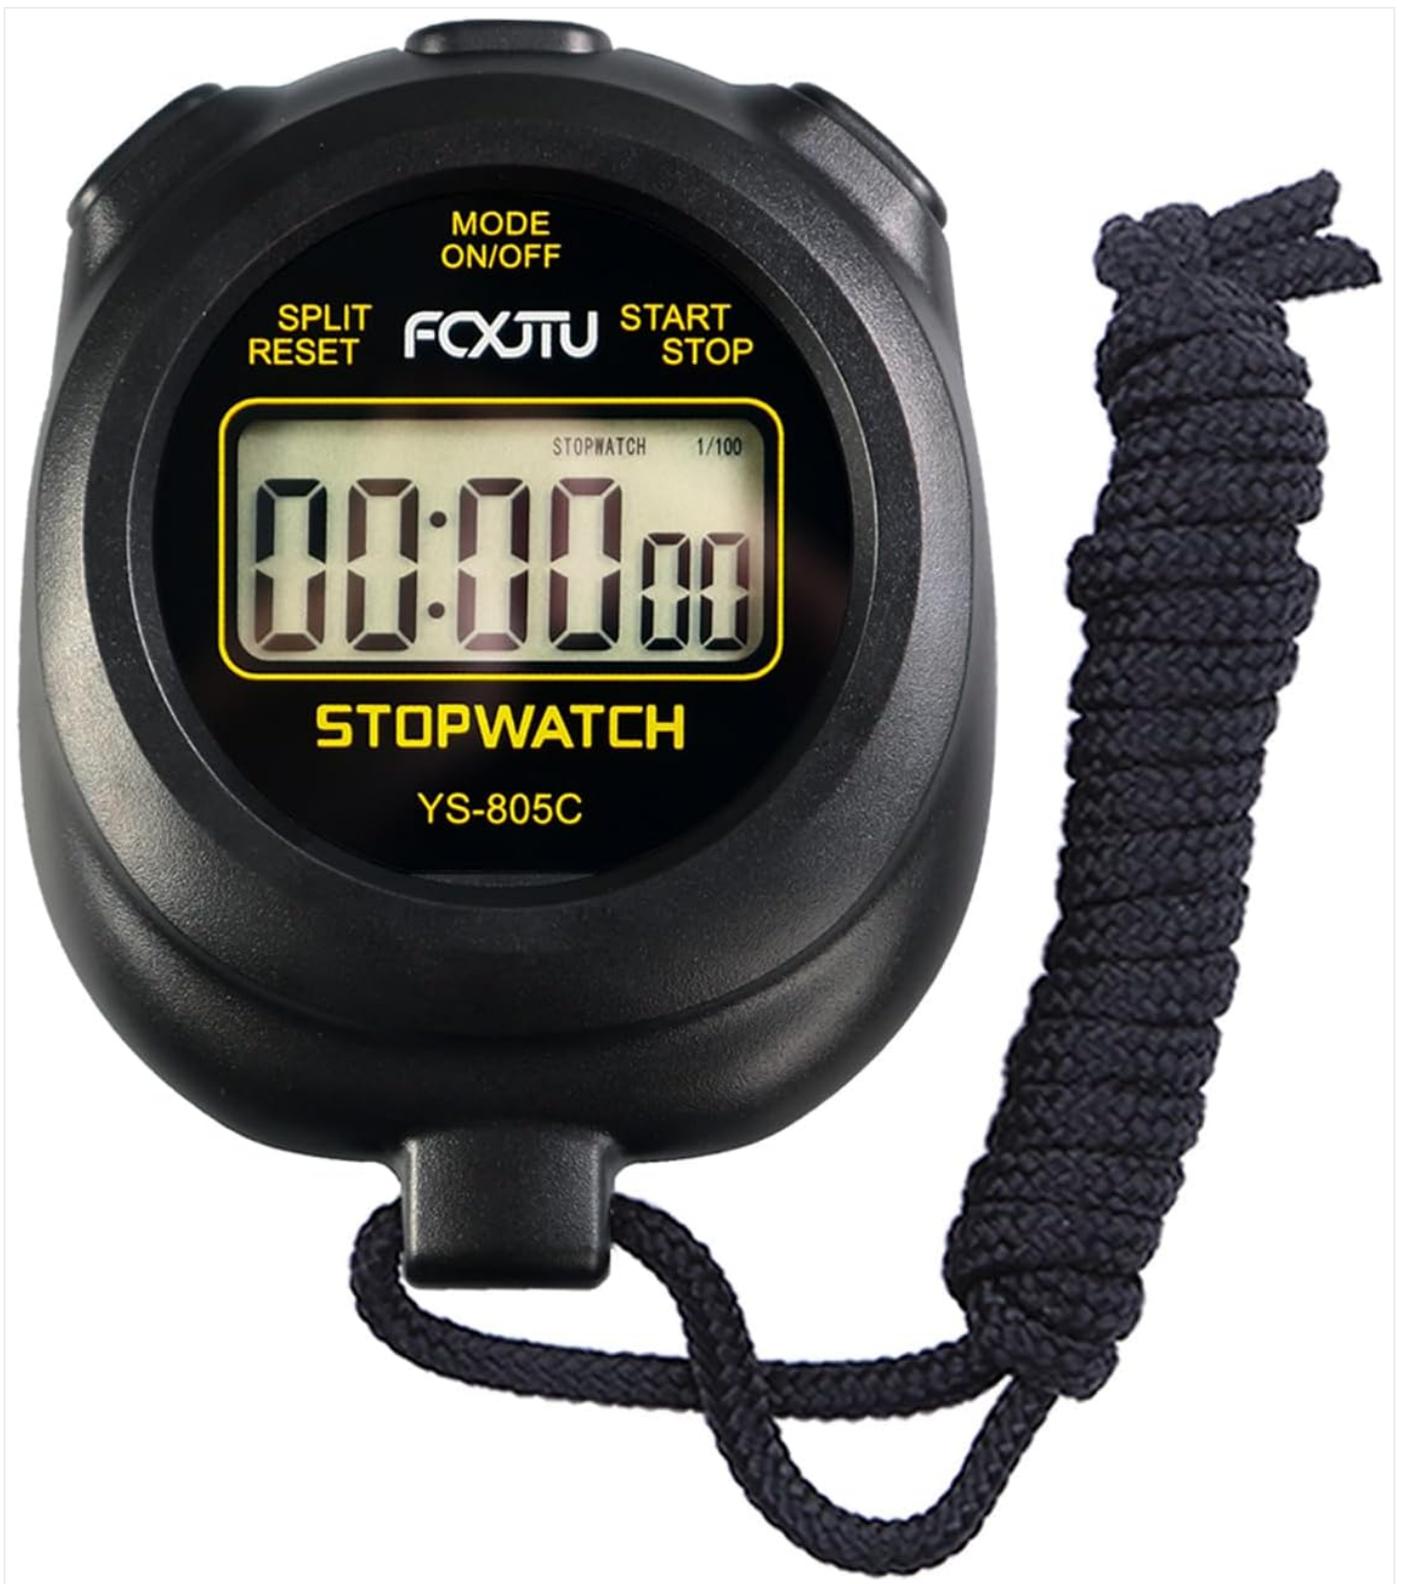

*Image: The FCXJTU YS-805C Simple Stopwatch, black in color, with a large digital display showing "00:00:00" and a black lanyard attached.*

## SETUP

---

### 1. Battery Installation

The FCXJTU YS-805C Stopwatch requires one AAA battery (included). To install or replace the battery:

1. Locate the battery compartment cover on the back of the stopwatch.
2. Carefully slide or unclip the cover to open it.

3. Insert one AAA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it is securely closed.



*Image: The back of the FCXJTU YS-805C Stopwatch with the battery cover removed, showing the compartment for a single AAA battery and an included AAA battery next to it.*

## 2. Power On/Off

To power on or off the stopwatch, press and hold the **ON/OFF** button (center button) for approximately 5 seconds. This function helps conserve battery life when the device is not in use.

# ON/OFF Function

keep long pressing  
the button to turn on/off



*Image: Two views of the FCXJTU YS-805C Stopwatch, one powered on with the display active, and another powered off with a blank display, illustrating the ON/OFF function by long-pressing the center button.*

## OPERATING INSTRUCTIONS

The FCXJTU YS-805C features three primary buttons for operation:

- **START/STOP** (Right Button): Initiates and pauses timing.
- **MODE/ON/OFF** (Center Button): Switches between Stopwatch and Countdown Timer modes, and powers the device on/off.
- **SPLIT/RESET** (Left Button): Records lap times in stopwatch mode or resets values in countdown mode.

# Stopwatch for Coaches



Image: A close-up view of the top of the FCXJTU YS-805C Stopwatch, highlighting the three buttons: Start/Stop (right), ON/OFF & Mode (center), and Split/Reset (left), with red dots indicating their positions.

## 1. Stopwatch Mode

In Stopwatch mode, the device measures elapsed time with 1/100th second accuracy, up to 99 hours, 59 minutes, and 59 seconds.

1. Ensure the stopwatch is in Stopwatch mode. If not, press the **MODE** button until "STOPWATCH" is displayed.
2. Press **START/STOP** to begin timing.
3. To record a lap time, press **SPLIT/RESET** while the stopwatch is running. The display will momentarily show the lap time, then return to the total elapsed time.
4. Press **START/STOP** again to pause the timer.
5. To resume timing, press **START/STOP**.
6. To reset the stopwatch to zero, ensure it is paused, then press **SPLIT/RESET**.

## 2. Countdown Timer Mode

The Countdown Timer allows setting a specific duration, up to 99 hours, 59 minutes, and 59 seconds, and counts down to zero.

## Countdown Timer Mode



*Image: A close-up of the FCXJTU YS-805C Stopwatch display, showing "TIMER" and "H" (for hours) indicating it is in Countdown Timer Mode, with the time set to "0:00:00".*

1. Press the **MODE** button until "TIMER" is displayed.
2. To set the countdown time:
  - Press **SPLIT/RESET** to select the digit to adjust (hours, minutes, seconds).
  - Press **START/STOP** to increase the selected digit.
3. Once the desired time is set, press **START/STOP** to begin the countdown.
4. To pause the countdown, press **START/STOP**. Press again to resume.
5. When the countdown reaches zero, an alarm will sound (if enabled).
6. To reset the countdown timer to the previously set time, press **SPLIT/RESET** while the timer is paused.

# Stopwatch with Countdown Timer

 --- stopwatch mode

 --- Countdown timer mode

 --- ON/OFF function

 --- large display



*Image: An infographic illustrating the FCXJTU YS-805C Stopwatch's main features: stopwatch mode, countdown timer mode, ON/OFF function, and large display, with an image of the stopwatch held by a hand on a running track.*

## MAINTENANCE

---

### 1. Battery Replacement

Refer to the "Battery Installation" section under Setup for detailed instructions on replacing the AAA battery. It is recommended to replace the battery annually or when the display becomes dim or unresponsive.

### 2. Cleaning

To clean the stopwatch, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water. Avoid exposing the stopwatch to extreme temperatures or direct sunlight for prolonged periods.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Low or depleted battery.	Replace the AAA battery. Ensure correct polarity.
Buttons are unresponsive.	Device is off or battery is low.	Press and hold the ON/OFF button for 5 seconds to power on. Replace battery if needed.
Countdown alarm is not audible.	Alarm volume is fixed and may be low in noisy environments.	Ensure the environment is quiet enough to hear the alarm. The device does not have adjustable volume.

## SPECIFICATIONS

---

Feature	Detail
Model Number	YS-805C
Brand	FCXJTU
Functions	Stopwatch, Countdown Timer, ON/OFF
Accuracy	1/100th second (Stopwatch)
Max Time Capacity	99 hours, 59 minutes, 59 seconds
Battery Type	1 x AAA Battery (included)
Material	Plastic
Product Dimensions	2.7"D x 0.75"W x 2.5"H
Item Weight	1.69 ounces (47.8 Grams)

## WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your FCXJTU YS-805C Simple Stopwatch Countdown Timer, please contact FCXJTU customer service through the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.

