

Agrestem 103KQYGP29

Agrestem 10X13FT Outdoor Hardtop Gazebo User Manual

Model: 103KQYGP29

INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and safety of your Agrestem 10X13FT Outdoor Hardtop Gazebo. This gazebo features an aluminum frame and a heavy-duty double roof polycarbonate canopy, designed for outdoor use on patios, terraces, lawns, or decks. Please read these instructions thoroughly before assembly and use to ensure proper installation and safe operation.

SAFETY INFORMATION

Important Safety Precautions:

- Regardless of the surface on which the gazebo is installed, it is essential to use ground nails, ropes, and expansion screws to ensure stability. This prevents collapse and potential harm to individuals or property damage.
- Do not use the gazebo in high winds, heavy snow, or severe weather conditions. The design is not intended to withstand strong winds, heavy snow, or other severe weather.
- Take precautions when wind speeds exceed 25 mph, and accumulated snow exceeds 2 inches.
- Before each use, thoroughly inspect the gazebo to ensure all bolts, nuts, and fasteners are securely tightened and properly fastened.

SETUP AND ASSEMBLY

Assembly of the Agrestem Hardtop Gazebo requires careful attention to detail. It is recommended to have at least two people for assembly. Ensure all parts are present before beginning. Refer to the included parts list for identification.

Frame Assembly

Begin by assembling the main aluminum frame. The frame features pre-drilled base plates for secure anchoring. Follow the step-by-step instructions provided in the separate assembly guide for detailed diagrams and hardware usage.

DUAL DURABLE POLYCARBONATE ROOF DESIGN



Anti-UV



Air
ventilation



Durable



Water
Resistant

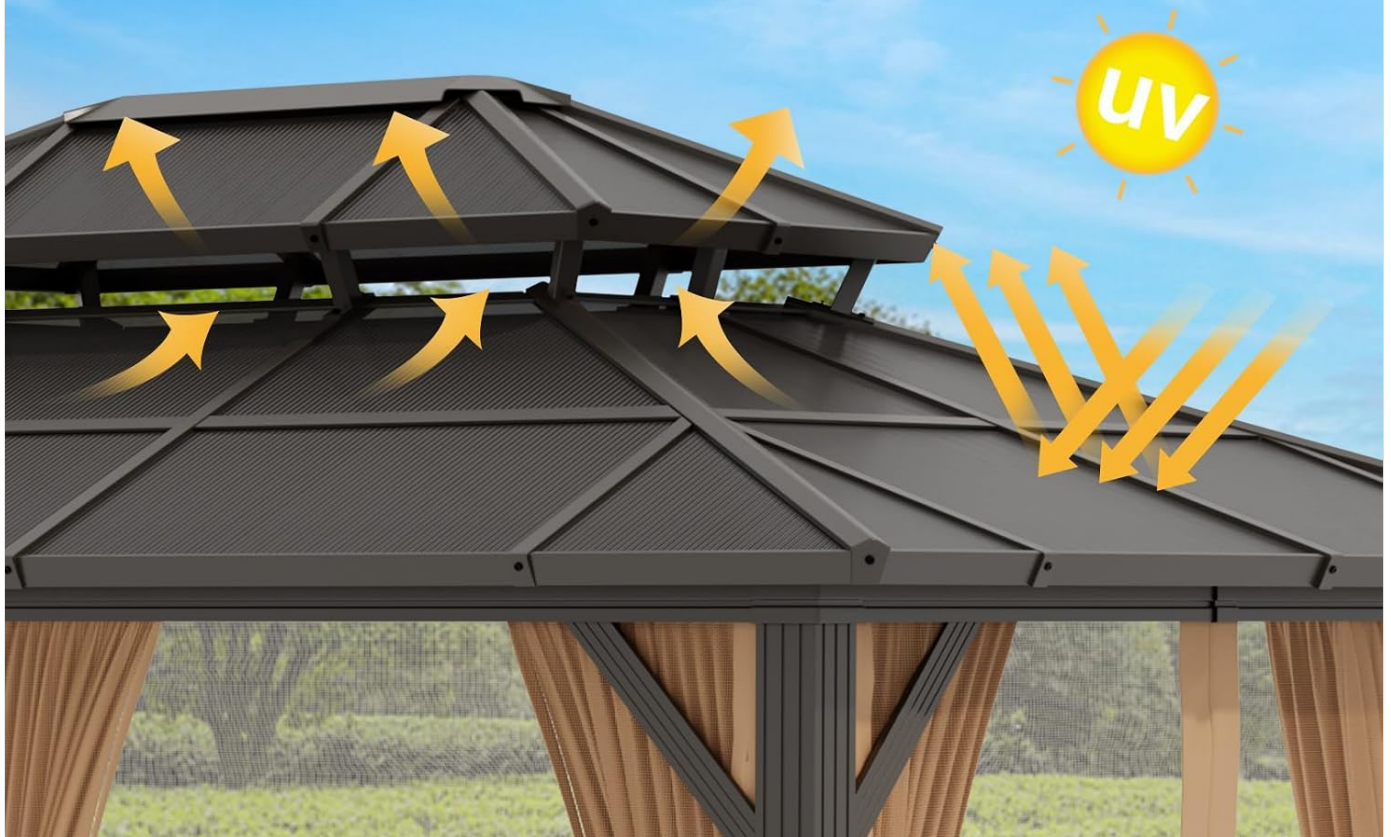


Image: Illustration of various gazebo frame components and initial assembly steps.

MULTIFUNCTIONAL TOP DESIGN



Fan



Light



Decoration

1

2

1

2



Hang lights or fans
for Decoration

Image: Detailed view of the gazebo's roof structure during assembly, showing connections.

Roof Panel Installation

Install the heavy-duty double roof polycarbonate panels onto the assembled frame. Ensure panels are correctly oriented for proper water runoff and UV protection.

DOUBLE-LAYERED CURTION



Thickened Nettings



Double tracks



Double zippers



Image: Close-up of the dual polycarbonate roof design, highlighting its anti-UV, air ventilation, durable, and water-resistant properties.

Mesh Netting and Sunshade Curtains

Attach the mesh netting and sunshade curtains to the double tracks. The curtains feature double zippers for easy closure and thickened nettings for insect protection.



Reduce 99% UV proof



Withstand Heavy Wind and Rain



SNOWY

Withstand Winter

Image: Detail of the double-layered curtains, showing the thickened nettings, double tracks for hanging, and double zippers for secure closure.

Anchoring the Gazebo

Once assembled, securely anchor the gazebo to the ground using the provided ground nails, ropes, and expansion screws. This step is critical for stability and safety, especially in varying weather conditions.

Installation Video

For a visual guide on the assembly process, please refer to the official installation video below:

Your browser does not support the video tag.

Video: Official Agrestem Hardtop Gazebo Installation Video. This video demonstrates the step-by-step assembly process for the gazebo frame and roof components.

OPERATING INSTRUCTIONS

Using the Curtains and Netting

The gazebo is equipped with double-layered curtains and mesh netting. The mesh netting provides protection from insects while allowing air circulation. The sunshade curtains offer privacy and additional sun protection. Both layers operate on double tracks, allowing them to be opened or closed independently using the integrated zippers.

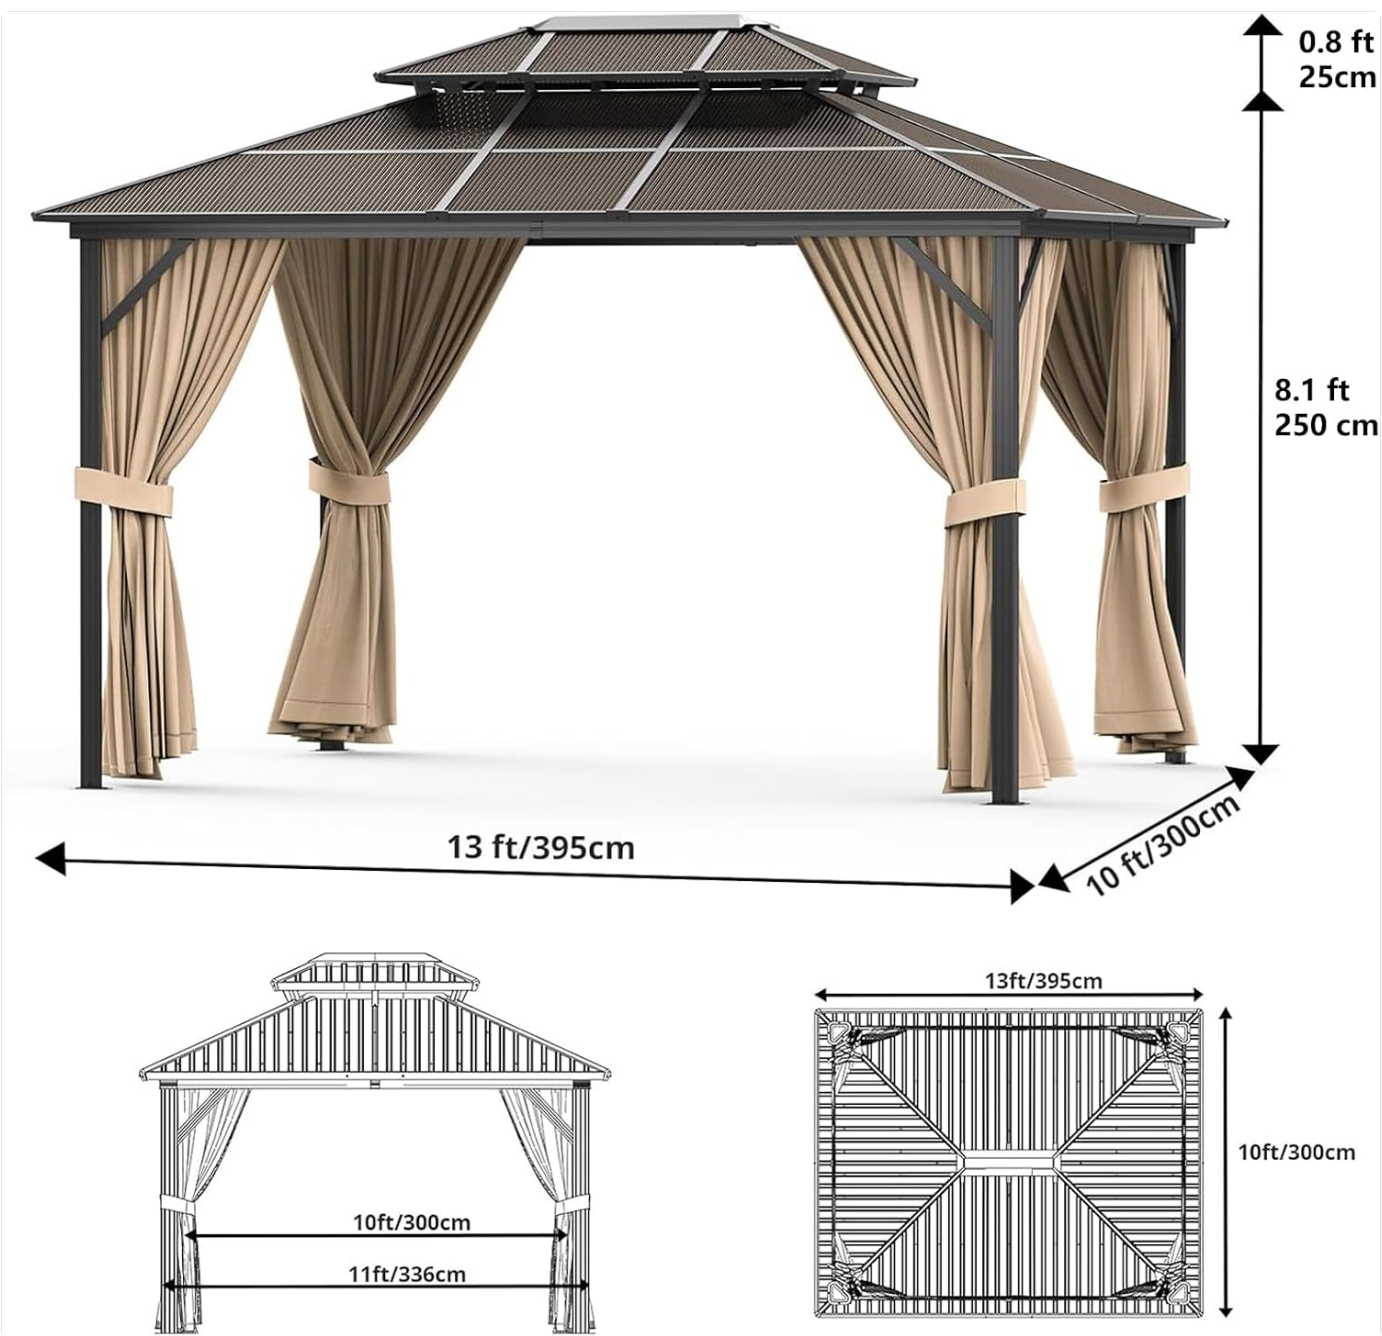


Image: Demonstrates the gazebo with curtains in both open and closed positions, illustrating its adaptability for different weather and privacy needs.

Accessory Hooks

The gazebo's top design includes hooks for hanging accessories such as fans, lights, or decorative items. Ensure any hung items do not exceed the weight capacity specified in the assembly guide.



Image: Close-up of the gazebo's multifunctional top design, showing integrated hooks suitable for hanging fans, lights, or other decorative elements.

MAINTENANCE

Regular maintenance will extend the life and appearance of your gazebo.

- **Cleaning:** Clean the aluminum frame and polycarbonate roof panels with a mild soap solution and water. Rinse thoroughly with clean water. Avoid abrasive cleaners or scrub brushes that could scratch surfaces.
- **Fabric Care:** The mesh netting and sunshade curtains can be spot cleaned with mild soap and water. For deeper cleaning, follow the care instructions on the fabric tags. Ensure fabrics are completely dry before storing or closing for extended periods to prevent mildew.
- **Fastener Inspection:** Periodically check all bolts, nuts, and fasteners to ensure they remain securely tightened. Re-

tighten as necessary.

- **Weather Precautions:** During periods of high winds (exceeding 25 mph) or heavy snow (accumulated snow exceeding 2 inches), it is recommended to remove the curtains and netting and, if possible, disassemble the gazebo or reinforce its anchoring to prevent damage. The gazebo is wind-resistant up to level 5-6 and snow-resistant up to 4 inches, but extreme conditions require additional precautions.

DOUBLE-LAYERED CURTION



Thickened Nettings



Double tracks



Double zippers



Image: Illustrates the gazebo's resilience against various weather conditions, including sun (99% UV proof), heavy wind and rain, and winter snow.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Insufficient anchoring; loose fasteners.	Ensure all ground nails, ropes, and expansion screws are properly installed and tightened. Check and re-tighten all bolts and nuts on the frame.
Water leakage from the roof.	Improperly installed roof panels; damaged seals.	Verify that all polycarbonate roof panels are correctly seated and sealed according to assembly instructions. Inspect seals for damage and replace if necessary.
Curtains or netting do not slide smoothly.	Debris in tracks; damaged rollers/hooks.	Clean the double tracks of any dirt or obstructions. Inspect curtain rollers or hooks for damage and replace if needed.
Missing parts during assembly.	Packaging error.	Contact Agrestem customer support with your purchase details and the specific missing parts. Refer to the parts list in your assembly guide.

SPECIFICATIONS

Feature	Detail
Brand	Agrestem
Model Number	103KQYGP29
Dimensions (L x W)	13 ft x 10 ft (395 cm x 300 cm)
Height	8.1 ft (250 cm)
Frame Material	Aluminum (Powder-coated)
Roof Material	Polycarbonate (Double Roof)
Curtain/Netting Material	Fabric (Mesh Netting, Sunshade Curtains)
Color	Brown + Khaki
Item Weight	180.8 Pounds
Water Resistance Level	Waterproof
UV Protection	Yes (99% UV proof)
Wind Resistance	Level 5-6
Snow Resistance	Up to 4 inches
Assembly Required	Yes
UPC	198723493428



Image: Dimensional diagram of the Agrestem 10x13FT Gazebo, indicating length, width, and height measurements.

WARRANTY AND SUPPORT

Return Policy

This product is eligible for a 30-day easy return policy from the date of purchase. Please refer to your retailer's specific return guidelines for detailed information.

Protection Plans

Optional protection plans may be available for purchase, such as a 3-Year Protection Plan. These plans offer extended coverage beyond the standard return policy. For details on available plans and coverage, please consult your retailer.

Customer Support

For assistance with missing parts, assembly questions, or any other product-related inquiries, please contact Agrestem Direct customer support. Have your model number (103KQYGP29) and purchase details ready when contacting support. You can often find contact information through the retailer where you purchased the product or by visiting the official Agrestem website.

© 2026 Agrestem. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question