

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Midea](#) /

› [Midea 42-inch Oscillation Tower Fan FZ10-21CR User Manual](#)

Midea FZ10-21CR

Midea 42-inch Oscillation Tower Fan

MODEL FZ10-21CR USER MANUAL

Important Safety Information

Please read all safety instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- For household use only.
- Keep away from water and moisture.
- Do not operate the fan with a damaged cord or plug.
- Always unplug the fan before cleaning or performing any maintenance.
- Keep out of reach of children unless supervised.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not insert fingers or foreign objects into the grille while the fan is operating.

Product Overview

The Midea 42-inch Oscillation Tower Fan (Model FZ10-21CR) is designed to provide refreshing comfort with advanced features for modern homes. It combines powerful airflow with smart connectivity, allowing for convenient control via a smartphone app or voice commands.

Key features include:

- Smart App & Voice Control: Operate seamlessly via WiFi app or hands-free through Alexa and Google Home.
- Wide 60° Oscillation: Distributes cool air evenly across the room for full-area comfort.
- Customizable Cooling: Offers 3 fan speeds and multiple modes, including Sleep Mode.
- 7-Hour Timer & Remote Control: Set timers and adjust settings with the included remote.
- Built-in Aroma Diffuser: Freshen the air naturally with the integrated aroma box.



Midea



Works with
IFTTT

works with
Google Home



This image displays the Midea 42-inch Oscillation Tower Fan, highlighting its sleek blue design, accompanying remote control, and icons indicating compatibility with smart home applications like Google Home and IFTTT.

Setup Guide

1. Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts are present: the fan body, base, and remote control. Attach the base to the bottom of the fan body by aligning the slots and twisting or securing with provided screws, if any. Refer to the quick start guide included in the box for specific assembly steps.

2. Placement

Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper air circulation and oscillation. Avoid placing it near curtains or other objects that could obstruct airflow or be drawn into the fan.

3. Power Connection

Plug the power cord into a standard 120V AC electrical outlet. Ensure the plug is fully inserted.

4. Smart App and Voice Control Setup

To utilize the smart features, download the Midea SmartHome app from your device's app store. Follow the in-app instructions to pair your fan with your Wi-Fi network. Once connected, you can link the fan to voice assistants like Amazon Alexa or Google Home for hands-free control.

Download the Midea SmartHome app: <https://mapp.appsmb.com/appstatic/download.html>



This image illustrates the Midea Tower Fan's smart control capabilities, featuring a smartphone displaying the control app interface alongside logos for Alexa, Google Home, and IFTTT, indicating voice and app control options.

Operating Instructions

The Midea Tower Fan can be operated using the control panel on top of the unit, the included remote control, or through the Midea SmartHome app and voice commands.

Control Panel and Remote Control




This close-up image details the control panel located on top of the Midea Tower Fan, along with its remote control, showing various buttons for power, mode, speed, oscillation, and timer settings.

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Settings:** Cycle through 3 fan speeds (Low, Medium, High) to adjust airflow intensity.



This image depicts three distinct fan speed levels, visually representing the increasing intensity of airflow from level 1 to level 3, showcasing the fan's customizable cooling options.

- **Mode Button:** Select from multiple modes (e.g., Normal, Natural, Sleep). Sleep mode typically reduces fan speed and noise for quiet operation.
- **Oscillation Button:** Activate or deactivate the 60° oscillation feature for wide-area air distribution.

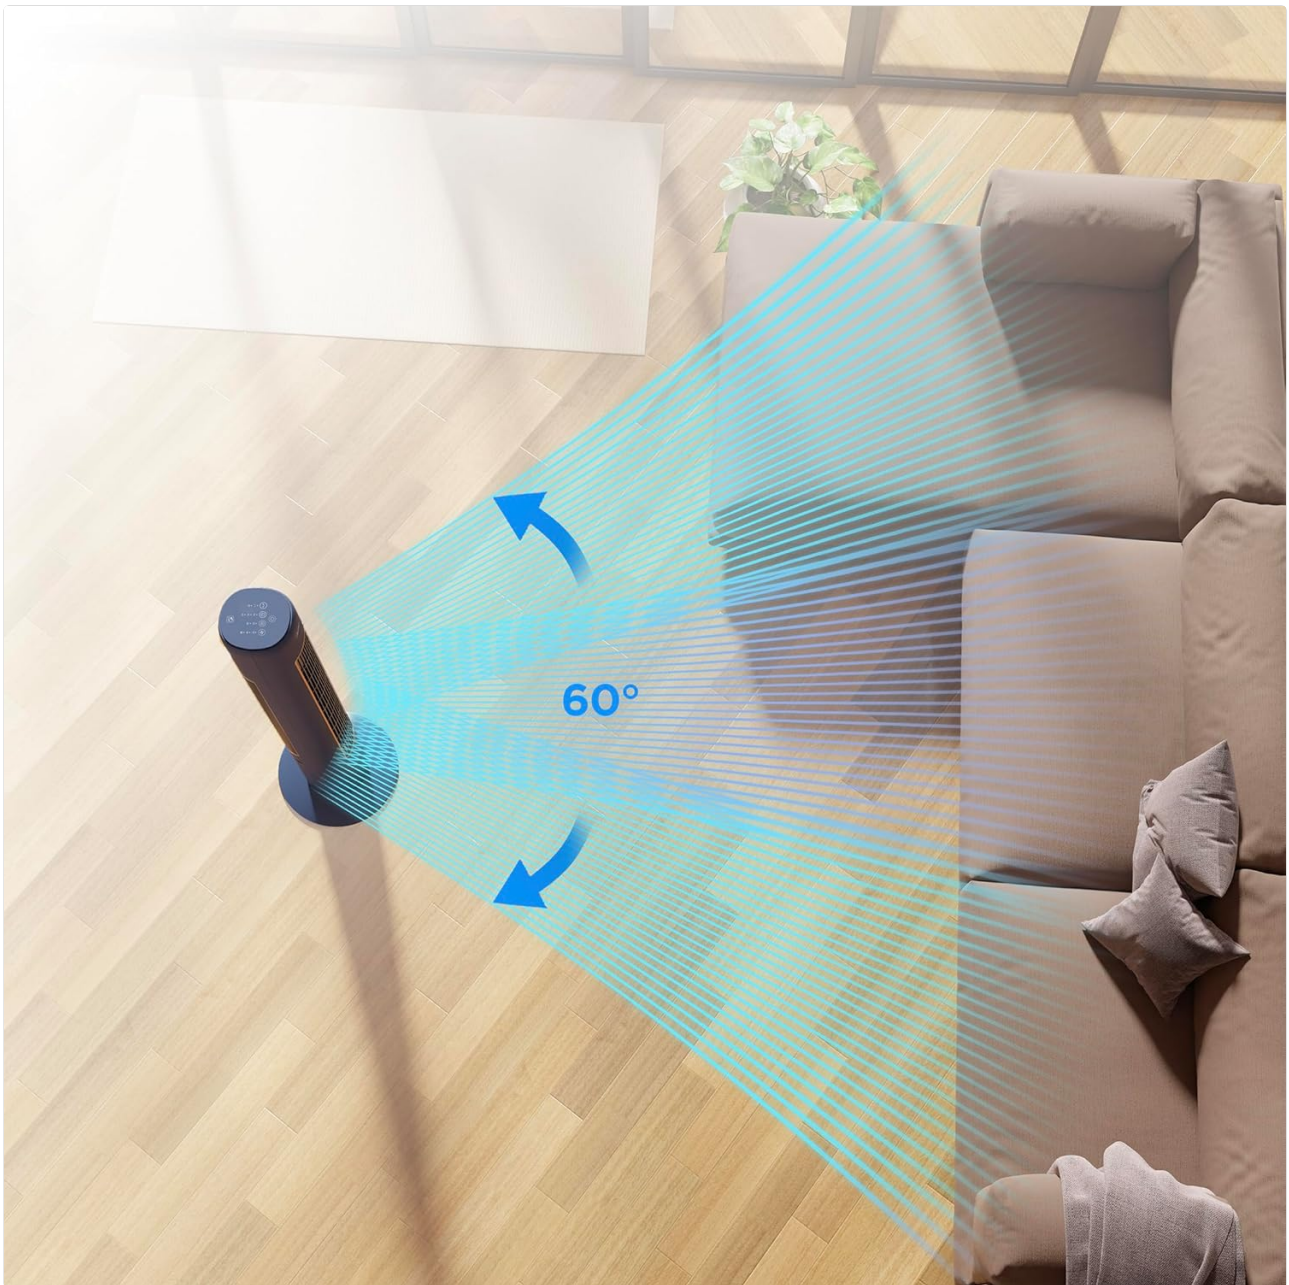

This diagram visually represents the 60-degree oscillation feature of the Midea Tower Fan, demonstrating how it distributes cool air widely across a room for comprehensive coverage.

- **Timer Button:** Set the fan to automatically turn off after a specified period, up to 7 hours.



This graphic illustrates the 7-hour programmable timer feature of the Midea Tower Fan, depicted by a clock-like dial indicating the duration for automatic power-off.

- **Aroma Diffuser:** To use the aroma diffuser, locate the aroma box (usually a small tray or compartment) on the fan. Add a few drops of your preferred essential oil to the pad inside the box. Close the box and enjoy the diffused scent.



This image illustrates the Midea Tower Fan in operation, with air flowing outwards, accompanied by visual elements like leaves and bubbles, symbolizing the integrated aroma diffuser and fresh air ionizer for enhanced air quality.

Smart App and Voice Control

Once the fan is connected to the Midea SmartHome app, you can control all functions remotely. This includes power, speed, mode, oscillation, and timer settings. For voice control, enable the Midea skill/action in your Alexa or Google Home app and use commands such as "Alexa, turn on the fan" or "Hey Google, set fan speed to medium."

Maintenance

Regular cleaning and maintenance will help ensure the longevity and optimal performance of your Midea Tower Fan.

Cleaning the Fan

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- For dust accumulation on the air intake or output grilles, use a vacuum cleaner with a brush attachment or compressed air to gently remove dust.
- Ensure the fan is completely dry before plugging it back in and operating.

Cleaning the Aroma Diffuser

- Remove the aroma box from the fan.
- Take out the aroma pad. The pad can be rinsed with water and air-dried, or replaced if heavily soiled or worn.
- Wipe the inside of the aroma box with a damp cloth.
- Ensure all parts are dry before reassembling and reinserting into the fan.

Troubleshooting

If you encounter issues with your Midea Tower Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power, loose plug, power outage.	Check if the power cord is securely plugged into a working outlet. Test the outlet with another device.
Fan suddenly stops during operation.	Overheating, timer activated, internal safety shut-off.	Unplug the fan and let it cool down for 30 minutes. Check if the timer was set. Ensure air vents are not blocked. Note: Some models may have a 24-hour continuous use shut-off feature.
Remote control not working.	Dead batteries, obstruction, remote out of range.	Replace batteries in the remote control. Ensure there are no obstructions between the remote and the fan. Operate the remote within its effective range.
Smart app/voice control not connecting.	Wi-Fi issues, incorrect pairing, app error.	Ensure your Wi-Fi network is active and the fan is within range. Re-attempt the pairing process in the Midea SmartHome app. Restart your router and the fan. Check for app updates.
Fan makes unusual noise.	Dust accumulation, loose parts, fan not on a level surface.	Unplug the fan and clean the grilles. Check for any loose components. Ensure the fan is placed on a stable, flat surface.

If the problem persists after trying these solutions, please contact Midea customer support.

Specifications

Feature	Detail
Brand	Midea
Model Name	FZ10-21CR
Color	Dark Blue With Gold Trim
Product Dimensions	25.5"D x 10.04"W x 42.91"H
Item Weight	14.9 Pounds
Power Source	AC/DC (120 Volts)
Wattage	33 watts
Noise Level	38 dB
Control Method	App, Remote, Voice, Touch Control
Number of Power Levels	3
Special Features	Built-in Aroma Diffuser and Fresh Air Ionizer, 7-Hour Programmable Timer, 60° Wide Oscillation, Smart App and Voice Control (WiFi, Alexa, Google Home), Sleep Mode
Safety Certification	UL

Warranty and Support

Limited Warranty

Midea products are manufactured to the highest quality standards. This product comes with a limited warranty against defects in materials and workmanship under normal household use. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Midea customer service. You can find contact information on the official Midea website or on the product packaging.

Visit the Midea Store: <https://www.amazon.com/stores/Makeyourselfathome/page/4F6A19CF-5B7B-4D5A-A739-6EA8B46D4560>

