

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ReachMall](#) /

› [ReachMall Lavor/Aral/Bolt/Smart/Indie/Force Adapters User Manual](#)

## ReachMall L1

# ReachMall Lavor/Aral/Bolt/Smart/Indie/Force Adapters User Manual

Brand: ReachMall | Model: L1

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the safe and effective use of your ReachMall Pressure Washer Adapter. This male quick nozzle is designed to connect various pressure washer systems, including Karcher, Lavor, and other compatible hoses, ensuring a secure and efficient connection for your cleaning tasks. Please read this manual thoroughly before installation and operation.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions to prevent injury or damage to the product and property:

- Ensure all connections are secure and leak-free before operating the pressure washer.
- Do not exceed the maximum pressure rating of the adapter or your pressure washer.
- Always wear appropriate personal protective equipment (PPE), such as safety glasses, when operating a pressure washer.
- Disconnect the adapter from the pressure washer and hose when not in use.
- Do not place the adapter at a high place to avoid falling.
- Keep out of reach of children.

## 3. PRODUCT OVERVIEW

---

The ReachMall Pressure Washer Adapter is a versatile accessory designed to enhance the compatibility and functionality of your pressure washing equipment. It features durable construction and a quick-connect design for ease of use.

### Components

- Male Quick Nozzle Adapter (L1 variant shown)
- Optional: Set of 5 Quick-Connect Nozzles (if included in package)



Figure 3.1: Main adapter with key dimensions. This brass adapter measures 42mm in length and 29mm in width, featuring a 7.5mm inner diameter and 12.2mm outer thread diameter.

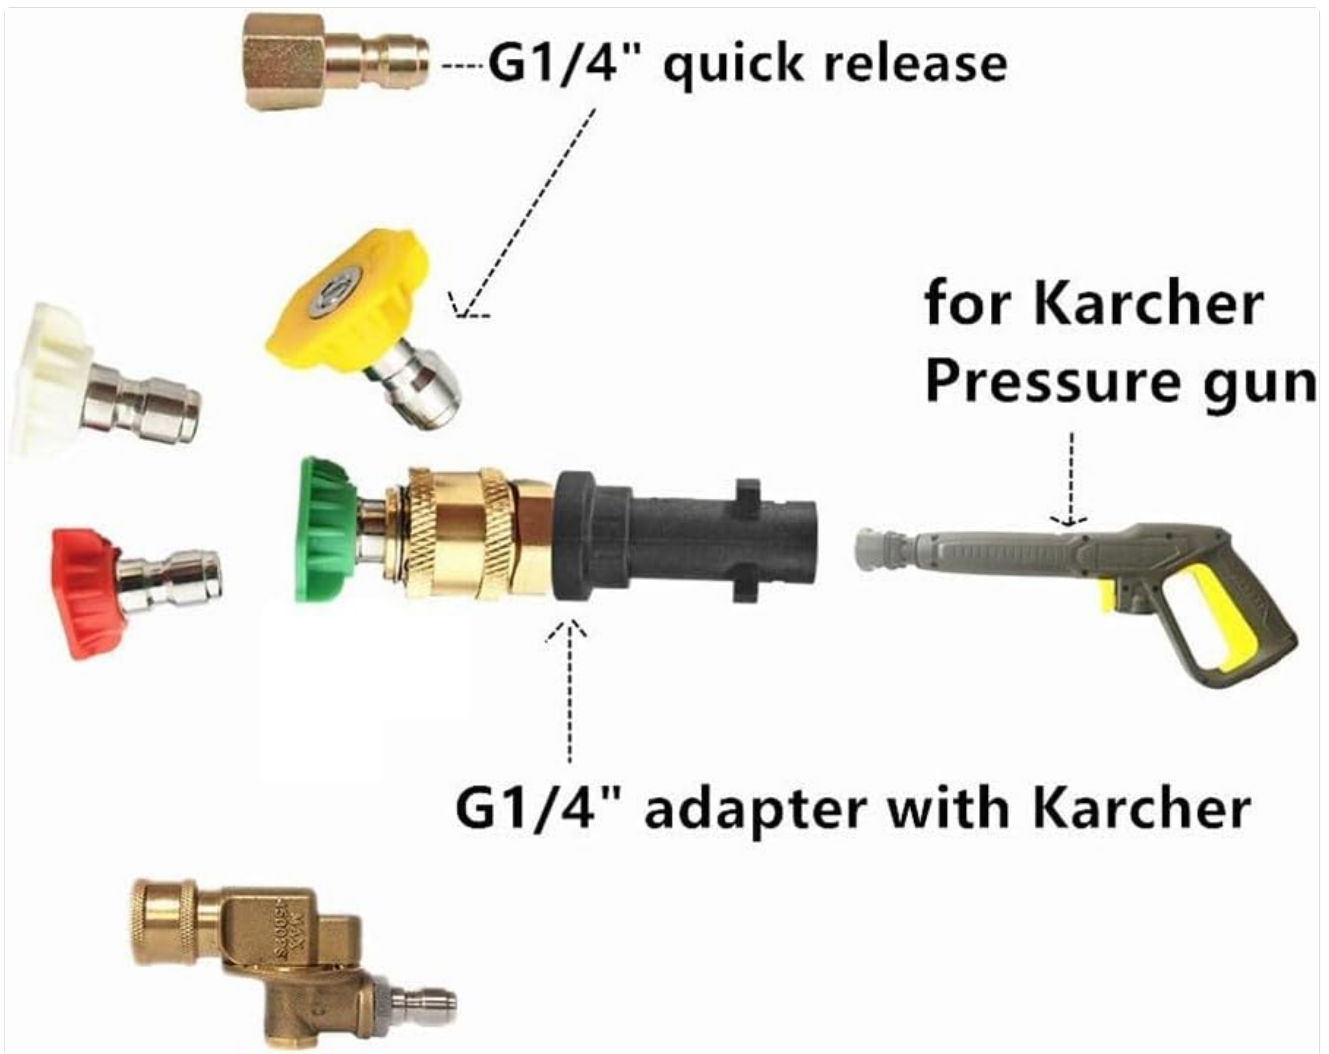


Figure 3.2: Illustration of the G1/4 inch quick release adapter and its connection to a Karcher pressure gun, alongside various quick-connect nozzles.

# G1/4" Quick Connect

12mm



Figure 3.3: Detailed view of the G1/4 inch quick connect, highlighting its 12mm inner diameter.

# L1 Copper Adapter



**for Karcher K2 K3 K4 K5 K6 K7**

Figure 3.4: The L1 Copper Adapter, designed for Karcher K2-K7 models, showing its specific dimensions (19.7mm, 12.9mm, 44mm).

# HNYRI



Figure 3.5: A collection of various pressure washer adapters and quick connectors, illustrating the range of available types.

## 4. SETUP AND INSTALLATION

The adapter is designed for quick and hassle-free installation. Follow these steps to connect the adapter to your pressure washer and hose:

### Connecting the Adapter

1. **Identify Connection Points:** Locate the male thread on your pressure washer hose or gun and the female quick-connect fitting on the adapter.
2. **Thread Connection:** Screw the threaded end of the adapter onto the corresponding male thread of your pressure washer hose or gun. Ensure it is hand-tightened securely to prevent leaks.

3. **Quick Connect:** If using quick-connect nozzles (L10 option), simply push the desired nozzle into the quick-connect end of the adapter until it clicks into place. Pull gently to ensure it is locked.
4. **Check for Leaks:** Before operating the pressure washer, turn on the water supply and check all connections for any leaks. Tighten if necessary.

## 5. OPERATING INSTRUCTIONS

---

Once the adapter is securely installed, you can proceed with your pressure washing tasks. The adapter facilitates a secure and watertight connection, maximizing cleaning efficiency.

### Using with Pressure Washer

1. **Select Nozzle:** Choose the appropriate quick-connect nozzle for your cleaning task (if applicable).
2. **Connect to Pressure Washer:** Ensure the adapter is firmly connected to your pressure washer hose or gun.
3. **Start Pressure Washer:** Follow your pressure washer's manufacturer instructions to start the unit.
4. **Begin Cleaning:** Direct the spray at the surface to be cleaned, maintaining a safe distance.
5. **Change Nozzles (if applicable):** To change nozzles, turn off the pressure washer and release any residual pressure. Then, pull back the collar on the quick-connect fitting to release the current nozzle and insert a new one.

## 6. MAINTENANCE

---

Regular maintenance will ensure the longevity and optimal performance of your adapter:

- **Cleaning:** After each use, rinse the adapter with clean water to remove any dirt or chemical residue.
- **Inspection:** Periodically inspect the adapter for any signs of wear, damage, or corrosion. Pay close attention to the threads and quick-connect mechanism.
- **Lubrication:** Apply a small amount of silicone grease to the O-rings (if present) to maintain a good seal and prevent wear.
- **Storage:** Store the adapter in a clean, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

If you encounter issues with your adapter, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Water leaks from connection	Loose connection, worn O-ring, damaged threads	Tighten connection, replace O-ring, inspect threads for damage.
Nozzle does not quick-connect securely	Debris in quick-connect, damaged quick-connect mechanism	Clean quick-connect fitting, inspect for damage.
Reduced water flow	Blockage in adapter or nozzle	Inspect and clear any blockages.

## 8. SPECIFICATIONS

---

Key technical specifications for the ReachMall Pressure Washer Adapter (L1 variant):

Feature	Detail
Brand	ReachMall
Model Number	89Y4W605V4RQ6MDG6262HM3
Color	See image (typically brass/gold)
Product Dimensions (L x W x H)	8 x 3 x 3 cm
Manufacturer	ReachMall
Input Connection Type	Barb
Compatible Models (L1)	Karcher K2-K7

## 9. WARRANTY AND SUPPORT

---

Information regarding specific warranty terms and conditions for this product is not provided in the available data. For any product support, inquiries, or to report issues, please contact your retailer or the manufacturer directly. Please retain your proof of purchase for any warranty claims.