



ST-CH510 RAK-CH202WH SC-CH770 SC-EH60

User Manual

Generic Replacement Remote Control

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your new Generic Replacement Remote Control. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

This remote control is designed as a direct replacement for Technics ST-CH510, RAK-CH202WH, SC-CH770, and SC-EH60 CD Stereo Systems. It comes pre-programmed and requires no additional setup or coding.

PACKAGE CONTENTS

- 1 x Generic Replacement Remote Control

Note: Batteries and additional instructions are not included in the package.

SETUP

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Slide the battery cover downwards to open it.



Description: This image displays the rear view of the remote control with the battery cover detached, exposing the two compartments for AAA batteries. Observe the positive (+) and negative (-) terminals within each slot to ensure correct battery orientation.

Insert two (2) new AAA batteries (not included) into the compartment, ensuring the correct polarity (+ and -) as indicated inside the compartment.

Replace the battery cover by sliding it back into position until it clicks securely.

2. First Use:

Once batteries are inserted, the remote control is ready for immediate use. No programming or pairing is required.

OPERATING INSTRUCTIONS

This remote control functions identically to the original remote for your Technics CD Stereo System. Point the remote control directly at the infrared receiver on your stereo system.



Description: This image shows the top surface of the remote control, highlighting its array of buttons. These include power, volume, track navigation, play/pause, stop, and numeric buttons for direct track selection. Familiarize yourself with

the layout for efficient operation.

Key Functions:

- **Power Button:** Turns the stereo system on or off.
- **Numeric Buttons (0-10):** For direct track selection on the CD player.
- **Playback Controls (Play, Pause, Stop, Skip, Fast Forward/Rewind):** Standard controls for CD playback.
- **Volume Up/Down:** Adjusts the audio volume.
- **Function Buttons (e.g., Program, Clear, Recall, Repeat, Random, Spiral, Time, Disc Skip):** Specific functions related to CD playback and system settings, as per your original stereo system's capabilities.

MAINTENANCE

- **Cleaning:**

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these may damage the surface or internal components.

- **Battery Replacement:**

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).

If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

- **Storage:**

Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control works intermittently.	Weak batteries or obstruction between remote and stereo system.	Replace batteries. Ensure a clear line of sight to the stereo system's infrared receiver.
Certain buttons do not respond.	Dirt or debris under the button, or internal malfunction.	Clean the remote surface. If problem persists, the remote may need replacement.

SPECIFICATIONS

Feature	Detail
Brand	Generic
Compatible Devices	Technics ST-CH510, RAK-CH202WH, SC-CH770, SC-EH60 CD Stereo Systems
Special Feature	No additional programming required
Color	As shown (typically black/dark grey)
Max Number of Supported Devices	1
Power Source	2 x AAA Batteries (not included)
ASIN	B0D89MMBRL
Date First Available	June 28, 2024
Manufacturer	Generic

WARRANTY AND SUPPORT

As a generic replacement product, specific warranty details may vary by retailer. Please refer to your purchase receipt or contact the seller directly for information regarding warranty coverage and return policies.

For technical support or further inquiries, please contact the seller through the platform where the purchase was made.

