



[Manuals.plus](#) /

› [EVER ADVANCED](#) /

› EVER ADVANCED Folding Push Wagon with Brakes Instruction Manual

EVER ADVANCED EA-TR-21830

EVER ADVANCED Folding Push Wagon with Brakes Instruction Manual

Model: EA-TR-21830

INTRODUCTION

Thank you for choosing the EVER ADVANCED Folding Push Wagon. This manual provides essential information for the safe and efficient use of your wagon. Designed for versatility, this wagon features both push and pull handles, all-terrain wheels with brakes, and a collapsible design for easy storage and transport. Please read these instructions carefully before initial use and retain them for future reference.

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 330 pounds (150 kg).
- This wagon is not intended for transporting children or pets without proper safety restraints and supervision.
- Always engage the wheel brakes when the wagon is stationary, especially on inclines.
- Ensure all parts are securely locked in place before use.
- Avoid sharp objects that could puncture the fabric.
- Keep hands and fingers clear of moving parts during folding and unfolding.
- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

SETUP AND UNFOLDING

The EVER ADVANCED Folding Push Wagon requires no assembly and is designed for quick setup. Follow these steps to unfold your wagon:

1. Place the folded wagon on a flat, stable surface.
2. Release the side lock that keeps the wagon in its folded position.
3. Gently pull the sides of the wagon outwards until it fully expands.
4. Press down firmly on the center of the wagon's base until it lies flat and is securely locked.

5. Adjust the push and pull handles to your desired height and angle by pressing the buttons on either side of the armrest for the push handle, or by holding the extendable handle for the pull handle.
6. Ensure all four wheels are securely attached. The quick-release wheels can be detached by pressing a button for compact storage, and reattached by aligning and pushing them into place until they click.



The wagon unfolds easily for immediate use.

OPERATING INSTRUCTIONS

Push and Pull Handles

Your wagon is equipped with both a push handle and a pull handle for versatile maneuvering. Both handles are adjustable to accommodate different user heights and preferences.

- **Push Handle:** Located at one end, this handle allows you to push the wagon like a stroller. Press the buttons on either side of the armrest to adjust its angle.
- **Pull Handle:** Located at the opposite end, this extendable handle allows you to pull the wagon. Hold the handle and extend it to your desired length.



The wagon features both push and pull handles for flexible use.

All-Terrain Wheels and Brakes

The wagon features large, all-terrain wheels designed for various surfaces. The front wheels rotate 360 degrees for easy

steering and are equipped with brakes.

- **Brakes:** To engage the brakes, press down on the red lever located on each front wheel. To release, lift the lever. Always engage brakes when loading/unloading or when the wagon is stationary.
- **Steering:** The 360-degree swivel front wheels allow for smooth turns and easy navigation.
- **Detachable Wheels:** For more compact storage, the wheels can be quickly detached by pressing the release button on each wheel.



Detail of the all-terrain wheel with brake mechanism.

Storage and Capacity

The wagon offers a large capacity and multiple storage options:

- **Main Compartment:** Measures 42.5" L x 20.9" W x 27.2" H when open, providing ample space for items.
- **Cup Holders:** Two integrated cup holders are available for beverages.
- **Side Pockets:** Multiple side pockets are included for organizing smaller items.
- **Zip Design:** The bottom of the wagon features a zip design, allowing for storage of longer items or easier access.

MULTI-FUNCTION STORAGE

2 Cup
Holders




Hookable
Large Pockets



Adjustable
Side Pockets



The wagon provides ample storage with cup holders and side pockets.

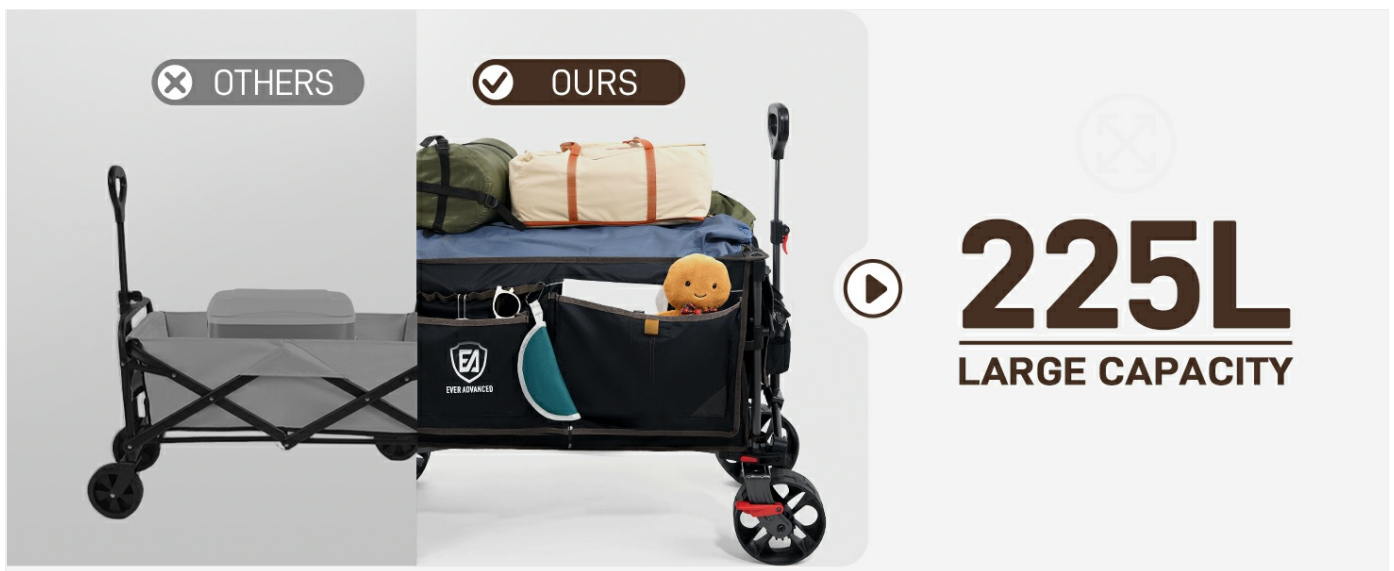

The convenient zip design allows for easy access or storage of long items.

Folding for Storage

To fold the wagon for compact storage:

1. Ensure the wagon is empty and clean.
2. Lift the center pull tab located in the middle of the wagon's base.
3. Push the sides of the wagon inwards until it collapses.
4. Secure the wagon in its folded position using the side lock.
5. For maximum compactness, detach the wheels if desired.



The wagon folds compactly for easy storage and transport.

MAINTENANCE

- **Cleaning:** Wipe down the fabric with a damp cloth and mild soap. Allow to air dry completely. Do not use harsh chemicals or abrasive cleaners.
- **Wheels:** Regularly check wheels for debris (e.g., mud, sand, small stones) and clean as needed to ensure smooth operation.
- **Storage:** Store the wagon in a dry, cool place away from direct sunlight when not in use to prolong its lifespan.
- **Fabric:** The wagon is made with superior fabric for durability. Avoid prolonged exposure to extreme weather

conditions.

PUSH & PULL

PUSH HANDLE

Press the buttons on either side of the armrest to adjust



PULL HANDLE

Hold the extendable handle to adjust



The wagon features durable, high-quality fabric.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not unfold or fold smoothly.	Center pull tab not fully engaged/disengaged; side lock engaged; debris in folding mechanism.	Ensure the center pull tab is fully lifted/pressed. Check if the side lock is released. Clear any obstructions from the folding joints.
Wheels are difficult to turn or roll.	Debris caught in wheels; brakes engaged; wheels not properly attached.	Remove any debris from the wheels and axles. Ensure brakes are disengaged. Verify wheels are securely clicked into place.
Handles are difficult to adjust.	Adjustment buttons/mechanisms are stuck or dirty.	Press adjustment buttons firmly. Clean any dirt or grit from the handle adjustment points.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Unfolded)	42.5"D x 20.9"W x 27.2"H
Product Dimensions (Folded)	17.9"L x 8.3"W x 23.8"H
Weight Capacity	330 Pounds
Item Weight	28.7 Pounds
Material	Metal (Frame: Iron), Fabric
Color	Black
Wheels	4 All-Terrain Wheels, Front 360° Swivel with Brakes
Handles	Adjustable Push and Pull Handles (Handle Material: Aluminum)

Feature	Detail
Special Features	Built-In Cup Holders, Multiple Side Pockets, Convenient Zip Design, Foldable
Model Number	EA-TR-21830
UPC	198715717617



Detailed dimensions and specifications of the wagon.

OFFICIAL PRODUCT VIDEO



Official video demonstrating the EVER ADVANCED Portable Push Wagon for shopping and camping.

WARRANTY AND SUPPORT

EVER ADVANCED products are designed for durability and performance. For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided with your purchase or visit the official EVER ADVANCED website. Please retain your proof of purchase for warranty claims.

