

Dragon Touch Modern 19

Dragon Touch 19-inch WiFi Digital Picture Frame User Manual

Model: Modern 19

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your Dragon Touch 19-inch WiFi Digital Picture Frame. This device allows you to easily share and display photos and videos remotely via the Vphoto App, connecting you with family and friends from anywhere. It features a large FHD IPS screen and 64GB of internal storage.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.



Image: Overview of the Dragon Touch Digital Picture Frame and its accessories, including dimensions (17.4" x 13.7" with a 19" screen), a remote control, power adapter, stand, mounting screws, USB cable, and the user's guide.

- 1x Dragon Touch 19-inch WiFi Digital Picture Frame
- 1x Remote Control
- 1x Power Adapter
- 1x Stand
- 2x Screws (for wall mounting)
- 1x USB Cable
- 1x User's Guide

SETUP

Follow these steps to set up your digital picture frame for the first time.

1. **Power On:** Connect the power adapter to the frame and plug it into a power outlet. The frame will automatically power on.

- Initial Configuration:** Follow the on-screen prompts to select your language, time zone, and connect to a Wi-Fi network. A stable Wi-Fi connection is required for remote photo sharing.
- Download Vphoto App:** On your smartphone or tablet, download the "Vphoto" app from the App Store (iOS) or Google Play Store (Android).
- Pair with App:** Open the Vphoto app and follow the instructions to create an account and pair your digital picture frame with the app. This typically involves scanning a QR code displayed on the frame's screen or entering a unique device ID.

Super Easy Setup

1

Download

Vphoto App



2

Connect

The frame to WiFi



3

Send

Your photos to the frame

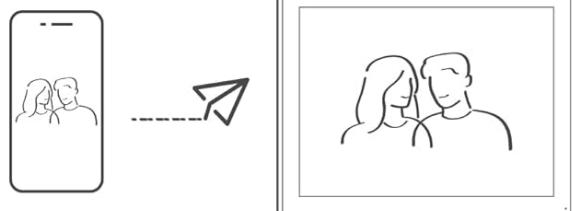


Image: A visual guide to the simple three-step setup process for the Dragon Touch Digital Picture Frame, showing the Vphoto app download, Wi-Fi connection, and photo sending.

Placement Options

- Tabletop Placement:** Attach the included stand to the back of the frame for stable placement on any flat surface.
- Wall Mounting:** The frame can be mounted on a wall using the pre-drilled holes and included screws. Ensure the wall can support the frame's weight and use appropriate wall anchors if necessary. The frame supports both portrait and landscape orientations.

OPERATING INSTRUCTIONS

Sending Photos and Videos via Vphoto App

The primary method for adding content to your frame is through the Vphoto app.

- Select Content:** Open the Vphoto app on your smartphone. Select the photos or short videos you wish to send from your device's gallery.
- Choose Frame:** Select your paired Dragon Touch frame as the destination.
- Send:** Tap the send button. The content will be uploaded to the cloud and then automatically displayed on your frame.



Image: The Dragon Touch Digital Picture Frame showcasing a wedding photo, alongside a smartphone demonstrating the Vphoto app's photo selection and sharing capabilities, and the included remote control.

Remote Control Functions

Use the included remote control to navigate menus, adjust settings, and control playback on your frame.

- **Navigation Buttons:** Use arrow keys to move through menus and select options.
- **OK Button:** Confirm selections.
- **Back Button:** Return to the previous screen.
- **Menu Button:** Access the main settings menu.
- **Play/Pause:** Control slideshow playback.
- **Volume:** Adjust audio volume for videos.

Multiplied Control



Remote control



Vphoto APP



Without
Touch Screen



Image: A user operating the Dragon Touch Digital Picture Frame with its remote control, highlighting the non-touchscreen nature of the device and its multiple control options.

Automatic Features

- **Auto-Rotate:** The frame automatically detects its orientation (portrait or landscape) and adjusts the display accordingly.
- **Brightness Adjustment:** An integrated light sensor automatically adjusts screen brightness based on ambient light conditions, optimizing viewing comfort and energy efficiency.

Storage and Display

The frame comes with 64GB of built-in memory, capable of storing over 100,000 pictures. Content is displayed on a 19-inch FHD IPS screen, offering vibrant colors and wide viewing angles.



Image: The Dragon Touch Digital Picture Frame showcasing a family photo, with an overlay illustrating the vast number of photos that can be stored thanks to its 64GB large capacity.

Super-size, super-cise



19-Inch
Large size



1280×960
High resolution



IPS Ultra-wide
Viewing angle



Others
TN Display



Modern 19
IPS Display

Image: A visual comparison demonstrating the superior display quality of the Modern 19 IPS screen compared to a standard TN display, emphasizing its 19-inch size, high resolution, and wide viewing angles.

MAINTENANCE

Proper care will ensure the longevity and optimal performance of your digital picture frame.

- Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquid directly onto the screen.
- Cleaning the Frame:** Wipe the frame's body with a dry, soft cloth. Avoid abrasive cleaners or solvents.
- Ventilation:** Ensure the ventilation holes on the back of the frame are not blocked to prevent overheating.
- Storage:** When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Dragon Touch Digital Picture Frame, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Incorrect Wi-Fi password, weak signal, or network issue.	Double-check the Wi-Fi password. Move the frame closer to the router. Restart your router and the frame. Ensure your Wi-Fi network is 2.4GHz (5GHz networks may not be supported).
Photos/Videos not appearing on frame.	Frame not paired with Vphoto app, app not connected to internet, or content not sent correctly.	Verify the frame is successfully paired in the Vphoto app. Ensure your phone has an active internet connection when sending. Check the Vphoto app for upload status.
Screen is too dim or too bright.	Automatic brightness adjustment or manual setting.	Check the ambient light sensor area for obstructions. Adjust brightness manually using the remote control if auto-brightness is not preferred.
Remote control not working.	Dead batteries or obstruction.	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the frame's IR receiver.

SPECIFICATIONS

Detailed technical specifications for the Dragon Touch 19-inch WiFi Digital Picture Frame.

Brand: Dragon Touch

Model Number: Modern 19

Screen Size: 19 Inches

Resolution: 1080p (FHD)

Display Type: IPS

Internal Storage: 64GB

Connectivity: Wi-Fi

Compatible Devices: Smartphone (via Vphoto App)

Control Method: Remote Control (Not Touchscreen)

Product Dimensions: 17.4 x 13.7 x 0.99 inches

Item Weight: 6.74 pounds

Color: black-19 inch-4:3

Manufacturer: Dragon Touch

First Available: June 28, 2024

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Dragon Touch website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: Visit the [Dragon Touch Store on Amazon](#) for FAQs and additional resources.

Protection Plans: Extended protection plans may be available for purchase. Refer to your retailer for details.

Related Documents

<p>DRAGON TOUCH</p> <p>CLASSIC 10 DIGITAL PHOTO FRAME</p>  <p>USER MANUAL [PDF]</p>	<p>Dragon Touch Classic 10 Digital Photo Frame User Manual</p> <p>User manual for the Dragon Touch Classic 10 Wifi Cloud Photo Frame, detailing setup, photo uploading via app, email, USB/SD card, music upload, key features like slideshows, multiple functions, general settings, technical specifications, and troubleshooting.</p>
<p>DRAGON TOUCH</p> <p>CLASSIC 10 DIGITAL PHOTO FRAME</p>  <p>USER MANUAL [PDF]</p>	<p>Dragon Touch Classic 10 Digital Photo Frame User Manual</p> <p>User manual for the Dragon Touch Classic 10 digital photo frame, detailing setup, photo and video uploading via VPHOTO app, email, and USB/SD card, key features like slideshows, multiple functions, general settings, technical specifications, and troubleshooting.</p>
<p>DRAGON TOUCH</p> <p>CLASSIC 15 PRO DIGITAL PHOTO FRAME</p>  <p>USER MANUAL [PDF]</p>	<p>Dragon Touch Classic 15 Pro User Manual: Setup, Features, and Troubleshooting Guide</p> <p>Get started with your Dragon Touch Classic 15 Pro digital photo frame. This user manual covers setup, photo and video uploading via VPhoto app, email, USB/TF card, key features, settings, and troubleshooting.</p>
<p>USER MANUAL [PDF]</p> <p>DRAGON TOUCH</p>	<p>Dragon Touch Classic 10 FHD Wifi Cloud Photo Frame User Manual</p> <p>This user manual provides comprehensive instructions for setting up, connecting, and operating the Dragon Touch Classic 10 FHD Wifi Cloud Photo Frame, including app integration, photo uploading methods, and system settings.</p>

Documents - Dragon Touch – Modern 19



[\[pdf\] User Manual Quick Start Guide](#)

50005000185 UM DragonTouch Modern 19 Amazon online V1 240729 DOWNLOAD manual

Dragon Touch modern19 cdn shopify s files 1 0671 4336 8882 |||

MODERN 19 DIGITAL PHOTO FRAME V1.0 Welcome to Dragon Touch Dragon Touch digital frame is designed ... he Box-----

----- 01 Your **Modern 19** -----

----- 01 ...

lang:en **score:29** filesize: 1.19 M page_count: 25 document date: 2024-09-04

