

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VIVOHOME](#) /

> [VIVOHOME 3-in-1 Multifunctional Stand Mixer VH292CA User Manual](#)

VIVOHOME VH292CA

VIVOHOME 3-in-1 Multifunctional Stand Mixer

MODEL: VH292CA

Introduction

Thank you for choosing the VIVOHOME 3-in-1 Multifunctional Stand Mixer. This versatile kitchen appliance combines the functions of a stand mixer, meat grinder, and juice blender, designed to simplify your food preparation tasks. With its powerful 650W motor and 6-speed control, it offers efficient and consistent performance for a variety of recipes.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, and clothing away from moving parts during operation.
- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Do not operate the appliance with a damaged cord or plug.
- Supervise children closely when the appliance is in use.
- Avoid contact with sharp blades of the blender and meat grinder.
- Ensure all attachments are securely locked in place before operating.

Product Overview

The VIVOHOME 3-in-1 Multifunctional Stand Mixer is equipped with a 650W pure copper motor and a 6-quart stainless steel mixing bowl. It features a tilt-head design for easy access to the bowl and attachments. The planetary mixing action ensures thorough mixing of ingredients. The unit also includes attachments for meat grinding and juice blending.



Image: The VIVOHOME 3-in-1 Multifunctional Stand Mixer, showcasing its main unit with the mixing bowl attached.



Image: Internal view highlighting the 650W pure copper motor, emphasizing high power and low noise.

Setup and Assembly

Before first use, ensure all packaging materials are removed and clean all removable parts according to the 'Maintenance' section.

Assembling the Stand Mixer:

1. Place the mixer on a stable, flat surface.
2. Lift the tilt-head by pushing the release lever.
3. Attach the desired mixing accessory (dough hook, flat beater, or wire whisk) by pushing it upwards onto the shaft and twisting to lock.
4. Place the 6-quart stainless steel bowl onto the base and twist clockwise to secure.
5. Lower the tilt-head until it locks into place.
6. Attach the splash guard over the bowl if desired.



Image: The dough hook, flat beater, and wire whisk attachments for various mixing tasks.

Attaching the Meat Grinder:

1. Ensure the mixer is unplugged.
2. Remove the front cover from the mixer head.
3. Insert the meat grinder attachment into the front port and twist to secure.
4. Place the feeding tray on top of the grinder.

Specifications

Voltage: 120V/60Hz

Power: 650W



Image: The meat grinder attachment securely installed on the front of the stand mixer.

Attaching the Juice Blender:

1. Ensure the mixer is unplugged.
2. Remove the top cover from the mixer head.
3. Place the 1.5L glass blender jar onto the top port and twist to secure.

6 QT Mixer Bowl

Simplifies various food preparations



Doughs and Batters



Cream and Egg Whites



Meat Mixtures

Image: The 1.5L glass juice blender attachment mounted on the top of the stand mixer.

Your browser does not support the video tag.

Video: Official VIVOHOME demonstration of the 3-in-1 stand mixer, showing assembly and use of mixing, grinding, and blending functions.

Operating Instructions

The mixer features a 6+P speed control knob. 'P' is for pulse function, providing short bursts of power.



Dough Hook

Master-level kneading


1-3 Speed



Flat Mixing

Large portions stirring

2-4 Speed

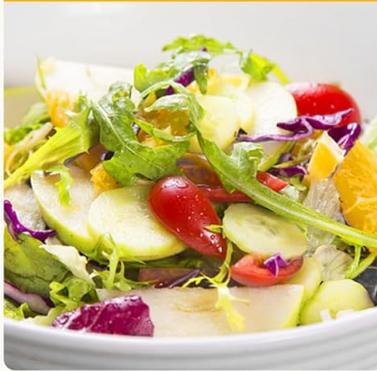

Wire Whisk

Dead-zone free mixing

5-6 Speed



Image: Close-up of the 6+P speed control knob on the mixer's side.

Stand Mixer Function:

- **Dough Hook (Speeds 1-3):** Ideal for kneading yeast dough for bread, pizza, or pasta.
- **Flat Beater (Speeds 2-4):** Suitable for mixing cookie dough, cake batters, mashed potatoes, or salads.
- **Wire Whisk (Speeds 5-6):** Perfect for whipping cream, egg whites, or light batters.

To operate, ensure the desired attachment is installed and the tilt-head is locked. Add ingredients to the 6-quart stainless steel bowl. Turn the speed control knob to the desired setting. The planetary mixing action ensures all ingredients are incorporated evenly.



6+P Speed

Switch speed with the knob

■ Meet different food needs



Image: Visual guide for using dough hook, flat beater, and wire whisk with corresponding speed ranges for various food preparations.

Meat Grinder Function:

With the meat grinder attachment installed, place cut meat pieces onto the feeding tray. Use the meat pusher to guide the meat into the grinder. Select a low speed (e.g., Speed 1-2) for grinding. The attachment comes with different size plates for coarse, medium, or fine grinding.

Juice Blender Function:

With the juice blender attachment installed, add fruits, vegetables, and liquid to the 1.5L glass jar. Secure the lid. Select a desired speed (e.g., Speeds 3-6) or use the 'P' (Pulse) function for quick blending. The blender is suitable for making juices, smoothies, and milkshakes.

Maintenance and Cleaning

Always unplug the appliance before cleaning. Most removable parts are dishwasher-safe for convenience.

- **Mixing Bowl, Dough Hook, Flat Beater, Wire Whisk:** These stainless steel and aluminum attachments are dishwasher-safe. For best results, rinse immediately after use.
- **Blender Jar:** The glass blender jar and its lid are dishwasher-safe. Ensure blades are thoroughly cleaned.

- **Meat Grinder Parts:** Disassemble the meat grinder. Wash all metal parts with warm soapy water and dry immediately to prevent rust. The plastic meat pusher can be washed by hand or in the dishwasher.
- **Main Unit:** Wipe the main motor unit with a damp cloth. Do not immerse in water.

Troubleshooting

- **Appliance does not start:** Check if the power cord is securely plugged in. Ensure the tilt-head is fully lowered and locked. Verify the speed control knob is not set to '0'.
- **Attachments not fitting:** Ensure the attachment is aligned correctly with the shaft or port and twisted to lock. Do not force attachments.
- **Motor overheating:** The mixer has overheat protection. If it stops, unplug it and let it cool down for at least 30 minutes before resuming use. Avoid overloading the mixer.
- **Excessive noise or vibration:** Ensure the mixer is on a stable, flat surface. Check that the mixing bowl and attachments are securely locked. Reduce the load if necessary.

Specifications

Brand	VIVOHOME
Model Name	Stand Mixer
Item Model Number	VH292CA-BL
Color	Blue
Product Dimensions	7"D x 14.4"W x 21.2"H
Capacity	5 Liters (6 Quart Bowl), 1.5 L (Blender)
Wattage	650 watts
Voltage	120 Volts
Controls Type	Knob (6+P Speed Settings)
Material	ABS, Steel, Aluminum
Special Features	Adjustable Speed Control, Anti-Skid, Low Noise, Overheat Protection, Removable Bowl
Is Dishwasher Safe	Yes (Bowl, Hook, Beater, Whisk, Blender Jar, some grinder parts)

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official VIVOHOME website. Keep your purchase receipt as proof of purchase for any warranty claims.

