

Manuals.plus /

› Haier /

› Haier 7 Kg Semi-Automatic Top Loading Washing Machine HTW70-178BKN User Manual

## Haier HTW70-178BKN

# Haier 7 Kg Semi-Automatic Top Loading Washing Machine

MODEL: HTW70-178BKN

User Instruction Manual

## 1. Introduction

This manual provides essential information for the safe and efficient operation of your new Haier 7 Kg Semi-Automatic Top Loading Washing Machine, model HTW70-178BKN. Please read these instructions carefully before using the appliance and retain them for future reference. This washing machine is designed for household use to wash various types of laundry.

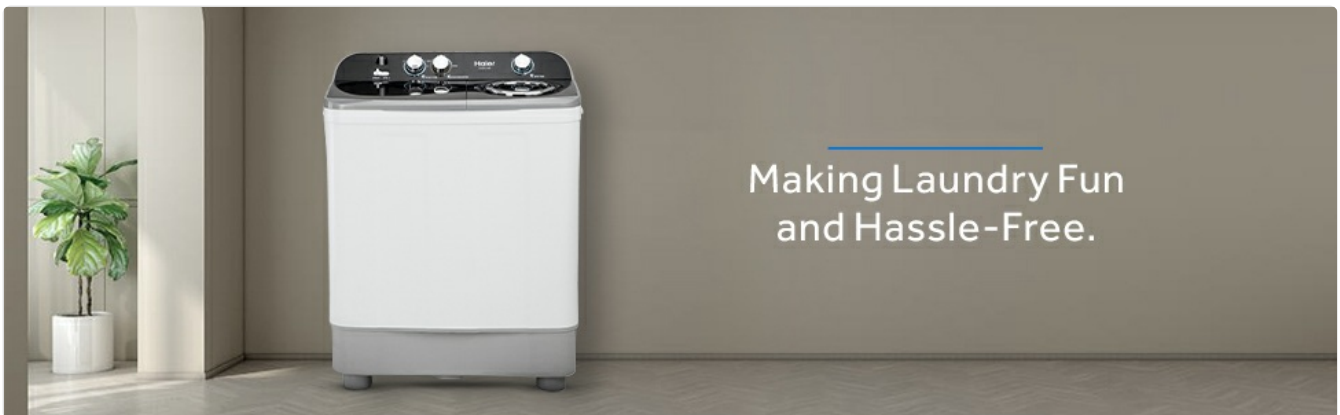


Image: Haier 7 Kg Semi-Automatic Washing Machine HTW70-178BKN. This image shows the washing machine positioned in a contemporary laundry area, highlighting its design and compact form factor suitable for home environments.

## 2. Safety Information

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Ensure the power supply voltage matches the rating label of the washing machine.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable liquids.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not immerse the electrical parts in water.
- Ensure proper grounding to prevent electric shock.

### 3. Product Overview

The Haier HTW70-178BKN is a 7 Kg semi-automatic top-loading washing machine designed for efficient and convenient laundry care. Key components and features include:

- **Capacity:** 7 Kilograms, suitable for large families.
- **Energy Rating:** 5 Star, indicating high energy efficiency.
- **Pulsator:** Anti-Bacterial Vortex Pulsator for effective cleaning and hygiene.
- **Filter:** Magic Filter to collect lint and debris.
- **Spin Speed:** 1300 RPM for faster drying.
- **Body Material:** Durable plastic body with an anti-rust cabinet.
- **Display:** LED Display for easy monitoring of wash cycles.
- **Special Features:** Toughened Glass lid, Softfalling lid, Spray function, Anti-Rat Mesh, Castors for mobility, and a Buzzer for cycle completion.



Image: Anti-Bacterial Vortex Pulsator. This image highlights the pulsator design, which creates a strong water vortex for thorough cleaning and features anti-bacterial properties.



Image: Key Features Overview. This image displays the front of the washing machine and points out several important features: the spray function, anti-rat mesh, castors for easy movement, and the magic filter for lint collection.



Image: Toughened Glass Lid. This image provides a top-down view of the washing machine, emphasizing the durable toughened glass lid, which offers both safety and a premium aesthetic.

## 4. Setup and Installation

Before operating your washing machine, ensure it is properly installed according to these guidelines:

### 4.1 Unpacking

- Carefully remove all packaging materials.
- Check for any damage during transit. If damaged, contact customer service immediately.
- Ensure all included components are present: Drain Hose, Fill Hose.

### 4.2 Placement

- Place the machine on a firm, level surface to minimize vibration and noise.
- Ensure adequate space around the machine for ventilation and operation.
- The machine is equipped with castors for easy movement, but ensure it is stable during operation.

### 4.3 Water Connection

- Connect the fill hose to a water tap with appropriate pressure.
- Ensure all connections are tight to prevent leaks.

### 4.4 Drain Connection

- Attach the drain hose securely to the machine and direct it to a suitable drainage point.
- Ensure the drain hose is not kinked or blocked.

### 4.5 Electrical Connection

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.



Image: Anti-Rat Mesh. This image provides a close-up of the protective anti-rat mesh located at the bottom of the washing machine, designed to prevent rodents from entering and damaging internal components.

## 5. Operating Instructions

Follow these steps for effective washing:

## 5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Empty pockets and close zippers and hooks.
- Place laundry loosely into the wash tub, ensuring not to overload.

## 5.2 Adding Detergent and Water

- Add the appropriate amount of detergent to the wash tub.
- Fill the wash tub with water to the desired level using the water level selector.

## 5.3 Selecting a Wash Program

The machine offers 3 wash programs:

- **Standard:** For regular daily laundry.
- **Strong:** For heavily soiled items.
- **Drain:** To drain water from the tub.

Select the desired program using the control panel. An average load typically completes in 40 minutes.

## 5.4 Starting the Wash Cycle

- Press the **On/Off Button** to power on the machine.
- Press the **Start/Pause Button** to begin the selected wash cycle.
- The LED display will show information about the wash cycle and remaining time.

## 5.5 Spin Drying

- After the wash cycle, transfer laundry to the spin tub.
- Close the spin tub lid securely.
- Select the spin function and start. The 1300 RPM spin speed aids in faster drying.

# 6. Maintenance and Care

---

Regular maintenance ensures optimal performance and longevity of your washing machine.

## 6.1 Cleaning the Magic Filter

- Periodically remove and clean the Magic Filter to prevent lint buildup.
- Rinse the filter under running water and reinsert it properly.

## 6.2 Cleaning the Exterior

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

## 6.3 Winter Storage (if applicable)

- If storing in freezing temperatures, drain all water from the hoses and tubs to prevent damage.

# 7. Troubleshooting

---

Refer to this section for solutions to common operational issues. If the problem persists, contact customer service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Lid not closed properly.	Check power connection; Restore power; Ensure lid is fully closed.
Water not filling	Water tap closed; Water supply cut off; Fill hose kinked.	Open water tap; Check water supply; Straighten fill hose.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten/clear drain hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Overloaded or unbalanced laundry.	Adjust leveling feet; Redistribute laundry evenly.
Spin tub not spinning	Lid not closed; Overloaded.	Ensure spin tub lid is closed; Reduce laundry load.

## 8. Specifications

<b>Brand</b>	Haier
<b>Model Number</b>	HTW70-178BKN
<b>Capacity</b>	7 Kilograms
<b>Energy Rating</b>	5 Star
<b>Operation Mode</b>	Semi Automatic
<b>Maximum Rotational Speed</b>	1300 RPM
<b>Number of Washing Cycles</b>	3 (Standard, Strong, Drain)
<b>Drum Material</b>	Plastic
<b>Product Dimensions (LxWxH)</b>	46.2 x 78 x 93 Centimeters
<b>Item Weight</b>	22 Kilograms
<b>Included Components</b>	Drain Hose, Fill Hose
<b>Special Feature</b>	Protective Rat Mesh, Anti-Bacterial Vortex Pulsator, Magic Filter, Castors, Toughened Glass
<b>Annual Energy Consumption</b>	0.01 Kilowatt Hours per 100 cycles

## 9. Warranty Information

Your Haier washing machine comes with the following warranty:

- **Product Warranty:** 2 years comprehensive warranty on the product.
- **Motor Warranty:** 5 years warranty on the motor.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal household use. It does not cover damage caused by misuse, improper installation, or unauthorized repairs.



Image: Warranty Details. This graphic visually confirms the warranty coverage: 2 years comprehensive warranty on the entire product and an extended 5-year warranty specifically for the motor.

## 10. Customer Support

For any queries, service requests, or technical assistance, please contact Haier Customer Care:

- **Customer Care Numbers:** 1800-102-9999 / 1800-102-9999
- **Email:** info@haierindia.com
- **Manufacturer Address:** Haier Appliances India Pvt Ltd, Plot No. H-6, DMIC Integrated Industrial Township, Greater Noida, Uttar Pradesh – 201308, India.

When contacting support, please have your product model number (HTW70-178BKN) and purchase details ready.

