

[Manuals.plus](#) /

› [WAIKIL](#) /

› WAIKIL WL87 Foil Shaver User Manual

WAIKIL WL87

WAIKIL WL87 Foil Shaver User Manual

Model: WL87

INTRODUCTION

Thank you for choosing the WAIKIL WL87 Foil Shaver. This electric shaver is designed to provide a close and comfortable shaving experience, adapting to the contours of your face. It features a pop-up detail trimmer for precise styling, convenient USB charging, and is suitable for both wet and dry use. Please read this manual carefully before using the shaver to ensure proper operation and maintenance.

Three-blade head design

Self-grinding floating three-blade head, quickly enhance the shaving experience

Extra clean and comfortable

Image: The WAIKIL WL87 shaver features a self-grinding floating three-blade head design for an enhanced shaving experience.

PACKAGE CONTENTS

Upon unpacking, please ensure all the following items are present:

- WAIKIL WL87 Foil Shaver (Beard trimmer) x 1
- User Manual x 1
- Cleaning Brush x 1
- USB Charging Cable x 1
- Protective Cover x 1

SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or damage, please observe the following safety precautions:

- Do not immerse the charging cable or adapter in water or other liquids.

- Keep the shaver and charging cable away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the provided USB charging cable.
- Do not use the shaver if the foil or blades are damaged, as this may cause injury.
- Always ensure the shaver is turned off before cleaning or maintenance.

SETUP

Charging the Shaver

Before first use, fully charge the shaver. The WAIKIL WL87 features quick charging and a long-lasting battery.

1. Connect the provided USB charging cable to the charging port on the shaver.
2. Plug the other end of the USB cable into a compatible USB power source, such as a computer, mobile power bank, or car charger.
3. The indicator light on the shaver will illuminate to show the charging status. A full power alert will be indicated when charging is complete.

Indicator light reminder

Different states, the corresponding logo indicator will light up can be more intuitive according to the prompt to identify the current state of the product.



Image: The indicator light provides visual cues for full power and charging status.



Image: The shaver can be conveniently charged via USB from various sources, offering approximately 60 days of use on a full charge (based on 1 minute of shaving per day).

OPERATING THE SHAVER

Basic Shaving

The WAIKIL WL87 electric foil shaver is designed to provide a smooth finish by staying close to the skin and curving around facial contours.

1. Ensure your face is clean and dry for a dry shave, or apply shaving foam/gel for a wet shave.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle to your skin and move it in short, circular, or linear motions against the direction of hair growth.
4. Apply gentle pressure; do not press too hard, as this can irritate the skin and reduce shaving efficiency.
5. After shaving, press the power button to turn off the shaver.

Good match for business trip

Small size, easy
to carry, travel can also enjoy clean shave

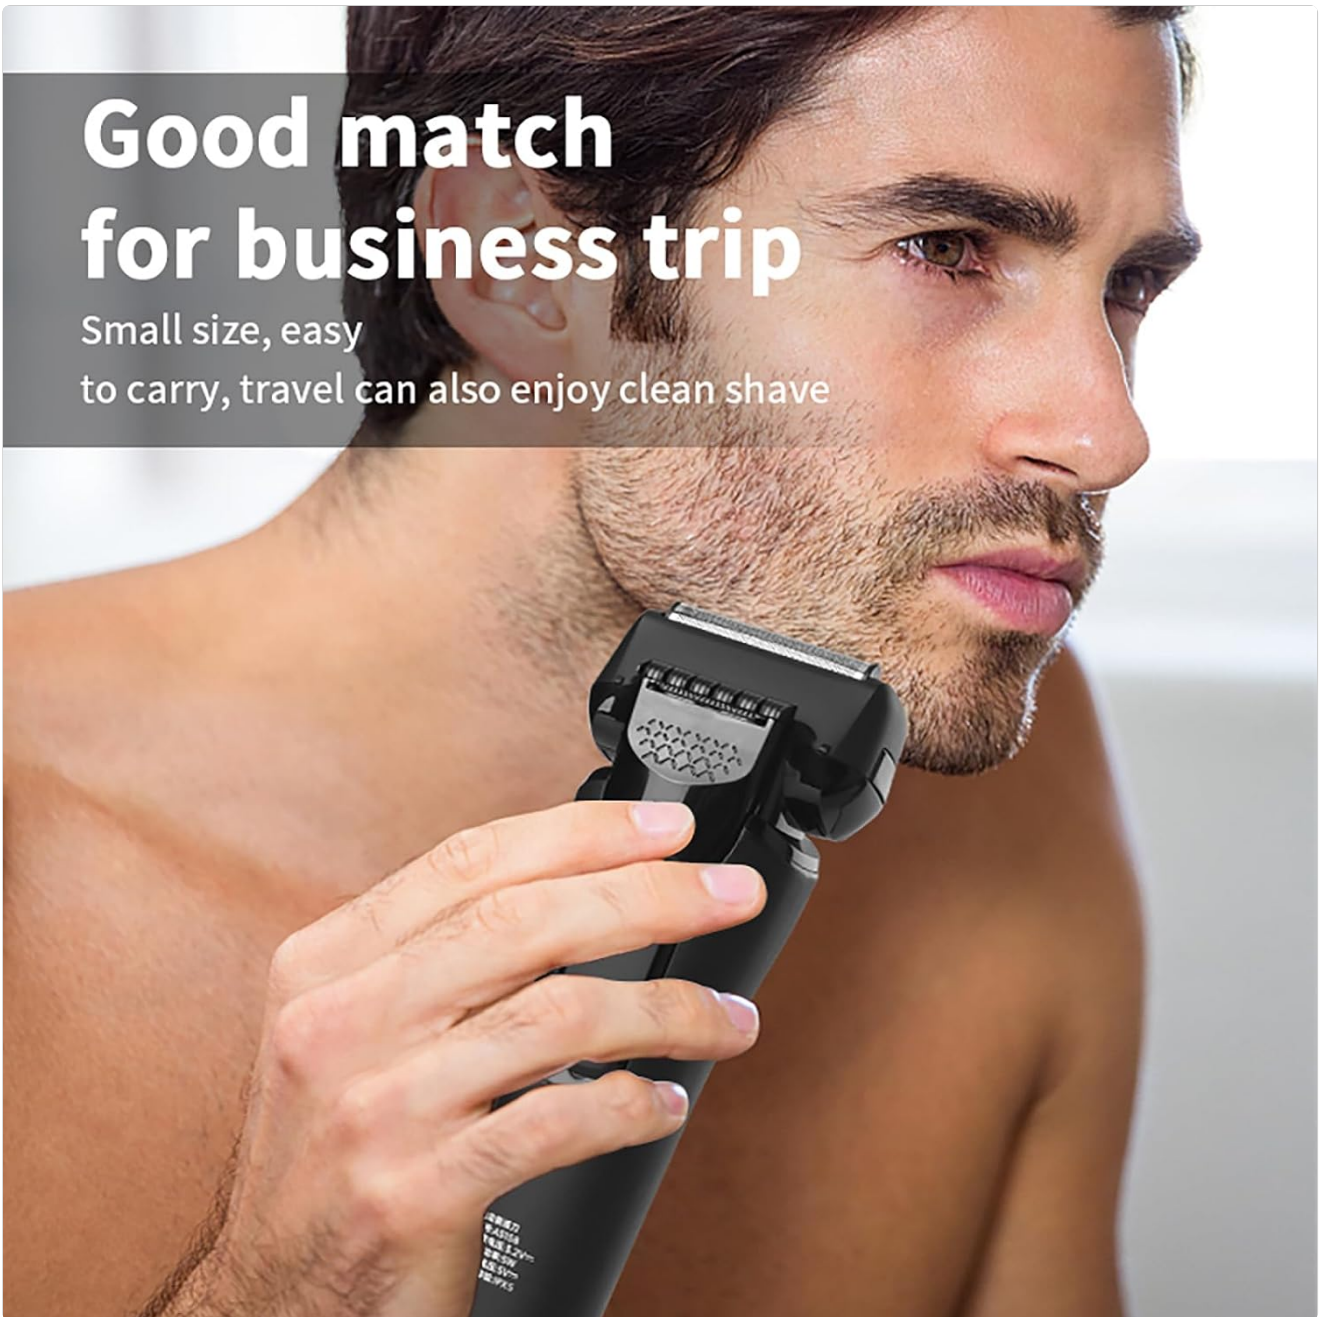


Image: A man demonstrating the use of the WAIKIL WL87 shaver for a clean shave.

Using the Pop-Up Detail Trimmer

The integrated pop-up detail trimmer is ideal for precise styling of facial hair, sideburns, and mustaches.

1. Locate the trimmer release button on the back of the shaver.
2. Slide the button upwards to engage the pop-up trimmer.
3. Turn on the shaver.
4. Use the trimmer to define edges, trim longer hairs, or shape sideburns.
5. After use, slide the trimmer back into its closed position.

Push-out sideburn cutter

Hair styling, hair styling, and hairdressing



Image: The push-out sideburn cutter allows for precise hair styling and trimming.

Wet and Dry Use

The WAIKIL WL87 shaver is IPX5 waterproof, allowing for both wet and dry shaving. This means it can be used in the shower or with shaving cream/gel for added comfort.

- **Dry Shave:** For a quick and convenient shave, use the shaver on dry skin.
- **Wet Shave:** For a refreshing shave, use with water, shaving foam, or gel. The shaver can be rinsed under running water for cleaning after a wet shave.

MAINTENANCE

Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and disconnect it from the charging cable.
2. Remove the protective cover.

- 3. Press the release buttons on the side of the shaver head to detach the foil frame.
- 4. Tap out any loose hair clippings.
- 5. Rinse the shaver head and the inner cutting blades under warm running water.
- 6. Use the provided cleaning brush to remove any stubborn hair particles from the blades and foil.**Do not use strong detergents or other chemicals**, as these can damage the shaver.
- 7. Allow all parts to air dry completely before reassembling.
- 8. Reattach the foil frame and protective cover.

Blade and Foil Replacement

For continued optimal shaving performance, it is recommended to replace the shaver foil and cutter block approximately every 12-18 months, or sooner if you notice reduced performance or visible wear. Replacement parts can be purchased from authorized WAIKIL retailers.

TROUBLESHOOTING

If you encounter any issues with your WAIKIL WL87 Foil Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully using the provided USB cable.
	Shaver is locked (travel lock).	Press and hold the power button for 3 seconds to unlock.
Poor shaving performance / pulling hair.	Foil or blades are dirty or worn.	Clean the shaver head thoroughly. If performance does not improve, consider replacing the foil and cutter block.
	Battery is low.	Charge the shaver.
Battery not charging.	USB cable or power source issue.	Ensure the USB cable is securely connected. Try a different USB port or power adapter.
	Charging port is dirty.	Gently clean the charging port with a dry, soft brush.

SPECIFICATIONS

Feature	Description
Model Number	WL87
Brand	WAIKIL
Power Source	Battery Powered
Special Features	Battery Indicator, Cordless, Ergonomic Design, Fast Charging, High Efficiency
Recommended Uses	Beard, Face

Feature	Description
Waterproof Rating	IPX5 (Supports full body cleaning)
Included Components	Shaver, Manual, Cleaning Brush, USB Cable, Protective Cover

WARRANTY AND SUPPORT

WAIKIL is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, if you have any questions or require assistance with your electric shaver, please contact our customer service team. We aim to provide a satisfactory reply within 24 hours.

For support, please refer to the contact information provided at the point of purchase or on the official WAIKIL website.

© 2024 WAIKIL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question