

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SoBuy](#) /

› [SoBuy BZR158-W Bathroom Column Cabinet Instruction Manual](#)

SoBuy BZR158-W

SoBuy BZR158-W Bathroom Column Cabinet Instruction Manual

Model: BZR158-W

[Contents](#) [Setup](#) [Operation](#) [Overview](#) [Safety](#) [Package](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. PRODUCT OVERVIEW

The SoBuy BZR158-W Bathroom Column Cabinet is a versatile storage solution designed for optimal space utilization in bathrooms. This tall, narrow cabinet features a single door with an integrated laundry basket and three open compartments, providing both concealed and accessible storage. Its elegant design with subtly crafted wood patterns adds a sophisticated touch to any bathroom decor.



Image 1.1: The SoBuy BZR158-W Bathroom Column Cabinet, showcasing its design and storage capabilities within a bathroom environment.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Tipping Safety:** This cabinet is equipped with an anti-tipping safety feature. It is crucial to secure the cabinet to the wall using the provided hardware to prevent accidental tipping, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 70 pounds (approximately 31.75 kg) for the entire unit. Distribute weight evenly across shelves and compartments.
- **Assembly:** Assemble the product on a clean, flat, and soft surface to prevent scratches. Ensure all screws and fasteners are securely tightened before use.
- **Placement:** Place the cabinet on a level surface to ensure stability. Avoid placing it in areas with excessive moisture or direct sunlight to prolong its lifespan.
- **Children Safety:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb on or play with the cabinet.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact SoBuy customer support.

Component	Description	Quantity
Cabinet Panels	MDF (E1) wood panels for the cabinet structure.	Various
Laundry Basket	Non-woven textile basket for laundry.	1
Hardware Pack	Screws, dowels, anti-tipping kit, etc.	1 set
Instruction Manual	Assembly guide.	1



Image 3.1: An exploded view illustrating the various components included in the package for assembly.

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Please follow the steps carefully. A Phillips head screwdriver (not included) is required.

- 1. Prepare the Area:** Clear a spacious, clean, and soft area for assembly to prevent damage to the cabinet parts.
- 2. Identify Components:** Lay out all panels and hardware. Refer to the component diagrams (e.g., Image 3.1) to identify each part.
- 3. Assemble the Base:** Attach the side panels to the bottom panel using the designated screws and dowels. Ensure they are flush and secure.
- 4. Install Shelves:** Insert the adjustable shelf pins into the desired holes for the open compartments. Place the shelves onto the pins.
- 5. Attach Back Panel:** Secure the back panel to the assembled frame using small nails or screws.
- 6. Assemble Door Mechanism:** Attach the hinges to the cabinet door and then to the main cabinet frame. Ensure the door opens and closes smoothly.
- 7. Insert Laundry Basket:** Place the non-woven textile laundry basket into its designated compartment behind the door.
- 8. Attach Anti-Tipping Kit:** Secure the anti-tipping strap to the top rear of the cabinet and then to a solid wall stud using the provided wall anchors and screws. This step is critical for safety.
- 9. Final Check:** Verify that all connections are tight and the cabinet is stable.



Image 4.1: Illustration of assembling the cabinet's base structure.



Image 4.2: Diagram detailing the process of installing shelves within the cabinet.

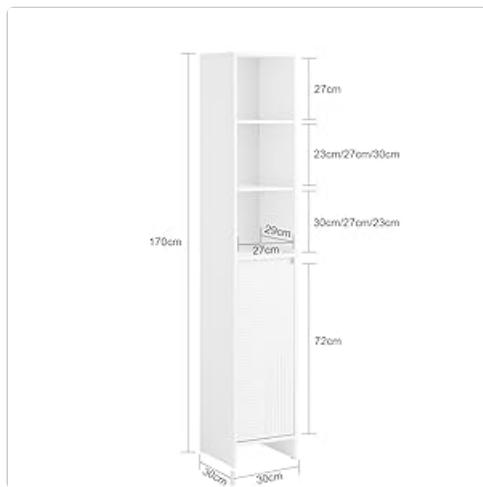


Image 4.3: Illustration of attaching the door and integrating the laundry basket.

5. OPERATING INSTRUCTIONS

The SoBuy BZR158-W cabinet is designed for convenient storage in your bathroom.

- **Open Compartments:** Use the three open compartments for items you need to access frequently, such as toiletries, towels, or decorative items. The shelf height is adjustable to accommodate different item sizes.
- **Laundry Basket:** The bottom compartment features a door that opens to reveal a non-woven textile laundry basket. Simply open the door to place dirty laundry inside, keeping it out of sight yet easily accessible.

accessible.

- **Adjustable Shelf:** The internal shelf in the open section can be adjusted to 3 different heights, allowing customization for various items like towels, cleaning supplies, or toilet paper.



Image 5.1: A detailed view of the open compartments, showing how items can be stored and displayed.



Image 5.2: The integrated laundry basket, accessible by opening the bottom door, designed to keep dirty laundry discreetly stored.

6. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your SoBuy cabinet.

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent water damage or staining.
- **Laundry Basket:** The non-woven textile laundry basket can be removed for cleaning. Spot clean with a mild detergent and air dry. Do not machine wash.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Environment:** Maintain a stable room temperature and humidity. Avoid placing the cabinet near heat sources or in direct sunlight, which can cause warping or fading.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cabinet is wobbly/unstable.	Uneven floor; loose fasteners; anti-tipping kit not installed.	Ensure cabinet is on a level surface. Re-tighten all screws. Install the anti-tipping kit securely to the wall.
Door does not close properly.	Hinges are misaligned or loose; obstruction.	Check and adjust hinge alignment. Ensure no items are blocking the door's path.
Parts missing during assembly.	Packaging error.	Review the package contents list. Contact SoBuy customer support with the specific part number.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	SoBuy
Model Number	BZR158-W
Color	White
Dimensions (L x W x H)	30 x 30 x 170 cm (11.8 x 11.8 x 66.9 inches)
Item Weight	21.1 kg (46.5 lbs)
Maximum Weight Capacity	70 lbs (approx. 31.75 kg)
Material	Engineered Wood (MDF E1), Non-woven Textile (basket)
Special Feature	Anti-tipping safety included
Assembly Required	Yes



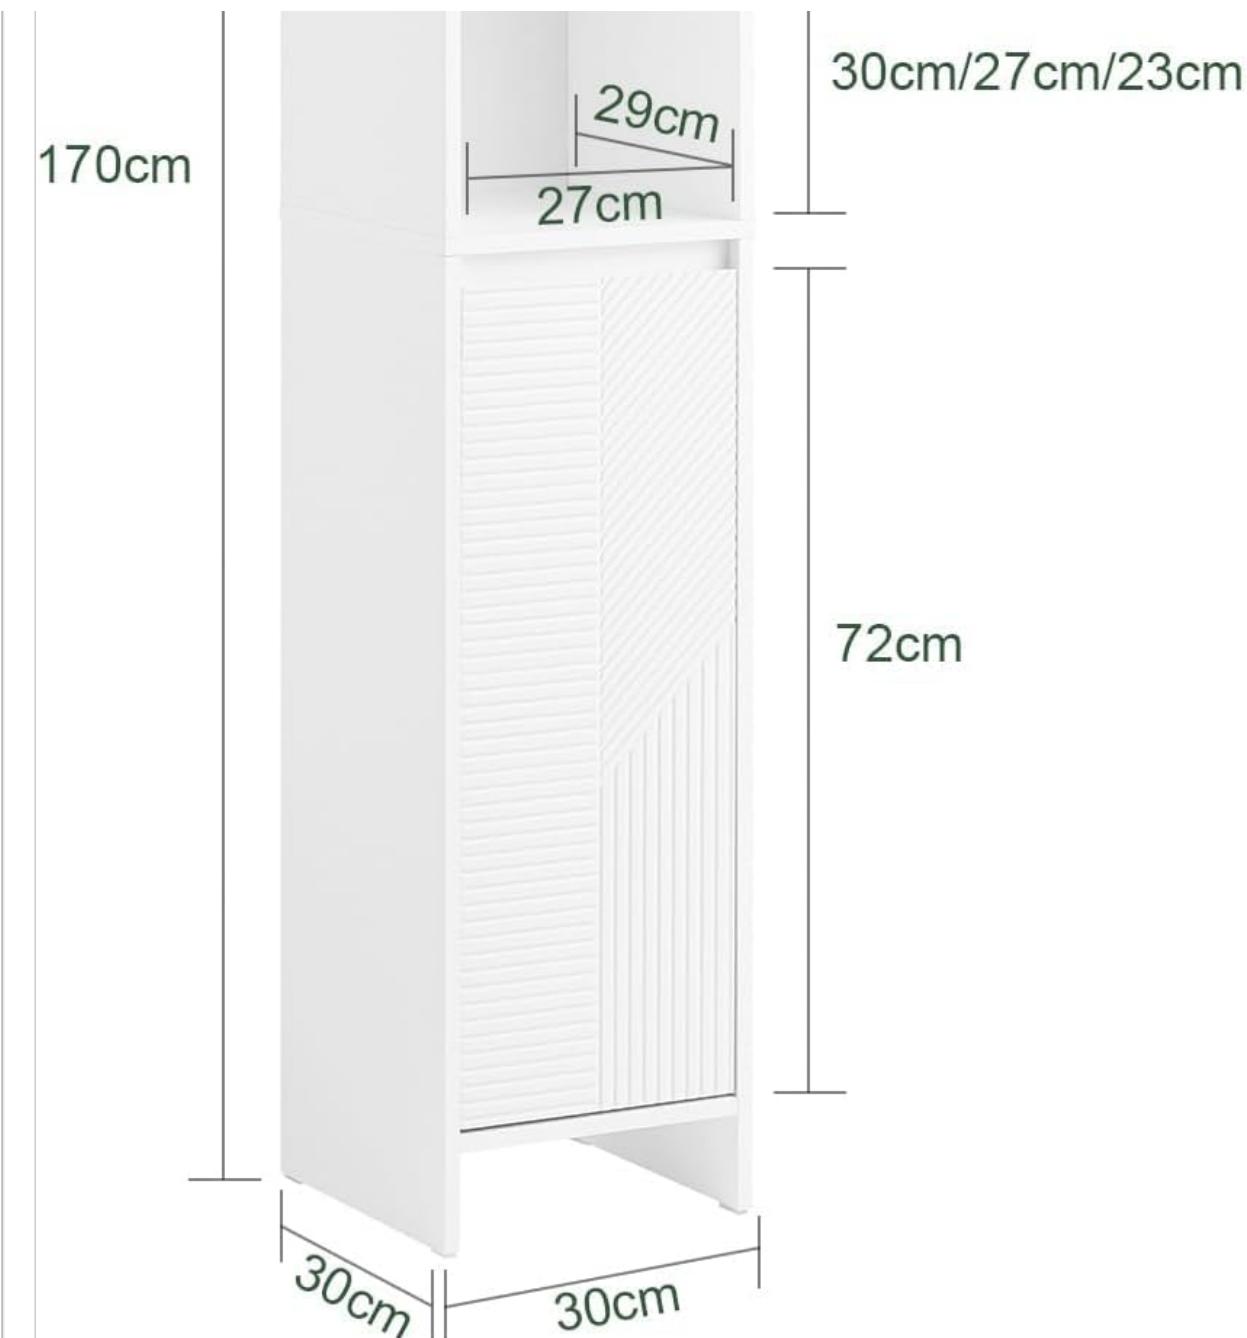


Image 8.1: Detailed dimensions of the SoBuy BZR158-W Bathroom Column Cabinet.

9. WARRANTY AND CUSTOMER SUPPORT

SoBuy is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase.

For any questions, missing parts, or concerns regarding your SoBuy BZR158-W Bathroom Column Cabinet, please contact SoBuy customer support through the retailer where you purchased the product or visit the official SoBuy website for contact information.

You can visit the [SoBuy Store on Amazon](#) for more information and support.

