

[Manuals.plus](#) /

› [Fisher-Price](#) /

› Fisher-Price Little People Friendly School Interactive Playset HHW07 User Manual

Fisher-Price HHW07

Fisher-Price Little People Friendly School

MODEL: HHW07 - INSTRUCTION MANUAL

Introduction

Welcome to the Fisher-Price Little People Friendly School! This interactive playset is designed to introduce toddlers and preschool children (ages 1-5 years) to the joys of learning and social interaction through engaging activities, music, sounds, and phrases. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure a safe and enjoyable play experience.



School playset with music, sounds, and activities

AGES
1-5Y

Image: A young child happily interacting with the Little People Friendly School playset, demonstrating its engaging features.

What's Included

- Little People Friendly School Playset (HHW07)
- 2 Little People Figures (e.g., Eddie and a teacher figure)
- 2 AA Batteries (pre-installed or included separately)



Folds for storage and comes with 2 figures

Image: The Little People Friendly School playset shown with the two included figures, ready for play.

Setup

1. **Unboxing:** Carefully remove all components from the packaging. Retain packaging for future reference or disposal.
2. **Adult Assembly:** Adult assembly is required. No tools are needed for assembly. Follow the visual guides on the packaging or included quick-start sheet for snapping components together.
3. **Battery Installation:** The playset requires 2 AA batteries. These are typically included. If replacement is needed, locate the battery compartment on the underside of the playset. Use a Phillips head screwdriver to open the compartment, insert new AA batteries observing polarity (+/-), and secure the cover.



Image: The product packaging, indicating adult assembly is required and no tools are needed.

Operating Instructions

The Little People Friendly School offers various interactive features to enhance learning and imaginative play:

- **Discovery Buttons:** Press the designated Discovery Buttons located around the playset to activate songs, sounds, and learning phrases. These buttons bring the schoolhouse to life and encourage exploration.
- **Seesaw Play:** Place a Little People figure on the seesaw and press down on one side to make it move up and down, accompanied by sounds.
- **Clock and Globe Interaction:** Press and turn the clock or globe elements to hear additional songs, sounds, and educational phrases related to time and the world.
- **School Bell:** Ring the metal bell at the top of the schoolhouse for a classic school sound effect.
- **Folding for Storage:** The playset is designed to fold for compact storage. Follow the instructions to collapse the sections when not in use.



**Press to
ride the
seesaw**



**Press and turn
for songs, sounds,
and phrases**

Image: The playset with visual callouts indicating the interactive seesaw, clock/globe, and bell features.



Ring the metal bell

Image: A close-up of a hand pressing the button to ring the metal bell on the playset.

Your browser does not support the video tag.

Video: Demonstration of the various interactive features and sounds of the Little People Friendly School playset.

Your browser does not support the video tag.

Video: An overview showcasing the engaging play patterns and educational aspects of the Friendly School playset.

Maintenance

- **Cleaning:** Wipe the playset and figures with a damp cloth and mild soap. Do not immerse in water. Avoid harsh cleaners or abrasives.
- **Battery Replacement:** If sounds or lights become faint or stop working, it's time to replace the batteries. Refer to the 'Setup' section for battery installation instructions. Always use fresh AA batteries.
- **Storage:** When not in use, store the playset in a clean, dry place away from direct sunlight and extreme temperatures. The playset can be folded for compact storage.

Troubleshooting

Problem	Solution
---------	----------

Problem	Solution
No sound or lights	◦ Check if batteries are correctly installed. ◦ Replace with fresh AA batteries. ◦ Ensure the playset is turned on (if applicable, though this model typically activates on interaction).
Intermittent sounds/lights	◦ Batteries may be low; replace them. ◦ Ensure battery compartment is securely closed.
Figures do not fit in designated spots	◦ Ensure you are using genuine Little People figures. ◦ Check for any obstructions in the seating areas.

Specifications

- **Model Number:** HHW07
- **Product Dimensions:** 13.5 x 45.5 x 17.5 cm (L x W x H)
- **Item Weight:** 1.12 kg
- **Batteries:** 2 AA batteries (included)
- **Recommended Age:** 1-5 Years
- **Release Date:** 30 August 2022

Warranty and Support

For any questions, concerns, or to inquire about warranty information, please contact Fisher-Price customer service. Refer to the contact information provided on the product packaging or visit the official Fisher-Price website for support details.