

BRANDT BT37028Q

BRANDT BT37028Q Top-Loading Washing Machine User Manual

Model: BT37028Q

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your BRANDT BT37028Q top-loading washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

The BRANDT BT37028Q is a top-loading washing machine with a 7 kg capacity and a spin speed of 1200 revolutions per minute. It features 15 programs, including a Hygiene Steam program and a 45-minute quick wash, designed to cater to various textile types while ensuring energy efficiency with its Class A rating. The induction motor contributes to quiet operation and enhanced durability.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords or adapters. Disconnect from power before cleaning or maintenance.
- **Water Connection:** Connect the water inlet hose to a cold water tap. Ensure all hose connections are tight to prevent leaks.
- **Placement:** Install the washing machine on a firm, level surface. Ensure adequate ventilation around the appliance. Do not install in areas where temperatures may fall below freezing.
- **Children and Vulnerable Persons:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised. Keep children away from the appliance during operation.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- **Maintenance:** Only perform maintenance described in this manual. For other repairs, contact qualified service personnel.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Remove any transport bolts or bracing from the rear of the machine. Keep packaging materials out of reach of children.

3.2 Placement

Place the washing machine on a solid, level floor. Adjust the leveling feet to ensure the appliance is stable and does not wobble. Ensure there is sufficient space around the machine for ventilation and access.

3.3 Water Connection

- Connect the supplied inlet hose to the cold water tap and the corresponding inlet valve on the back of the washing machine. Tighten connections securely by hand.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during the wash cycle. The drain hose should not be kinked or submerged in water.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate of the appliance.

3.5 First Use

Before washing clothes for the first time, run a short wash cycle without laundry and detergent to clean the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selector knob, function buttons, and a digital display. Refer to the image below for a visual guide.



Image 1: Control panel of the BRANDT BT37028Q washing machine. It shows a central rotary knob for program selection, a digital display indicating time, and various buttons for options like spin speed, temperature, and start/pause.

4.2 Loading Laundry

- Open the top lid of the washing machine.
- Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 7 kg.
- Close the lid securely.

4.3 Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to their

respective compartments. Refer to detergent packaging for dosage recommendations.

4.4 Selecting a Program

Turn the program selector knob to choose the desired wash program. The machine offers 15 standard programs, including:

- **Cotton:** For durable cotton items.
- **Synthetics:** For synthetic or mixed fabrics.
- **Delicates/Wool:** For sensitive items requiring gentle care.
- **Hygiene Steam:** Eliminates bacteria and germs at 40°C.
- **Quick Wash 45 minutes:** For lightly soiled items needing a fast wash.
- **Rinse & Spin:** For rinsing and spinning items separately.
- **Spin:** For draining water and spinning laundry.

Additional options such as temperature, spin speed, and delay start can be selected using the function buttons on the control panel.

4.5 Starting a Cycle

Press the 'Start/Pause' button to begin the selected wash cycle. The display will show the remaining time.

4.6 End of Cycle

Once the cycle is complete, the machine will signal with an audible alert (if enabled) and the display will indicate 'End'. Open the lid and remove your laundry promptly.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine. Always disconnect the appliance from the power supply before cleaning or performing maintenance.

5.1 Cleaning the Detergent Dispenser

Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing of the dispenser with a brush.

5.2 Cleaning the Drum

Run a 'Machine Clean' program (if available) or a hot wash cycle with a washing machine cleaner or a small amount of vinegar to prevent odors and maintain drum hygiene.

5.3 Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any residual water. Unscrew the filter cover and carefully remove any lint, coins, or foreign objects. Clean the filter under running water and reassemble securely.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Lid not closed; Program not selected; Start/Pause not pressed.	Check power supply; Close lid firmly; Select program; Press Start/Pause.
Water not filling	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain pump filter blocked.	Straighten hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Transport bolts not removed; Overloaded drum.	Adjust leveling feet; Remove transport bolts; Reduce laundry load.
Poor washing results	Incorrect program/temperature; Insufficient detergent; Overloading.	Select appropriate program; Use correct detergent dosage; Do not overload.

7. SPECIFICATIONS

Below are the technical specifications for the BRANDT BT37028Q washing machine:

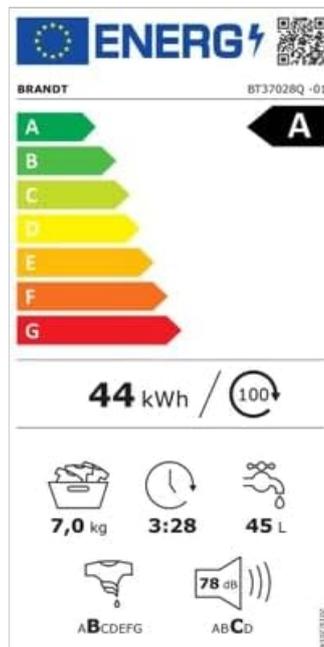


Image 2: Energy label for the BRANDT BT37028Q washing machine. It displays an energy efficiency rating of A, a capacity of 7.0 kg, energy consumption of 44 kWh per 100 cycles, water consumption of 45 liters per cycle, and a noise level of 78 dB.

Feature	Specification
Brand	BRANDT
Model Number	BT37028Q
Type	Top-Loading Washing Machine
Capacity	7 Kilograms
Spin Speed	1200 revolutions per minute (tr/min)
Energy Class	A

Feature	Specification
Noise Level (Spin)	78 Decibels
Dimensions (LxHxP)	40 x 87.5 x 61 cm
Number of Programs	15
Special Features	Hygiene Steam Program, Quick Wash 45 minutes
Motor Type	Induction
Material	Steel, Plastic
Weight	57.81 Kilograms

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This BRANDT BT37028Q washing machine comes with a manufacturer's commercial warranty of **2 years** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

8.2 Customer Support

For technical assistance, service requests, or inquiries regarding your appliance, please contact BRANDT customer support. Refer to the official BRANDT website or your purchase documentation for specific contact details, including phone numbers and online support portals.