

Nikon Z6III

Nikon Z6III Mirrorless Camera Instruction Manual

Model: Z6III

Brand: Nikon

1. PRODUCT OVERVIEW

The Nikon Z6III Mirrorless Camera is designed for professionals in photography and filmmaking. It features a 24.5MP partially-stacked CMOS sensor and the EXPEED 7 image processor, delivering high-quality stills and internal 6K60 and 4K120 video recording. The camera offers precise autofocus, a bright 5.76M-dot electronic viewfinder, and a durable, weather-sealed magnesium alloy body.



Figure 1.1: Front view of the Nikon Z6III Mirrorless Camera, showcasing the Z-mount and the partially-stacked CMOS sensor.

2. WHAT'S IN THE BOX

Your Nikon Z6III Mirrorless Camera bundle includes the following items:

- Nikon Z6III Mirrorless Camera Body
- Nikon NIKKOR Z MC 105mm f/2.8 VR S Macro Lens
- Nikon EN-EL15c Rechargeable Lithium-Ion Battery
- 64GB Memory Card
- USB-A to USB-C cable
- HDMI Cable
- Hand Strap
- Lens Cap Keeper
- Cleaning kit
- Memory Card Wallet
- USB Card Reader (SD/microSD)
- Video Tripod 72-Inch
- Flexible Vlogging Tripod
- Photo, Video, & Art Suite Deluxe Software
- 62mm Filter Kit
- Travel Bag
- Wireless Shutter Release - Universal

3. INITIAL SETUP

3.1. Charging the Battery

Before first use, fully charge the Nikon EN-EL15c Lithium-Ion Battery using the provided USB-A to USB-C cable and a compatible USB power adapter (not always included, check packaging). The charging indicator on the camera or charger will show the charging status.

3.2. Inserting Memory Cards

The Z6III supports SD and SDXC memory cards. Open the memory card slot cover, insert the 64GB memory card until it clicks into place. Ensure the card is inserted correctly to avoid damage.



Figure 3.1: Memory card slots on the Nikon Z6III, showing insertion of SD cards.

3.3. Attaching the Lens

Align the mounting mark on the NIKKOR Z MC 105mm f/2.8 VR S Macro Lens with the mounting mark on the camera body. Rotate the lens clockwise until it clicks into place. To remove, press the lens release button and rotate counter-clockwise.

4. OPERATING THE CAMERA

4.1. Power On/Off

To power on the camera, rotate the power switch located around the shutter button to the "ON" position. To power off, rotate it to "OFF".



Figure 4.1: Top view of the Nikon Z6III, highlighting the power switch and mode dial.

4.2. Sensor and Image Processing

The Z6III features a 24.5MP partially-stacked CMOS sensor, which allows for faster data readout, reduced rolling shutter, and improved noise performance. Coupled with the EXPEED 7 image processor, it ensures rapid performance for both stills and video.

4.3. Autofocus and Continuous Shooting

The camera utilizes an enhanced 493-point phase-detection AF system covering the full sensor area for fast and accurate focusing. It supports continuous shooting at up to 20 fps in raw, 60 fps in full-frame JPEG, and 120 fps in DX crop mode with full AF/AE. The Pre-Release Capture function records frames up to 120 fps just before the shutter is fully pressed. The autofocus system can detect 9 subject types and offers reliable performance even in backlit scenes, detecting human faces in silhouettes. It also features small face detection for video tracking.

4.4. Video Recording Capabilities

The Z6III supports internal 6K60 and 4K120 video recording with full pixel readout. It offers 12-bit N-RAW and ProRes RAW formats for maximum post-production flexibility, along with ProRes and H.265 10-bit recording for professional color grading. Full HD/240p in 10-bit H.265 allows for dramatic 10x slow-motion effects.

Your browser does not support the video tag.

Video 4.1: Official product video showcasing the Nikon Z6III's advanced features, including sensor technology, autofocus, and video capabilities. This video highlights the camera's performance in various shooting scenarios.

4.5. Electronic Viewfinder (EVF) and LCD

The camera features a bright 5.76M-dot electronic viewfinder, offering a clear and sharp view of details, even in bright outdoor conditions (4000 cd/m²). It also includes a four-axis tilting touchscreen LCD for flexible shooting angles.



Figure 4.2: Rear view of the Nikon Z6III, showing the tilting touchscreen LCD and control layout.

4.6. Portrait Shooting Features

The Z6III includes Rich Tone Portrait Picture Control for radiant and beautiful rendering of skin textures. Skin softening features smoothen skin while keeping hair and eyes sharp. Combined with NIKKOR Z prime lenses, these features enhance portrait photography.

4.7. Durability and Weather Sealing

The robust magnesium alloy body is cold-resistant down to -10°C/14°F and offers excellent dust- and drip-resistant performance, making it suitable for challenging outdoor environments.

4.8. Connectivity and Image Transfer

The camera features Wi-Fi connectivity for direct and automatic image transfer to cloud storage services via Nikon Imaging Cloud. It also includes USB-C and HDMI ports for versatile connectivity.



Figure 4.3: Side view of the Nikon Z6III, showing the various input/output ports.

4.9. Image Stabilization

The Z6III incorporates sensor-shift image stabilization. It also features Electronic VR for handheld video shooting and 8.0-stop in-camera VR (when using specific lenses like the NIKKOR Z 24-120mm f/4 S) to expand shooting opportunities in low-light conditions.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Nikon Z6III camera, follow these maintenance guidelines:

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water or a specialized camera cleaning solution.
- **Cleaning the Lens:** Use a lens brush to remove dust, then gently wipe with a microfiber lens cloth. For smudges, use a lens cleaning solution. Avoid touching the lens glass directly.
- **Sensor Cleaning:** If dust spots appear on images, the sensor may need cleaning. This is a delicate procedure; it is recommended to have it performed by a professional Nikon service center.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Fully charge batteries before extended storage and recharge every six months to maintain battery health.
- **Storage:** When not in use, store the camera in a dry, dust-free environment, preferably in a camera bag or case. Remove the battery if storing for long periods.

6. TROUBLESHOOTING

If you encounter issues with your Nikon Z6III, refer to the following common troubleshooting tips:

- **Camera Not Turning On:**

- Ensure the battery is fully charged and correctly inserted.
- Check if the battery contacts are clean.

- **Images Are Blurry:**

- Verify that the lens is properly attached and clean.
- Check autofocus settings and ensure the camera is focusing on the intended subject.
- Increase shutter speed in low light or use image stabilization.

- **Memory Card Error:**

- Reinsert the memory card.
- Try a different, compatible memory card.
- Format the memory card (note: this will erase all data).

- **Video Recording Issues:**

- Ensure sufficient memory card speed and capacity for the selected video format.
- Check video settings (resolution, frame rate).

- **Connectivity Problems (Wi-Fi/USB):**

- Restart both the camera and the connected device.
- Ensure Wi-Fi settings are correctly configured on both devices.
- Try a different USB cable or port.

For more complex issues, consult the full user manual available on the Nikon support website or contact Nikon customer support.

7. SPECIFICATIONS

Feature	Specification
Model Name	Nikon Z6III
Effective Still Resolution	24.5 MP
Sensor Type	BSI CMOS (Partially-Stacked)
Image Processor	EXPEED 7
Autofocus Points	493-point Phase Detection
Continuous Shooting	Up to 120 FPS (DX crop), 60 FPS (full-frame JPEG), 20 FPS (RAW)
Video Resolution	6K60, 4K120, 2160p
Video Capture Format	N-RAW, ProRes RAW, MP4
Image Stabilization	Sensor-shift (5-axis), Electronic VR
Electronic Viewfinder (EVF)	5.76M-dot, 4000 cd/m ² brightness
Screen Size	3.2 Inches (Tilting Touchscreen LCD)

Compatible Mountings	Nikon Z
Memory Storage Capacity	64 GB (included)
Connectivity Technology	Wi-Fi, USB-C, HDMI
Water Resistance Level	Water Resistant (Dust- and Drip-resistant)
Item Weight	7.9 Pounds (approx.)
Model Number	1890-AG2
UPC	703670501791

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The Nikon Z6III Mirrorless Camera comes with a 90-day limited warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in your product packaging or visit the official Nikon website.

8.2. Customer Support

For technical assistance, troubleshooting, or service inquiries, please contact Nikon customer support through their official website or the contact information provided in your product documentation. Online resources, including FAQs and software downloads, are also available on the Nikon support portal.