

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KLARSTEIN](#) /

› [Klarstein 45L \(3x15L\) 3-Compartment Stainless Steel Pedal Bin User Manual](#)

KLARSTEIN 45L 3-Compartment Recycling Pedal Bin

Klarstein 45L (3x15L) 3-Compartment Stainless Steel Pedal Bin

Model: 45L 3-Compartment Recycling Pedal Bin

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the Klarstein 45L 3-Compartment Stainless Steel Pedal Bin. Keep this manual for future reference.

- Ensure the bin is placed on a stable, level surface to prevent tipping.
- Do not overload compartments beyond their capacity.
- Keep the pedal mechanism clear of obstructions.
- Avoid using abrasive cleaners or harsh chemicals on the stainless steel surface.
- Keep out of reach of small children to prevent accidents.
- Do not stand or sit on the bin.

PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking.

- 1 x Klarstein 45L 3-Compartment Stainless Steel Pedal Bin unit
- 3 x Removable inner buckets (2 x 15L top, 1 x 15L bottom)
- 1 x User Manual

SETUP

Follow these steps to set up your new Klarstein pedal bin:

1. **Unpack the Bin:** Carefully remove all packaging materials from the bin and its components. Inspect for any damage during transit.
2. **Position the Bin:** Place the bin in your desired location, ensuring it is on a flat, stable surface. Allow sufficient space for the lids to open fully and for the pedal mechanism to operate without obstruction.
3. **Insert Inner Buckets:** Place the two smaller 15L inner buckets into the top compartments. Insert the

larger 15L inner bucket into the bottom compartment. Ensure they are seated correctly.

4. **Attach Trash Bags:** Line each inner bucket with appropriate-sized trash bags. Fold the edges of the bags over the rim of the inner buckets to secure them.



Image: The Klarstein pedal bin with its three removable inner buckets displayed, illustrating how they are inserted and removed for setup and cleaning.

OPERATING INSTRUCTIONS

The Klarstein pedal bin offers convenient waste disposal and recycling.

Using the Top Compartments (Pedal & Push-Button)

1. **Pedal Operation:** To open the lids of the top two compartments, gently press the foot pedal located at the base of the bin. The lids will open simultaneously. Release the pedal to allow the lids to close softly.
2. **Manual Push-Button Operation:** For quick access without using the pedal, you can also press the small push-buttons located on the front edge of each top lid. Pressing a button will open the corresponding lid. Push the lid down manually to close it.
3. Dispose of waste into the appropriate inner bucket.

Using the Bottom Compartment (Pull-Out Drawer)

1. To access the bottom compartment, pull the handle located on the front of the lower section. The drawer will slide out smoothly.
2. Dispose of recyclables or other designated waste into the inner bucket.
3. Push the drawer back in until it is fully closed.



Image: A close-up view highlighting the foot pedal, the individual push-buttons on the top lids, and the handle for the pull-out bottom compartment, demonstrating the various opening mechanisms.

MAINTENANCE AND CLEANING

Regular cleaning will keep your Klarstein pedal bin hygienic and looking new.

- **Exterior Cleaning:** Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. For best results and to prevent streaks, dry immediately with a clean, dry cloth. Avoid abrasive sponges or cleaners that can scratch the surface.
- **Inner Buckets:** The inner buckets can be easily removed for cleaning. Wash them with warm, soapy water. Rinse thoroughly and dry completely before placing them back into the bin.
- **Lid and Pedal Mechanism:** Periodically check the lid hinges and pedal mechanism for any debris or obstructions. Clean with a damp cloth if necessary. Do not lubricate the mechanism unless specifically instructed by Klarstein support.
- **Odor Control:** To minimize odors, empty the bin regularly and clean the inner buckets as needed. Baking soda can be placed at the bottom of the inner buckets (under the trash bag) to absorb odors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lids do not open/close smoothly.	Obstruction in mechanism or hinges.	Check for debris around the pedal and lid hinges. Clean if necessary. Ensure inner buckets are correctly seated.
Bottom drawer sticks or is difficult to pull out.	Overloaded inner bucket or debris in the sliding mechanism.	Reduce the load in the bottom bucket. Check for and remove any debris from the drawer's runners.

Problem	Possible Cause	Solution
Unpleasant odors persist.	Infrequent emptying or inadequate cleaning.	Empty waste more frequently. Thoroughly clean inner buckets and the bin's interior. Use odor absorbers if needed.
Bin appears unstable.	Uneven surface.	Relocate the bin to a flat, stable surface.

SPECIFICATIONS

Brand: KLARSTEIN

Model: 45L 3-Compartment Recycling Pedal Bin

Capacity: 45 Liters (3 x 15L inner buckets)

Color: Silver (3 Compartments - 2 Levels)

Opening Mechanism: Step-On Pedal for top compartments, Push-Button for top lids, Pull-Out for bottom compartment

Material: Stainless Steel

Finish Type: Brushed

Shape: Rectangular

Product Dimensions (L x W x H): 11.81" x 12.2" x 30.31" (approx. 30cm x 31cm x 77cm)

Item Weight: 7.92 pounds (approx. 3.6 kg)

Room Type: Kitchen, Office, Utility Room



Image: Front view of the Klarstein 45L 3-compartment stainless steel pedal bin, showcasing its sleek design and compact footprint.

WARRANTY AND SUPPORT

Klarstein products are manufactured with care and undergo strict quality control. This product comes with a standard manufacturer's warranty. For detailed warranty information, product support, or to report any issues, please contact Klarstein customer service.

Customer Service Contact:

Please refer to the contact information provided on the Klarstein official website or your purchase documentation.

When contacting support, please have your product model and purchase date available.