

[manuals.plus](#) /

› [Ninestars](#) /

› [Ninestars Automatic Motion Sensor Trash Can User Manual](#)

Ninestars Automatic Motion Sensor Trash Can

Ninestars Automatic Motion Sensor Trash Can User Manual

MODEL: 4 GALLON MOTION SENSOR TRASH CAN

Introduction

This manual provides instructions for the proper setup, operation, and maintenance of your Ninestars Automatic Motion Sensor Trash Can. Please read this manual thoroughly before using the product to ensure safe and efficient operation. This automatic trash can is designed for convenience and hygiene in various indoor environments such as bathrooms, bedrooms, kitchens, and offices.



The Ninestars Automatic Motion Sensor Trash Can with its lid fully open, showcasing the interior and sensor mechanism.

Package Contents

Verify that all items are present in the package:

- Trash Can Body
- Trash Can Lid (with motion sensor unit)
- Liner Ring

Product Features

- **Motion Activated:** Automatically opens its lid when motion is detected within 3-5 feet.
- **Slow-closing Lid:** The lid closes slowly and quietly to prevent slamming, ensuring a gentle closing motion.
- **Spacious Capacity:** 4-gallon capacity suitable for various rooms.
- **Easy to Clean Design:** Smooth interior and exterior surfaces for simple maintenance.

Setup Instructions

1. Install Batteries:

Locate the battery compartment on the underside of the lid unit. Insert the required batteries (not included) according to the polarity indicators. Close the battery compartment securely.

2. Attach Lid to Body:

Carefully place the lid unit onto the trash can body, ensuring it is properly aligned and seated.

3. Insert Liner Ring and Trash Bag:

Lift the liner ring from the trash can body. Place a trash bag into the body, folding the top edge of the bag over the liner ring. Reinsert the liner ring with the trash bag into the trash can body, ensuring the bag is securely held in place.



Top view of the Ninestars Automatic Motion Sensor Trash Can with the lid closed, showing the sensor area.

4. Power On:

Locate the power switch on the back of the lid unit. Flip the switch to the "ON" position. The sensor will activate, and the trash can is ready for use.



The rear view of the trash can, highlighting the power switch located on the back of the lid unit.

Operating Instructions

- **Automatic Opening:**

Approach the sensor area on the lid. The lid will automatically open when motion is detected within 3-5 feet. It will remain open for a few seconds, then close automatically.

- **Manual Opening/Closing:**

If manual operation is preferred, there may be a button on the lid to open or close it manually. Refer to the specific markings on your lid for this function.

- **Disposing of Waste:**

Once the lid opens, dispose of your waste into the trash bag. The lid will close automatically after a short delay.

Maintenance

- **Cleaning the Exterior:**

Wipe the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Cleaning the Interior:**

Periodically remove the liner ring and trash bag. Clean the interior of the trash can body with a damp cloth and disinfectant. Ensure it is completely dry before reinserting the trash bag.

- **Sensor Care:**

Keep the motion sensor area on the lid clean and free from obstructions to ensure optimal performance. Wipe gently with a dry, soft cloth.

- **Battery Replacement:**

Replace batteries when the sensor light indicates low power or when the lid's operation becomes sluggish or stops. Always replace all batteries at the same time with new ones of the same type.

Troubleshooting

Problem	Possible Cause	Solution
Lid does not open automatically.	<ul style="list-style-type: none">• Power switch is OFF.• Batteries are low or incorrectly installed.• Sensor is obstructed or dirty.	<ul style="list-style-type: none">• Ensure power switch is ON.• Check battery installation and replace if necessary.• Clean the sensor area.
Lid opens or closes slowly.	<ul style="list-style-type: none">• Low battery power.	<ul style="list-style-type: none">• Replace all batteries with new ones.
Lid does not close completely.	<ul style="list-style-type: none">• Obstruction in the lid's path.• Lid mechanism is dirty.	<ul style="list-style-type: none">• Remove any obstructions.• Clean the lid's hinge and closing mechanism.

Specifications

Brand	Ninestars
Model	Automatic Motion Sensor Trash Can
Capacity	4 Gallons (approx. 15 Liters)
Product Dimensions	12 x 8.2 x 17.1 inches (L x W x H)
Weight	6 Pounds
Opening Mechanism	Motion-Sensor
Material	Plastic, Stainless Steel
Power Source	Batteries (not included)



An image illustrating the precise dimensions of the Ninestars Automatic Motion Sensor Trash Can, including height, width, and depth measurements.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Ninestars website. Keep your purchase receipt for warranty claims.

	<p><u>Nine Stars Motion Sensor Trash Can User Manual & Guide</u></p> <p>Comprehensive user manual for the Nine Stars Dual or Single Compartment Motion Sensor Trash Can. Learn about setup, operation, troubleshooting, and warranty information.</p>
	<p><u>iTouchless Prime 13.2 Gallon Sensor Trash Can User Manual</u></p> <p>User manual for the iTouchless Prime 13.2 Gallon Plastic Sensor Kitchen Trash Can (models SP13BB, SP13GG, SP13WW). Includes setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p><u>iTouchless 13 Gallon AutoStep Stainless Steel Trash Can User Manual</u></p> <p>Comprehensive user manual for the iTouchless 13 Gallon AutoStep Stainless Steel Trash Can (models ITA13SB, ITA13SR, ITA13SW). Learn about its features including the automatic sensor lid, odor control system, battery and AC power options, proper operation, care and maintenance, troubleshooting, and warranty information.</p>
	<p><u>Townew T1S Smart Trash Can User Manual and Safety Guide</u></p> <p>Comprehensive guide to the Townew T1S Smart Trash Can, covering setup, operation, features like self-sealing and self-changing bags, troubleshooting, and warranty information. Learn how to use and maintain your automatic trash bin for a more convenient and hygienic disposal experience.</p>
	<p><u>Allen + Roth 11.9 Gallon Motion Sensor Trash Can User Manual</u></p> <p>User manual for the Allen + Roth 11.9 Gallon Motion Sensor Trash Can. Includes installation instructions, operation guide, technical specifications, troubleshooting tips, and warranty information.</p>
	<p><u>SensorCan OSC13SBM 13 Gallon Stainless Steel Oval Sensor Trash Can User Manual & Features</u></p> <p>Official user manual for the SensorCan OSC13SBM 13-gallon stainless steel oval sensor trash can. Learn about features, operating instructions, troubleshooting, and warranty.</p>

Documents - Ninestars – Automatic Motion Sensor Trash Can



[pdf] User Manual

CB DZT 50 9 8 1 manual BW v9 User Manual NINESTARS 1C The Original Touchless Automatic Motion Sensor Trash Can Combo Set 13 2 Gal L Stainless Steel Home A1UVDEOxIsL m media amazon images I

|||

User's Manual MOTION SENSOR TRASH CAN Model: DZT-42-9 / DZT-50-9 / DZT-55-9BK Introduction Thank you for choosing Nine Stars Motion Sensor trash can. As the leader in smart trash can technology, we're pleased to offer the most versatile, intuitive and reliable waste solutions on the market. Our prod...

lang:en score:27 filesize: 1.69 M page_count: 4 document date: 2021-12-06



[pdf] User Manual

User Manual NINESTARS CB DZT 50 9 8 1C The Original Touchless Automatic Motion Sensor Trash Can Combo Set 13 2 Gal L 1 Stainless Steel Amazon ca Home B18BZSpKUtl m media amazon images I

|||

...

lang:en score:25 filesize: 3.87 M page_count: 4 document date: 2018-11-30