



Manuals.plus /

› **Vanvimen /**

› Vanvimen MC-1055 Interactive Robot Puppy Toy Instruction Manual

Vanvimen MC-1055

Vanvimen MC-1055 Interactive Robot Puppy Toy User Manual

1. INTRODUCTION

Thank you for choosing the Vanvimen MC-1055 Interactive Robot Puppy Toy. This electronic plush pet offers an engaging play experience, simulating pet care activities. This manual provides essential information for setup, operation, maintenance, and safety to ensure optimal enjoyment and longevity of your toy.

2. PACKAGE CONTENTS

The Vanvimen MC-1055 Interactive Robot Puppy Toy set includes the following items:

- 1 x Electric Stuffed Dog
- 1 x Pet Carrier/Schoolbag
- 1 x Dog Basin
- 1 x Dog Leash
- 1 x Toy Bones
- 1 x Toy Dog Straps
- 1 x Toy Kennel
- 1 x Toy Care Solution Bottle
- 1 x Toy Shampoo Bottle
- 1 x Toy Soap
- 1 x Toy Comb
- 1 x Toy Mirror
- 1 x Toy Hair Dryer
- Other assorted grooming and feeding accessories



Image 1: All included accessories for the Vanvimen MC-1055 Robot Puppy Toy.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the underside of the robot puppy.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 x AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover with the screwdriver.

Note: Ensure batteries are inserted correctly. Do not mix old and new batteries, or different types of batteries.

Video 1: Demonstrates the robot puppy's functions, including battery installation and interaction with accessories.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

Once batteries are installed and the power switch (located near the battery compartment) is turned ON, the robot puppy will:

- **Walk:** The puppy will move forward and backward.
- **Bark:** It will emit realistic barking sounds.
- **Wag Tail:** The tail will wag from side to side.
- **Nod:** The head will nod.
- **Respond to Touch:** Patting the puppy's head will trigger additional cute sounds.



Image 2: Visual guide to the robot puppy's interactive functions.

4.2 Interactive Play

Utilize the included accessories to engage in various pet care activities:

- **Feeding:** Place the toy bones or other food accessories in the dog basin for the puppy.
- **Grooming:** Use the toy comb, hair dryer, shampoo, and soap to pretend to groom and bathe your puppy. The mirror allows for checking the puppy's appearance.
- **Walking:** Attach the dog leash to the puppy's collar. The puppy will walk automatically when led, simulating a real dog walk.
- **Transport:** Place the puppy and accessories into the pet carrier/schoolbag for easy transport during outdoor play or travel.

PARENT-CHILD INTERACTION



Image 3: Examples of interactive play activities with the robot puppy and its accessories.

Video 2: Demonstrates assembling a pet stroller (similar to the carrier) and walking the dog.

Video 3: Shows various interactions including feeding, grooming, and walking the robot dog.

Video 4: Features the electronic toy dog walking, barking, and wagging its tail.

5. MAINTENANCE

5.1 Cleaning

To clean the robot puppy and accessories:

- Wipe the surface of the robot puppy with a soft, damp cloth. Do not immerse in water.
- Clean plastic accessories with mild soap and water, then rinse thoroughly and air dry.

5.2 Storage

When not in use, store the toy and its accessories in a cool, dry place, away from direct sunlight. Remove batteries if the toy will not be used for an extended period to prevent leakage.

6. SAFETY INFORMATION

- **WARNING:** Keep away from water. This product is an electronic toy and is not designed for water play.
- This toy contains small parts and is recommended for children aged 36 months to 10 years. Adult supervision is advised.
- All materials are non-toxic and BPA-free. Edges of accessories are polished to prevent injury.
- Do not attempt to disassemble or modify the electronic components of the robot puppy.



Image 4: Illustrates the safety features of the toy accessories, highlighting smooth edges.

7. TROUBLESHOOTING

If the robot puppy does not function correctly:

- Check if the power switch is in the ON position.
- Ensure batteries are correctly installed with the proper polarity.
- Replace old or depleted batteries with new ones.
- If the issue persists, contact customer support for assistance.

8. SPECIFICATIONS

Product Dimensions	5.5 x 9 x 9 inches
Item Weight	1.28 pounds
Item Model Number	MC-1055
Manufacturer Recommended Age	36 months - 10 years
Manufacturer	Vanvimen Toys

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Vanvimen website. Keep your purchase receipt for any warranty claims.