Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Tibuta /
- Tibuta K7 Kids Tablet User Manual

Tibuta K7

Tibuta K7 Kids Tablet User Manual

Comprehensive instructions for setup, operation, and maintenance of your Tibuta K7 Kids Tablet.


Introduction

Thank you for choosing the Tibuta K7 Kids Tablet. This device is designed to provide a safe and engaging digital experience for children, featuring parental controls, educational content, and entertainment options. This manual will guide you through the initial setup, operation, and maintenance to ensure optimal performance and longevity of your tablet.

WHAT'S IN THE BOX

Please verify that all items are present in the package:

- Tibuta K7 Kids Tablet
- Drop-proof Silicone Protective Case
- Type-C Cable
- Charger
- · User's Manual

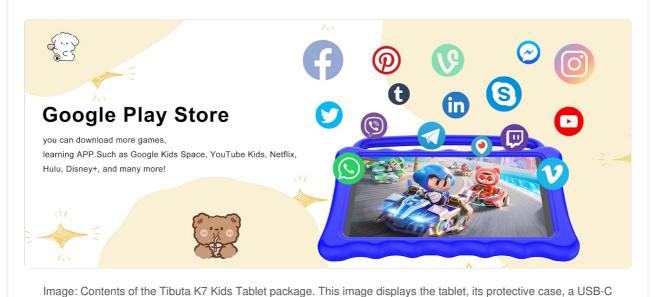

PRODUCT OVERVIEW

The Tibuta K7 Kids Tablet features a 7-inch HD display, a durable silicone protective case, and an Android 12 Go operating system. It is equipped with dual cameras and supports Wi-Fi connectivity.



Image: Front and back view of the Tibuta K7 Kids Tablet. The tablet is shown in a pink protective case with a handle and kickstand, displaying a colorful children's cartoon on its screen.

Tablet Components



Image: Diagram of the Tibuta K7 Kids Tablet's external features. This illustration points out the front camera, 3.5mm headphone port, TF card slot, USB 2.0 OTG port, rear camera, volume buttons, power ON/OFF/Reset button, and speaker.

- Front Camera: For video calls and selfies.
- 3.5mm Headphone Port: For connecting headphones.
- **TF Card Slot:** For expanding storage with a microSD card (up to 128GB).
- USB 2.0 OTG Port (Type-C): For charging and data transfer.
- Rear Camera: For taking photos and videos.
- Volume Buttons: Adjust audio volume.
- Power ON/OFF/Reset Button: Powers the tablet on/off or performs a reset.
- Speaker: For audio output.

SETUP GUIDE

1. Initial Charging

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's USB port and the charger to a power outlet. The charging indicator will show the charging status.

2. Powering On/Off

- To Power On: Press and hold the Power button until the screen lights up.
- To Power Off: Press and hold the Power button, then select "Power off" from the options.
- To Restart: Press and hold the Power button, then select "Restart" from the options.

3. Wi-Fi Connection

- 1. Go to Settings > Network & internet > Wi-Fi.
- 2. Toggle Wi-Fi On.
- 3. Select your desired Wi-Fi network from the list.
- 4. Enter the network password if prompted, then tap**Connect**.

4. Kidoz Parental Control App Setup

The tablet comes pre-installed with the Kidoz parental control application. This app allows you to manage content, screen time, and access for your child.

1. Launch the **Kidoz** app from the home screen.

- 2. Follow the on-screen instructions to create a parent account and set up child profiles.
- 3. Configure settings such as screen time limits, content filtering, and application access.



Image: Parents setting up the Kidoz parental control app on the Tibuta K7 Kids Tablet. The image illustrates a family interacting with the tablet, highlighting features like screen time limits and content filtering.

OPERATING INSTRUCTIONS

Navigation

- Touch Screen: Tap, swipe, and pinch to navigate the interface.
- Home Screen: Access frequently used apps and widgets.
- Notifications: Swipe down from the top of the screen to view notifications and quick settings.

Using Kidoz and Applications

The Kidoz app provides a child-friendly interface and access to pre-approved content. Parents can manage available applications and content through the parental control settings.

- Accessing Apps: Within the Kidoz environment, children can access approved games, educational apps, and media.
- **Downloading New Apps:** Parents can download additional applications from the Google Play Store, which can then be added to the child's approved list within Kidoz.
- **Content Filtering:** Kidoz allows for filtering of inappropriate content, ensuring a safe browsing and viewing experience.



Image: The Tibuta K7 Kids Tablet showcasing its multi-functional capabilities for children. This image highlights preinstalled applications like ABCMouse, YouTube, Netflix, Google Play, and various games, books, and art tools.

Eye Protection Mode

The 7-inch LCD screen is equipped with Low Blue Light technology to protect children's eyes. Activate the reading mode in settings to reduce screen flicker and harmful blue light, providing a more comfortable viewing experience.

NOT HURT BABY EYES

Image: Two children using the Tibuta K7 Kids Tablet, demonstrating the eye protection feature. The image emphasizes the 1024x600 HD screen and its low blue light technology for comfortable viewing.

Camera Usage

The tablet features a 2MP front camera and a 5MP rear camera for capturing photos and videos.

- 1. Open the **Camera** application.
- 2. Tap the shutter button to take a photo or start/stop video recording.
- 3. Switch between front and rear cameras using the camera icon on the screen.

Dual Cameras to Capture the Fun at Anytime

2MP Front Camera & **5MP** Rear Camera



Image: Children smiling and looking into the Tibuta K7 Kids Tablet camera. This image highlights the tablet's dual cameras (2MP front, 5MP rear) for capturing fun moments.

MAINTENANCE

Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.

Battery Care

- Charge the tablet regularly, but avoid leaving it fully charged or fully depleted for extended periods.
- Use only the provided charger and cable to prevent damage to the battery.
- Avoid exposing the tablet to extreme temperatures, as this can affect battery life.

Protective Case

The silicone protective case is designed to safeguard the tablet from drops and impacts. Ensure the tablet is properly seated within the case at all times. The adjustable stand and portable handle enhance usability and portability.



Image: The Tibuta K7 Kids Tablet in a red protective case. This image highlights the anti-drop design, adjustable stand, and portable handle of the silicone case, demonstrating its protective and ergonomic features.

TROUBLESHOOTING

Tablet does not turn on:

Ensure the tablet is fully charged. Connect it to the charger and wait a few minutes before attempting to power it on again. If unresponsive, press and hold the Power button for 10-15 seconds to force a restart.

Screen is unresponsive:

Restart the tablet. If the issue persists, ensure the screen is clean and free of debris. If the problem continues, a factory reset might be necessary (data will be lost).

Wi-Fi connection issues:

Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network on the tablet and reconnect. Ensure you are within range of the Wi-Fi signal.

Kidoz app not working correctly:

Ensure the Kidoz app is updated to the latest version. Clear the app's cache and data in Settings >

Apps > **Kidoz** > **Storage**. If problems persist, reinstall the app or contact Kidoz support.

Tablet runs slowly or freezes:

Close unnecessary background applications. Clear cache for frequently used apps. Consider uninstalling unused apps to free up storage. If the issue is severe, a factory reset may resolve it.

SPECIFICATIONS

Feature	Detail
Brand	Tibuta
Model Name	К7
Operating System	Android 12 Go
Processor Brand	Allwinner
Screen Size	7 inches
Screen Resolution	1024 x 600 pixels
RAM	2 GB
Storage Capacity	32 GB (expandable up to 128 GB via Micro SD)
Connectivity	Wi-Fi (802.11g), Bluetooth
Cameras	Front: 2MP, Rear: 5MP
Battery Life	Over 5 hours (usage dependent)
Color	Rose (as per product listing, other colors may vary)

Related Documents - K7

90*135mm 风琴折	Tibuta MasterPad E100 Tablet User Manual and Warranty Information This document provides important safety instructions, legal notices, FCC compliance information, package contents, device presentation, and warranty details for the Tibuta MasterPad E100 tablet.
90*135mm 风琴折	<u>Tibuta MasterPad T100 User Manual and Warranty Information</u> Comprehensive user manual and warranty card for the Tibuta MasterPad T100 tablet, including important safety instructions, getting started guide, and product specifications.

State of the state	TIBUTA MasterPad W200 Tablet User Manual and Safety Guide Official user manual and safety guide for the TIBUTA MasterPad W200 tablet, covering package contents, getting started, safety instructions, legal notices, and FCC compliance. Includes detailed information on battery safety, general usage precautions, and regulatory compliance.
Oct that out	Tibuta W120 Quick Start Guide - Setup and Features Get started with your Tibuta W120 tablet PC. This guide provides essential information on setup, device features, ports, safety guidelines, and keyboard usage.
	Navitech Tibuta MasterPad E100 Tablet Case - Safety and Usage Guidelines Comprehensive safety and usage guidelines for the Navitech Tibuta MasterPad E100 tablet case, covering temperature limits, public use, cleaning, and personal safety precautions in multiple languages.
SUPPLANS THE WORLD IN THE PROPERTY OF THE PRO	SURFANS K7 Kids Tablet User Guide Comprehensive user guide for the SURFANS K7 Kids Tablet, covering setup, features, settings, app management, connectivity, and troubleshooting. Learn how to use your tablet effectively.