

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [CANTA TU](#) /

> [Canta Tu Karaoke 1.5 User Manual](#)

CANTA TU CTC27000

Canta Tu Karaoke 1.5 User Manual

Model: CTC27000

1. INTRODUCTION

Thank you for choosing the Canta Tu Karaoke 1.5 system. This professional karaoke device is designed to provide an immersive and enjoyable singing experience with its advanced features, including a large touch screen, Android 12 operating system, powerful audio, and wireless microphones. This manual will guide you through the setup, operation, and maintenance of your new karaoke system.

2. SAFETY INFORMATION

Please read all safety instructions before using the Canta Tu Karaoke 1.5 system to ensure safe and proper operation. Keep this manual for future reference.

- Ensure the device is placed on a stable, flat surface to prevent tipping.
- Do not expose the device to water, moisture, or extreme temperatures.
- Use only the provided power adapter and accessories.
- Do not attempt to open or repair the device yourself. Refer all servicing to qualified personnel.
- Keep out of reach of small children to prevent accidents.
- No specific safety warnings beyond general electronic device precautions are applicable to this product.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Canta Tu Karaoke 1.5 System Unit
- Wireless Microphone
- Power Adapter
- User Manual (this document)
- Other accessories (as included by manufacturer)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Canta Tu Karaoke 1.5 system.



Figure 4.1: Canta Tu Karaoke 1.5 system shown alongside its retail packaging, highlighting the main unit and its features like the 15-inch touch screen, multicolor LED speaker, and trolley system.





Figure 4.2: Front view of the Canta Tu Karaoke 1.5 system, showcasing the large 15-inch touch screen at the top and the 8-inch woofer with multicolor LED lighting at the bottom. The retractable handle for the trolley system is visible at the top.





Figure 4.3: Side view of the Canta Tu Karaoke 1.5 system, illustrating its robust casing and the integrated trolley handle in its extended position, allowing for easy portability.





Figure 4.4: Another side view of the Cantata Tu Karaoke 1.5 system, specifically highlighting the integrated holder for the wireless microphone and the antenna for improved signal reception.





Figure 4.5: Close-up view of the wireless microphone included with the Canta Tu Karaoke 1.5 system, showing its silver finish and the power/mute switch.

Key Components:

- **15-inch Wide Touch Screen:** For intuitive navigation and display of karaoke lyrics and content.
- **8-inch Woofer with Multicolor LED:** Delivers powerful and clear audio with dynamic visual effects.
- **Wireless Microphone:** Provides freedom of movement during performances.
- **Trolley System:** Retractable handle and wheels for easy portability.
- **Control Panel:** Buttons and knobs for volume, effects, and system settings (located on top/side).
- **Connectivity Ports:** USB, RCA, 3.5mm jack, HDMI for various audio and video connections.

5. SETUP

5.1 Initial Charging and Power On

1. Unpack the Canta Tu Karaoke 1.5 system and all accessories from the box.
2. Connect the power adapter to the DC input port on the back of the unit and plug it into a wall outlet.
3. Allow the unit to charge fully before first use, or operate it while connected to power.
4. Press and hold the Power button (usually located on the top panel) for a few seconds to turn on the system. The screen will light up.

5.2 Wireless Microphone Setup

1. Insert the required batteries into the wireless microphone (if not pre-installed).
2. Turn on the microphone using its power switch.
3. The microphone should automatically pair with the karaoke system. If not, refer to the troubleshooting section or the on-screen instructions for manual pairing.

5.3 Initial Android 12 Setup

Upon first power-on, you may be prompted to complete the initial setup for the Android 12 operating system. Follow the on-screen instructions to:

- Select your preferred language.
- Connect to a Wi-Fi network (recommended for accessing online content).
- Accept terms and conditions.

6. OPERATING INSTRUCTIONS

6.1 Navigating the Touch Screen

The Canta Tu Karaoke 1.5 features a responsive 15-inch touch screen. Use your finger to tap, swipe, and pinch to navigate through menus, select songs, and adjust settings, similar to a tablet device.

6.2 Audio Playback

- **Playing Music:** Access your music library through pre-installed apps or stream online via Wi-Fi.
- **Karaoke Mode:** Select karaoke tracks from your library or online platforms. Lyrics will display on the screen.
- **Volume Control:** Use the physical volume knobs on the unit or the on-screen controls to adjust master volume, microphone volume, and music volume independently.

6.3 Microphone Usage and Vocal Effects

- Ensure the wireless microphone is powered on and connected.
- Speak or sing into the microphone. Adjust the microphone volume to your preference.
- **Vocal Effects:** The system includes various vocal effects. Access these through the dedicated app or settings menu on the touch screen. Common effects include echo, reverb, and chorus.
- **Voice Changer App:** Utilize the pre-installed Voice Changer application to modify your voice with fun effects. Follow the app's instructions for different voice modulation options.

7. CONNECTIVITY

7.1 Wi-Fi Connection

To access online content, streaming services, and system updates, connect your Canta Tu Karaoke 1.5 to a Wi-Fi network:

1. Go to *Settings* on the touch screen.
2. Select *Network & Internet* or *Wi-Fi*.
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the password if prompted and connect.

7.2 Bluetooth 5.3

Connect external devices such as smartphones or tablets via Bluetooth to stream audio to the karaoke system:

1. On the Canta Tu system, go to *Settings* and select *Connected devices* or *Bluetooth*.
2. Ensure Bluetooth is enabled and the system is discoverable.
3. On your external device, search for Bluetooth devices and select "Canta Tu Karaoke 1.5" (or similar name).
4. Confirm pairing if prompted.

7.3 Wired Connections

The system provides various ports for wired connectivity:

- **USB Port:** For playing media from USB drives or connecting compatible peripherals.
- **HDMI Output:** Connect to an external display (TV, projector) to mirror the screen content.
- **RCA Input/Output:** For connecting to external audio systems or sources.
- **3.5mm Jack (AUX In):** For connecting audio devices with a standard audio cable.

8. MAINTENANCE

8.1 Cleaning

- Wipe the screen and exterior surfaces with a soft, dry, lint-free cloth.
- For stubborn marks, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- Do not spray liquids directly onto the device.

8.2 Battery Care

The Canta Tu Karaoke 1.5 system contains a built-in Lithium-polymer battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the device in a cool, dry place when not in use for extended periods.
- Recharge the battery periodically if stored for a long time to prevent deep discharge.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power / Unit won't turn on	Battery drained; Power adapter not connected or faulty.	Connect power adapter and allow to charge. Check power outlet and adapter connection.
No sound from speaker	Volume too low; Muted; Incorrect audio source selected.	Increase master volume. Check if muted. Select correct audio input/source on the system.
Wireless microphone not working	Microphone off; Batteries low/dead; Not paired.	Turn on microphone. Replace batteries. Re-pair microphone with the system (refer to Section 5.2).
Wi-Fi connection issues	Incorrect password; Out of range; Router issue.	Verify Wi-Fi password. Move closer to router. Restart router.
Touch screen unresponsive	System frozen; Software glitch.	Restart the system by holding the power button until it shuts down, then power on again.

10. SPECIFICATIONS

Feature	Detail
Brand	CANTA TU
Model Number	CTC27000
Color	Grey
Screen Size	15 inches (Wide Touch Screen)
Operating System	Android 12
Bluetooth Version	5.3
Speaker Type	8-inch Woofer with Multicolor LED
Speaker Power	40W RMS
Microphones	Wireless Microphone included
Connectivity	Wi-Fi, USB, RCA, 3.5mm Jack, HDMI
Battery Type	Lithium-polymer (included)
Special Features	Voice Changer App, Trolley System for portability

11. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided product data. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage, technical support, and service centers.

For further assistance, you may also contact the retailer where the product was purchased.