

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHESONA](#) /

› [CHESONA Keyboard Case User Manual for Samsung Galaxy Tab S10+/S9+/S9 FE+/S8+/S7+/S7 FE 12.4-inch](#)

CHESONA Samsung Galaxy Tab S10+ Plus-CHESONA

CHESONA Keyboard Case User Manual

For Samsung Galaxy Tab S10+/S9+/S9 FE+/S8+/S7+/S7 FE 12.4-inch

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your CHESONA Floating Cantilever Magnetic Keyboard Case. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your device.



Image: CHESONA Keyboard Case with a Samsung Galaxy Tab, showcasing the backlit keyboard and display.

COMPATIBILITY

The CHESONA Keyboard Case is designed for specific Samsung Galaxy Tab 12.4-inch models. Please verify your tablet's model number before use. This product does not include the Galaxy Tab tablet or the S Pen.

- Samsung Galaxy Tab S10+ Plus
- Samsung Galaxy Tab S9+ Plus (Model SM-X810/X816B/X818U) 2023
- Samsung Galaxy Tab S9 FE+ Plus
- Samsung Galaxy Tab S8+ Plus (Model SM-X800/X806/X808) 2022
- Samsung Galaxy Tab S7+ Plus (Model SM-T970/T975/T976/T978) 2020
- Samsung Galaxy Tab S7 FE 5G (Model SM-T730/T733/T735/T736/T738) 2021

Only Compatible With



- ✓ SAMSUNG GALAXY TAB S10 Plus 2024
- ✓ SAMSUNG GALAXY TAB S9 PLUS 2023
(SM-X810/SM-X816B/SM-X818U)
- ✓ SAMSUNG GALAXY TAB S9 FE PLUS 2023
(SM-X610/SM-X616B)
- ✓ SAMSUNG GALAXY TAB S8 PLUS 2022
(SM-X800/SM-X806/SM-X808)
- ✓ SAMSUNG GALAXY TAB S7 PLUS 2021
(SM-T730/SM-T733/SM-T736/SM-T738)
- ✓ SAMSUNG GALAXY TAB S7 FE 2020
SM-T970/SM-T975/SM-T976/SM-T978)



CHECK TABLET MODEL BY FOLLOWING STEPS

① Settings → ② About Tablet

PACKAGE CONTENTS

Please check the package for the following items:

- CHESONA Magic-style Keyboard Case
- Detachable Pencil Holder
- Type-C Charging Cable
- User Manual

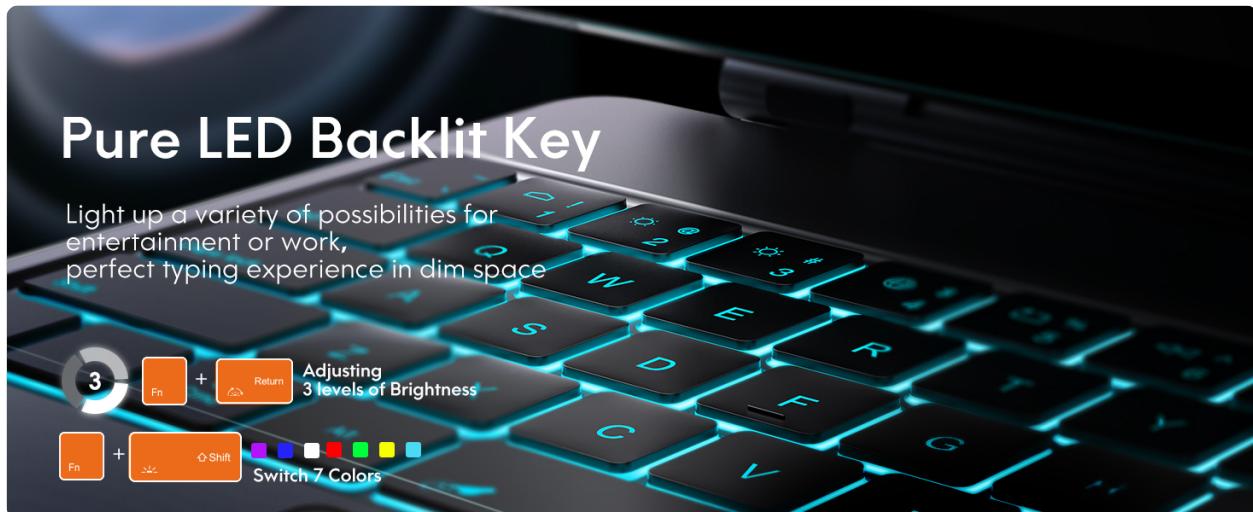


Image: Contents of the CHESONA Keyboard Case package.

SETUP

1. Attaching Your Tablet

1. Align your Samsung Galaxy Tab with the magnetic back panel of the keyboard case.
2. The strong magnetic suction will securely attach the tablet to the case, forming a floating cantilever setup.

Strong Magnetic Attraction

Magnetic detachable design, stable and easy to setup



Image: Illustration of the strong magnetic attraction for tablet attachment.

2. Adjusting the Viewing Angle

The integrated aluminum alloy hinge allows for seamless adjustment of the viewing angle up to 120 degrees, providing optimal comfort for various tasks.

Floating Cantilever

The integrated aluminum alloy cantilever easily supports your tablet, allow multi-viewing angle



Image: The floating cantilever design allowing for multi-angle viewing.

3. Bluetooth Pairing

1. Ensure the keyboard is charged.
2. Turn on the keyboard using the power switch. The Bluetooth indicator light will flash, indicating pairing mode.
3. On your Samsung Galaxy Tab, go to **Settings > Connected devices > Bluetooth**.
4. Select the CHESONA keyboard from the list of available devices to pair.
5. Once paired, the Bluetooth indicator light will stop flashing.

4. S Pen Holder

The case includes a dedicated S Pen holder with a magnetic design to prevent loss and ensure easy access.




Image: Dedicated S Pen storage on the keyboard case.

OPERATING INSTRUCTIONS

1. Backlight Control

The keyboard features a 7-color backlight with 3 adjustable brightness levels for comfortable typing in various lighting conditions.

- Press **Fn + Light Key** to cycle through backlight colors.
- Press **Fn + Up/Down Arrow Keys** to adjust backlight brightness.

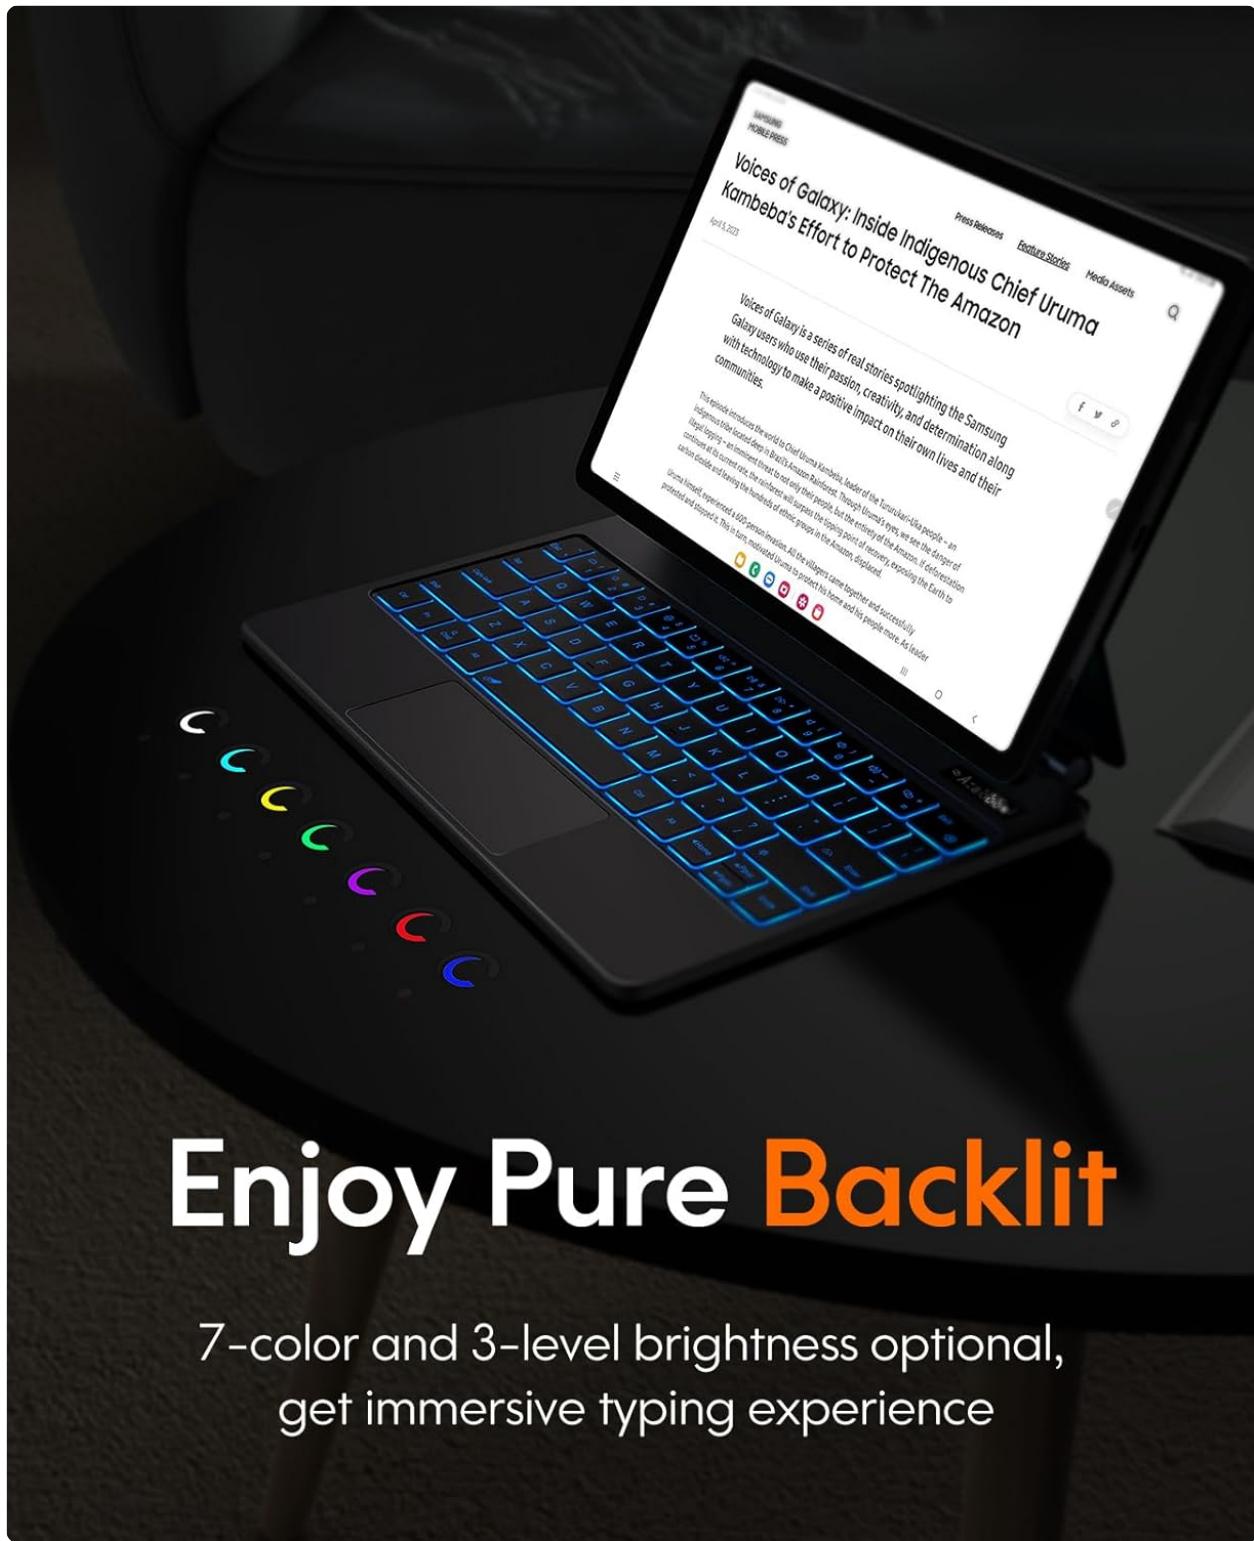

Enjoy Pure Backlit

7-color and 3-level brightness optional,
get immersive typing experience

Image: The keyboard displaying its 7-color backlight feature.

2. Multi-Touch Trackpad

The high-precision trackpad supports intuitive multi-touch gestures for enhanced navigation and productivity.

- **Zoom In/Out:** Pinch with two fingers.
- **Open Search:** Swipe down with two fingers.
- **Switch Web/Applications:** Swipe left or right with three fingers.

Multi-Touch Trackpad

Accurately recognize gesture commands, more sensitive and smooth

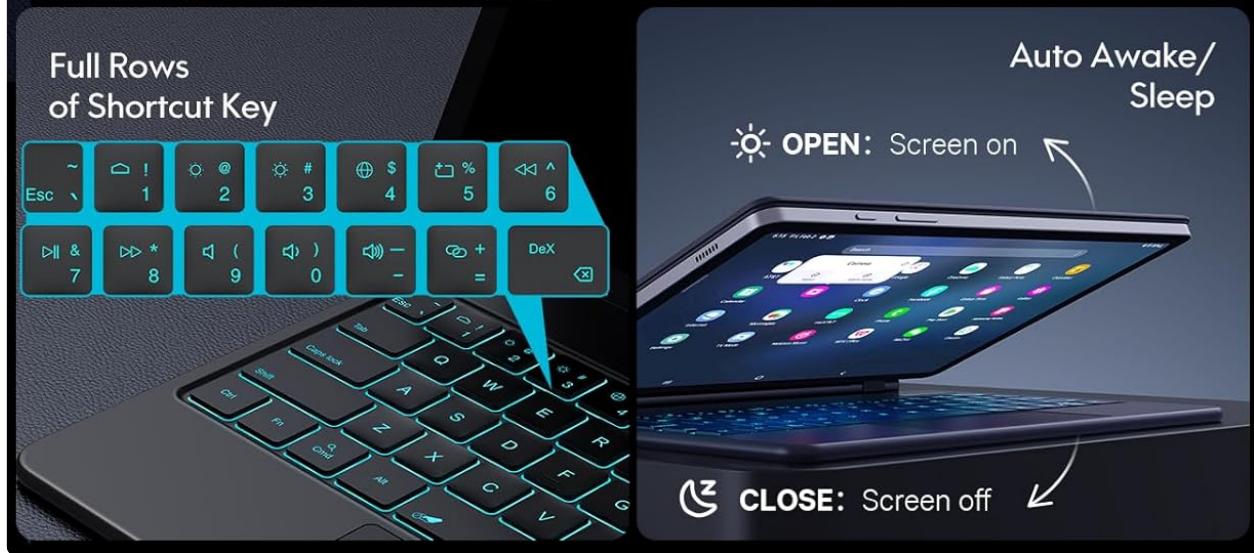


Image: Multi-touch trackpad demonstrating various gesture commands.

3. Shortcut Keys

A full row of shortcut keys provides quick access to common tablet functions, including volume control, brightness adjustment, search, and screenshots.

Floating Keyboard Cased		VS	Other's Floating Keyboard Cased		Other's Detachable Keyboard Case	
CHESONA			11.30 * 8.07 * 0.67"		11.43 * 9.17 * 0.85"	12.83 * 8.23 * 1.34"
	800g		920g	911g		
	Visual Battery & BT/Caps/Charging Indicator		No	No		
	Up to 120°		Up to 120°	3-Angle Adjustment		
	Multi-Function Shortcut Keys (Single DeX Key Design)		Base Shortcut	Base Shortcut		
	Multi-Gesture		Simple Gesture	Multi-Gesture		

Image: Keyboard shortcut keys for quick access to tablet functions.

4. Samsung DeX Activation

Transform your tablet into a laptop-like experience by activating Samsung DeX mode with a dedicated shortcut.

- Press **Fn + DeX Key** to switch to Samsung DeX mode.

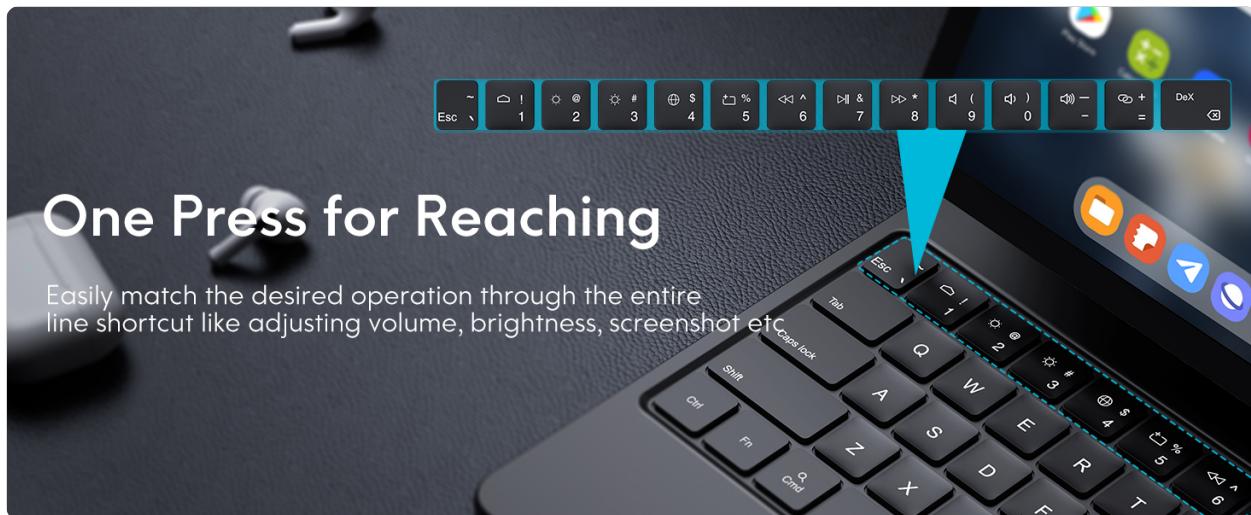


Image: Activating Samsung DeX mode using the keyboard shortcut.

5. HD LED Digital Display

The integrated LED display provides real-time status updates for power, Caps Lock, charging, and wireless connection.



Image: HD LED Digital Display showing keyboard status indicators.

6. Auto Wake/Sleep Function

The keyboard case supports automatic wake and sleep functionality. Opening the case will wake your tablet, and closing it will put your tablet to sleep, conserving battery life.

Maintenance

- Cleaning:** Use a soft, dry cloth to clean the keyboard and case. Avoid abrasive cleaners or excessive moisture.
- Charging:** Charge the keyboard using the provided Type-C cable. Do not use damaged cables or chargers.
- Storage:** When not in use for extended periods, store the keyboard case in a cool, dry place.
- Protection:** The scratch-resistant leather provides full protection. Avoid dropping the device or exposing it to sharp objects.

Troubleshooting

Keyboard Not Connecting via Bluetooth

- Ensure the keyboard is powered on and fully charged.
- Verify Bluetooth is enabled on your Samsung Galaxy Tab.
- Unpair and re-pair the keyboard in your tablet's Bluetooth settings.
- Restart both your tablet and the keyboard.

Keys Not Responding

- Check if the keyboard is properly connected via Bluetooth.
- Ensure the keyboard is charged.
- If specific keys are not responding, gently clean around the keys to remove any debris.

Trackpad Not Working

- Ensure the keyboard is connected via Bluetooth.
- Check your tablet's settings to ensure trackpad support is enabled (if applicable for your OS version).
- Clean the trackpad surface with a soft cloth.

Backlight Not Functioning

- Ensure the keyboard is charged.
- Press the **Fn + Light Key** or **Fn + Up/Down Arrow Keys** to activate or adjust the backlight.

SPECIFICATIONS

Model Number	Samsung Galaxy Tab S10+ Plus-CHESONA
Package Dimensions	11.85 x 8.98 x 1.06 inches
Item Weight	2.35 pounds
Batteries	1 Lithium Polymer battery (included)
Connectivity Technology	Wireless (Bluetooth)
Keyboard Layout	QWERTY
Special Features	Backlit, Multi-Touch Trackpad, Floating Cantilever Magnetic Stand, S Pen Holder, HD LED Digital Display, Auto Wake/Sleep
Power Source	Battery Powered (Rechargeable via Type-C)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official CHESONA website. Keep your purchase receipt for warranty claims.