

[manuals.plus](#) /

› [CHESONA](#) /

› [CHESONA Keyboard Case User Manual](#)

## CHESONA Samsung Galaxy Tab S10+ Plus-CHESONA

# CHESONA Keyboard Case User Manual

Model: Samsung Galaxy Tab S10+ Plus-CHESONA

## 1. INTRODUCTION

This manual provides detailed instructions for the CHESONA Floating Cantilever Magnetic Keyboard Case, designed to enhance the functionality and protection of your compatible Samsung Galaxy Tab. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: The CHESONA Keyboard Case with a tablet, showcasing its design and backlit keyboard.

## 2. COMPATIBILITY

---

The CHESONA Keyboard Case is specifically designed for the following Samsung Galaxy Tab models:

- Samsung Galaxy Tab S10+ Plus
- Samsung Galaxy Tab S9+ Plus (Model SM-X810/X816B/X818U) 2023
- Samsung Galaxy Tab S9 FE+ Plus
- Samsung Galaxy Tab S8+ Plus (Model SM-X800/X806/X808) 2022
- Samsung Galaxy Tab S7+ Plus (Model SM-T970/T975/T976/T978) 2020
- Samsung Galaxy Tab S7 FE 5G (Model SM-T730/T733/T735/T736/T738) 2021

**Important: Please verify your tablet's model number before attaching the case to ensure compatibility. The Galaxy Tab Tablet and S Pen are not included.**

# Only Compatible With



- ✓ SAMSUNG GALAXY TAB S10 Plus 2024
- ✓ SAMSUNG GALAXY TAB S9 PLUS 2023  
(**SM-X810/SM-X816B/SM-X818U**)
- ✓ SAMSUNG GALAXY TAB S9 FE PLUS 2023  
(**SM-X610/SM-X616B**)
- ✓ SAMSUNG GALAXY TAB S8 PLUS 2022  
(**SM-X800/SM-X806/SM-X808**)
- ✓ SAMSUNG GALAXY TAB S7 PLUS 2021  
(**SM-T730/SM-T733/SM-T736/SM-T738**)
- ✓ SAMSUNG GALAXY TAB S7 FE 2020  
**SM-T970/SM-T975/SM-T976/SM-T978**)



## CHECK TABLET MODEL BY FOLLOWING STEPS

- ① Settings →
- ② About Tablet

Image: Visual guide indicating compatible Samsung Galaxy Tab models and how to check your tablet's model number.

## 3. PACKAGE CONTENTS

Upon opening the package, please ensure all the following items are present:

- CHESONA Magic-style Keyboard Case
- Detachable Pencil Holder
- Type-C Charging Cable
- User Manual



Image: An overview of the items included in the product packaging.

## 4. SETUP

### 4.1 Charging the Keyboard

Before initial use, fully charge the keyboard. Connect the provided Type-C charging cable to the keyboard's charging port and a compatible USB power adapter (not included). The HD LED Digital Display will show the charging status and battery percentage.



Image: The keyboard's LED digital display indicating power, Caps Lock, charging, and wireless connection status.

### 4.2 Attaching Your Tablet

The keyboard case features a floating cantilever magnetic stand. Align your Samsung Galaxy Tab with the magnetic area on the case. The strong magnetic suction will securely hold your tablet in place, allowing for easy attachment and detachment.

# Strong Magnetic Attraction

Magnetic detachable design, stable and easy to setup



Image: Illustration of the strong magnetic attraction between the tablet and the keyboard case.

## 4.3 Bluetooth Pairing

1. Ensure the keyboard is charged and powered on.
2. On your Samsung Galaxy Tab, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth.
4. The keyboard should appear in the list of available devices (e.g., "CHESONA Keyboard"). Tap on it to pair.
5. If prompted, enter the pairing code displayed on your tablet's screen using the keyboard, then press Enter.
6. Once paired, the keyboard's Bluetooth status indicator will confirm the connection.

## 5. OPERATING INSTRUCTIONS

### 5.1 Adjusting Viewing Angle

The integrated aluminum alloy hinge allows for seamless angle adjustment, providing a perfect viewing angle up to 120 degrees. Simply tilt the tablet to your desired position.

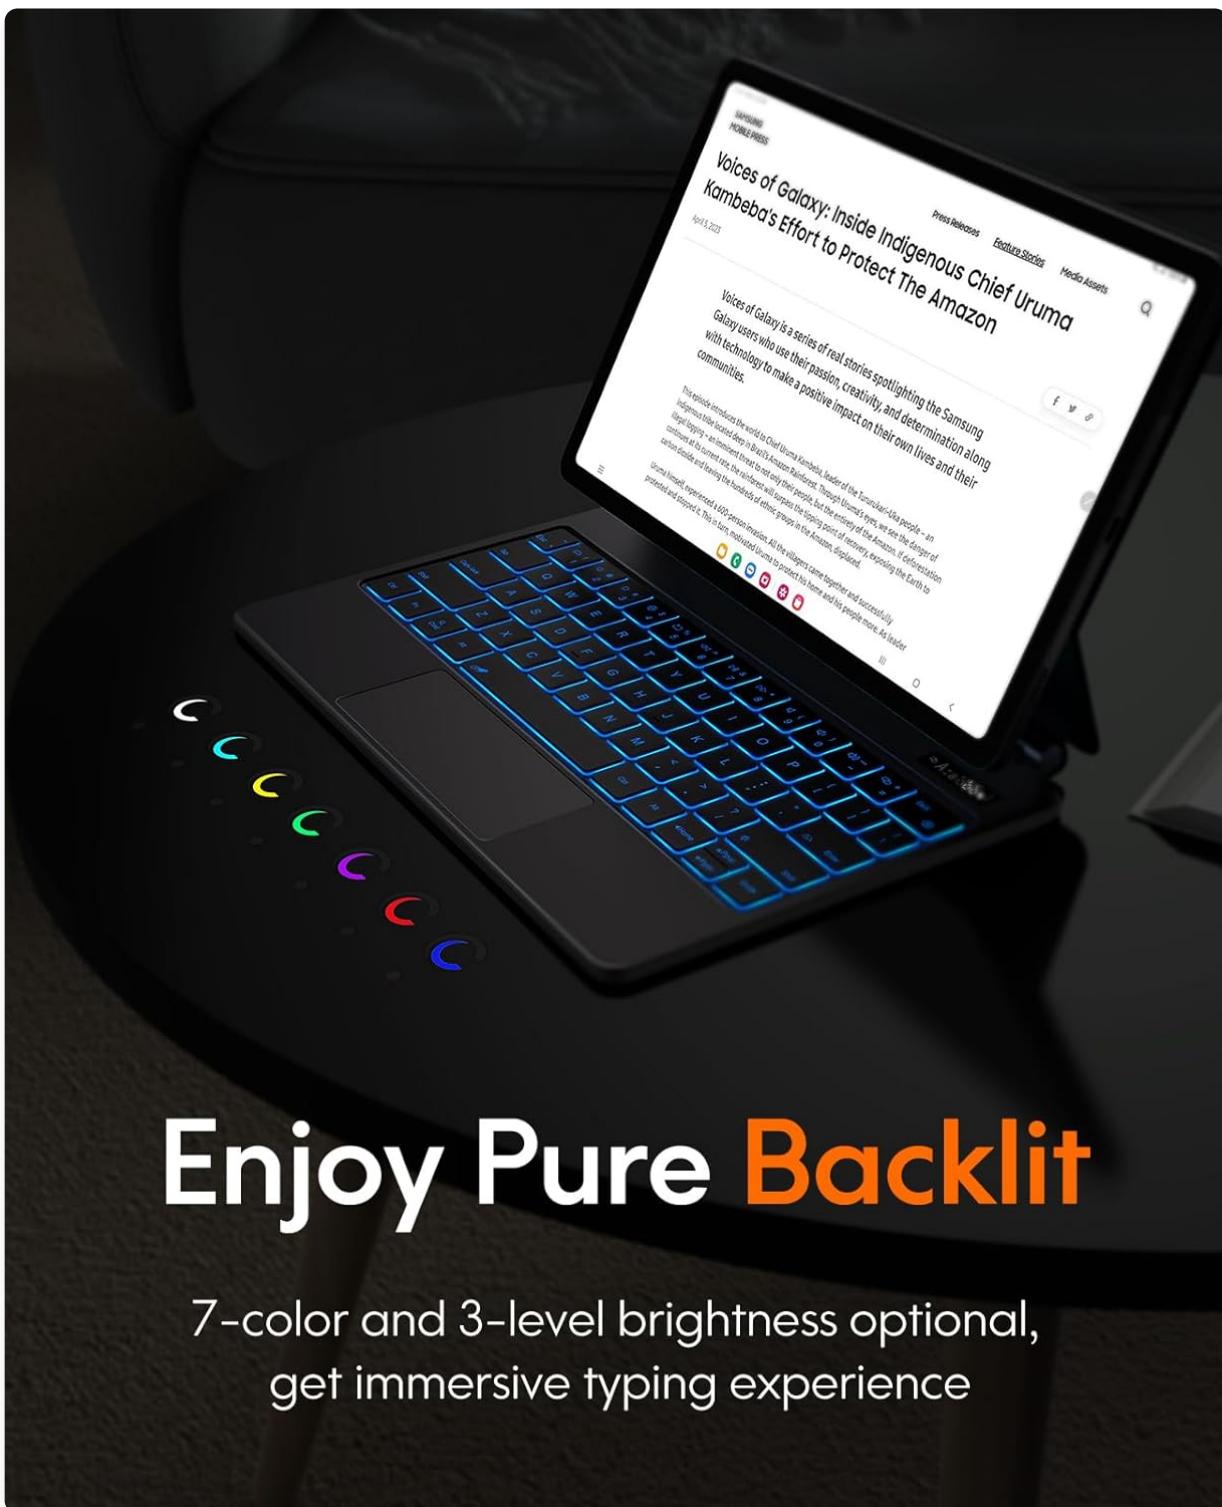


Image: The floating cantilever design allowing for multi-viewing angles up to 120 degrees.

### 5.2 Backlight Control

The keyboard features a 7-color backlight with 3 levels of brightness adjustment. This allows for comfortable typing in dim environments.

- To change backlight color: Press **Fn + Shift + Q**.
- To adjust brightness: Press **Fn + Return**.



The image shows a Samsung laptop with a backlit keyboard and a trackpad. The screen displays a news article from 'SAMSUNG MOBILE PRESS' titled 'Voices of Galaxy: Inside Indigenous Chief Uruma Kambeba's Effort to Protect The Amazon'. The article discusses the challenges faced by indigenous communities in the Amazon and the efforts of Chief Uruma Kambeba to protect them. The laptop is shown in a dark environment, highlighting the bright screen and the backlit keyboard.

## Enjoy Pure Backlit

7-color and 3-level brightness optional,  
get immersive typing experience

Image: The keyboard displaying its 7-color backlit keys, enhancing visibility in low-light conditions.

### 5.3 Multi-Touch Trackpad

The high-precision multi-trackpad supports intuitive multi-touch gestures for seamless navigation and control. This enhances productivity for tasks such as document editing, presentations, and web browsing.

# Multi-Touch Trackpad

Accurately recognize gesture commands, more sensitive and smooth

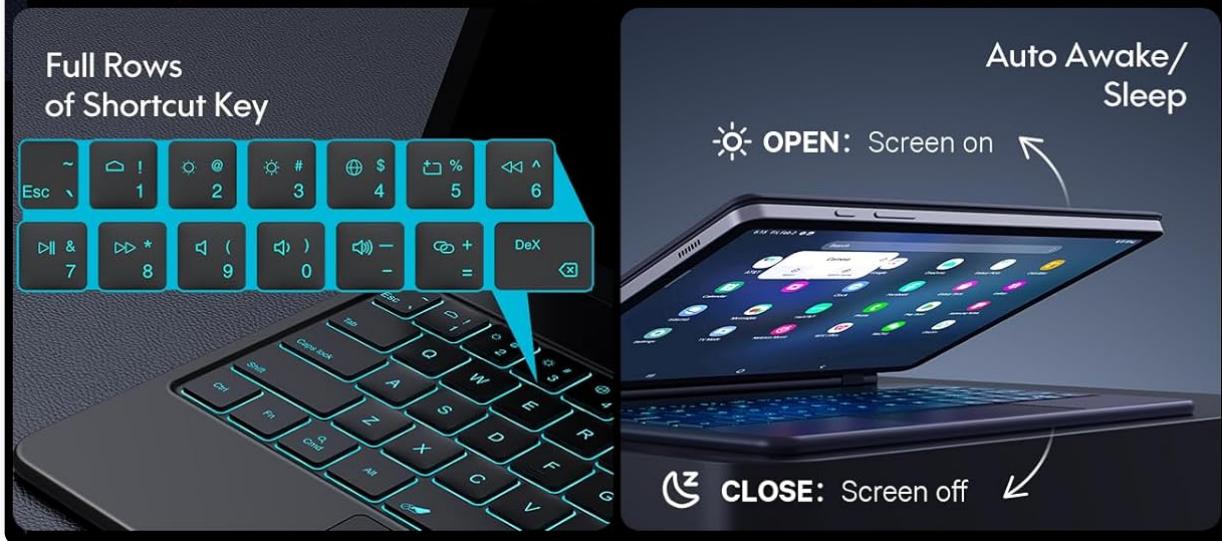


Image: The multi-touch trackpad, illustrating its responsiveness and support for various gestures.

## 5.4 Shortcut Keys

The keyboard includes a full row of shortcut keys that integrate perfectly with the Galaxy Tab system, allowing for quick access to various functions:

- Adjust volume
- Adjust brightness
- Open search bar
- Take screenshots
- Activate DeX mode
- And more.

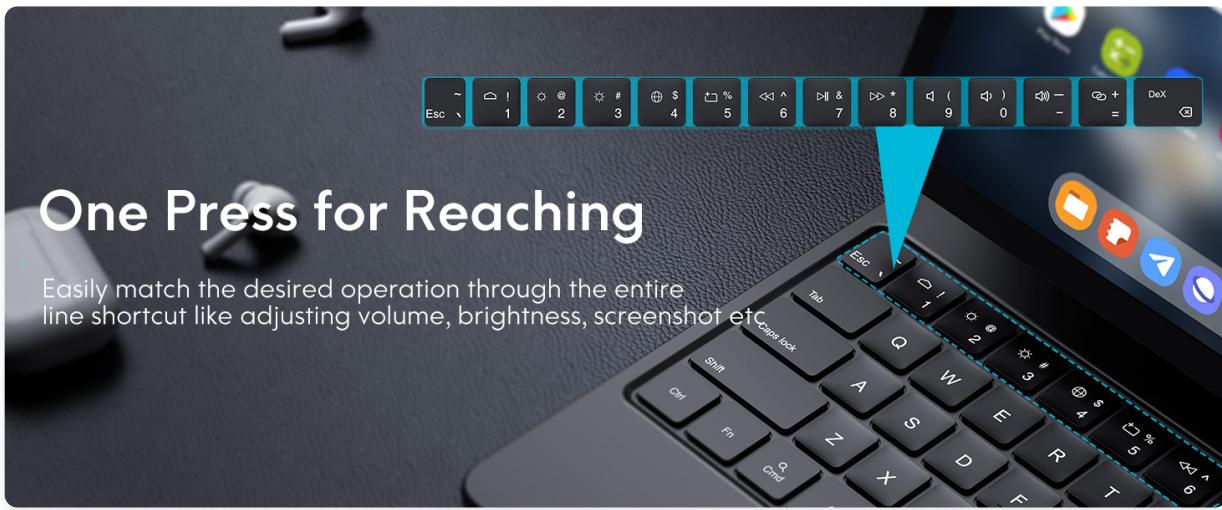


Image: The dedicated shortcut keys on the top row of the keyboard, designed for quick access to tablet functions.

## 5.5 Activating Samsung DeX Mode

Transform your tablet into a laptop-like experience by activating Samsung DeX mode. Simply press the dedicated **Fn + DeX** shortcut key on the keyboard.

### ACTIVATING DEX WITH US!

Switch effortlessly to Samsung DeX mode with our dedicated Fn + DeX shortcut. Enjoy a laptop-like experience with applications, seamless multitasking, and a taskbar etc.

Transform your tablet into a laptop with our innovative magic-style keyboard case for unparalleled convenience

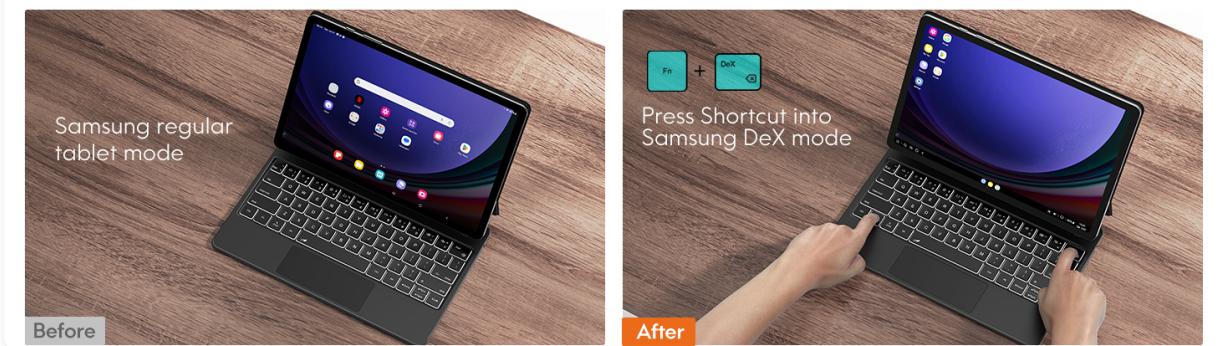


Image: Visual demonstration of switching from regular tablet mode to Samsung DeX mode using the keyboard shortcut.

## 5.6 S Pen Holder

The case includes a dedicated S Pen holder, providing secure storage for your stylus and preventing loss. The back of the pen features a removable sleeve and a magnetic design for convenience.

# Home of the S Pen

Storage the stylus, no more lose.



Image: The integrated S Pen holder on the keyboard case, designed for secure storage of the stylus.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your CHESONA Keyboard Case, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the keyboard and case. For stubborn spots, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners.
- **Storage:** When not in use, store the keyboard case in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** The scratch-resistant leather provides full protection. Avoid dropping the case or exposing it to excessive force.

- **Charging:** Do not overcharge the battery. Disconnect the charging cable once the battery is full.

## 7. TROUBLESHOOTING

If you encounter any issues with your CHESONA Keyboard Case, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Keyboard not connecting via Bluetooth	Low battery; Bluetooth off on tablet; Keyboard not in pairing mode; Interference.	Charge the keyboard; Ensure tablet Bluetooth is on; Re-enter pairing mode on keyboard; Move closer to tablet; Restart both devices.
Keys not responding	Keyboard frozen; Connection issue; Software glitch.	Restart the keyboard; Re-pair Bluetooth; Check for tablet software updates.
Backlight not working or dim	Low battery; Backlight turned off or set to lowest brightness.	Charge the keyboard; Adjust brightness using <b>Fn + Return</b> .
Trackpad not responding	Connection issue; Trackpad disabled (if applicable); Software glitch.	Re-pair Bluetooth; Ensure trackpad is enabled in tablet settings; Restart tablet.

If the problem persists after attempting these solutions, please contact CHESONA customer support for further assistance.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Samsung Galaxy Tab S10+ Plus
Material	PU Leather
Number of Keys	64
Color	Black
Special Feature	Backlit, Floating Cantilever Magnetic Stand, Multi-Touch Trackpad, Pen Holder, Battery Display
Connectivity Technology	Wireless (Bluetooth)
Keyboard Description	Multi Functional
Item Weight	2.35 pounds

Feature	Detail
Battery	1 Lithium Polymer battery (included)
Manufacturer	CHESONA

## 9. WARRANTY AND SUPPORT

CHESONA products are designed for reliability and performance. This product typically comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official CHESONA website.

For technical support, troubleshooting assistance, or warranty claims, please contact CHESONA customer service through the following channels:

- Email:** Refer to your product packaging or the official CHESONA website for contact email.
- Website:** Visit the official CHESONA website for FAQs, support resources, and contact forms.

Please have your product model number (Samsung Galaxy Tab S10+ Plus-CHESONA) and purchase information ready when contacting support.

© 2024 CHESONA. All rights reserved.

## Related Documents - Samsung Galaxy Tab S10+ Plus-CHESONA

<small>Q: Does this case work with a pen?</small> <small>A: Sure, it's perfectly fine to use it.</small> <small>This item only include:</small> <small>1 x Case</small> <small>1 x Protective sleeve for the Pen (Pencil) - S-Pen (Black)</small> <small>1 x User Manual</small>  <small>Q: Does this fit the Tab S10+ 2023?</small> <small>A: This case is designed for the Samsung Galaxy Tab S10+ (2023) (Model Number: A22T) and Tab S10+ (2023) - 5G (Model Number: A22T5G). It's also available for the Tab S10 (2022) (Model Number: A22T5A) and Tab S10 (2022) - 5G (Model Number: A22T5G).</small>  <small>Charging:</small> <small>Q: How can we charge it from the side port from the back of the device?</small> <small>A: If you are using a standard micro-USB cable, you need to disconnect the cable from the back of the device and then connect it to the side port. If you are using a USB-C cable, you need to disconnect the cable from the back of the device and then plug the USB-C connector into the side port. Please note that the side port is located on the left side of the device.</small> <small>Q: Could it use an apple cable and power adapter to charge the Tab?</small> <small>A: No, this case has a charge port (5V/2A) that can only charge 5V/2A. If you use an apple cable and power adapter to charge the Tab, it will not work.</small>  <small>User Manual</small> <small>Multifunctional</small> <small>Keyboard with Touchpad</small>	<p><a href="#">CHESONA iPad Pro 12.9 Keyboard Case: FAQ, Compatibility &amp; iOS 15 Update</a></p> <p>Frequently asked questions and troubleshooting guide for the CHESONA iPad Pro 12.9-inch (2020/2018) keyboard case, covering compatibility, charging, and iOS 15 system updates.</p>
 <small>Note: Please read the manual carefully before using.</small>	<p><a href="#">User Manual: CHESONA Multifunctional Keyboard with Touchpad (YFX7-B-V1)</a></p> <p>Comprehensive user manual for the CHESONA Multifunctional Keyboard with Touchpad (Model YFX7-B-V1). Learn about setup, connection, shortcut keys, touchpad gestures, installation, charging, troubleshooting, product specifications, and compliance.</p>

<p>User Manual <b>Detachable Magnetic Wireless Keyboard</b></p> <p>Compatible with iPad Pro 11 iPad Air 10.9</p>  <p>support@chesona.com www.chesona.com</p>	<p><a href="#"><u>CHESONA Detachable Magnetic Wireless Keyboard User Manual</u></a></p> <p>Comprehensive user manual for the CHESONA Detachable Magnetic Wireless Keyboard, compatible with iPad Pro 11-inch and iPad Air 10.9-inch. Covers setup, pairing, touchpad gestures, shortcuts, installation, charging, troubleshooting, specifications, and FCC compliance.</p>
<p><b>USER GUIDE</b> iPad Pro 12.9 case with keyboard</p>  <p>Contact: <a href="mailto:support@chesona.com">support@chesona.com</a> www.chesona.com</p> <p>YFSQ</p>	<p><a href="#"><u>CHESONA iPad Pro 12.9 Case with Keyboard User Guide</u></a></p> <p>User guide for the CHESONA iPad Pro 12.9-inch case with detachable trackpad keyboard. Covers features, setup, charging, trackpad gestures, installation, and specifications.</p>
<p>User Manual <b>Magnetic Wireless Keyboard</b></p> <p>Compatible with iPad Pro 12.9</p>  <p>support@chesona.com www.chesona.com</p>	<p><a href="#"><u>User Manual: CHESONA Magnetic Wireless Keyboard for iPad Pro 12.9</u></a></p> <p>Comprehensive user manual for the CHESONA Magnetic Wireless Keyboard, detailing setup, compatibility with iPad Pro 12.9, shortcut maps, touchpad functions, charging, troubleshooting, product specifications, and compliance information.</p>
<p>User Manual <b>Magnetic Wireless Keyboard</b></p> <p>Compatible with iPad Pro 11 iPad Air 10.9</p>  <p>support@chesona.com www.chesona.com</p>	<p><a href="#"><u>CHESONA Magnetic Wireless Keyboard User Manual for iPad Pro &amp; Air</u></a></p> <p>Comprehensive user manual for the CHESONA Magnetic Wireless Keyboard, detailing setup, features, troubleshooting, and compatibility with iPad Pro and iPad Air models.</p>