

Paipaitek PD519V

PaiPaitek Remote Dog Training Collar for PD519V User Manual

Model: PD519V | Brand: Paipaitek

1. INTRODUCTION

The PaiPaitek Remote Dog Training Collar for PD519V is designed to assist pet owners in training their dogs effectively and humanely. This remote-only version is compatible with the original PD519V receiver (not included with this remote-only purchase). It offers two primary training modes: vibration and beep, providing gentle reminders without the use of static shock. With a long-range capability and a waterproof design, this system is suitable for various training environments, helping to reinforce basic commands and correct unwanted behaviors.

This manual provides detailed instructions on how to use and maintain your PaiPaitek remote control, ensuring a positive and effective training experience for both you and your dog.

2. KEY FEATURES

- **Compatibility:** This remote is a replacement for the original PD519V dog training collar remote and is compatible with the existing PD519V receiver.
- **Two Training Modes:** Features vibration and beep modes. This model does not include a static shock mode, focusing on humane training methods.
- **Extended Range:** The remote has a range of up to 3300 feet (approximately 1000 meters), allowing for training in wide outdoor areas.
- **Waterproof Design:** The remote is designed to be waterproof, making it suitable for use in various weather conditions.
- **Rechargeable Battery:** Equipped with a built-in rechargeable lithium-ion battery for extended service life and repeated use.
- **Multi-Dog Control:** Capable of controlling up to 3 receivers (collars) with a single remote, allowing for training multiple dogs simultaneously (additional receivers sold separately).
- **Accidental Activation Lock:** Includes a lock feature to prevent unintended commands during training.

3. GETTING STARTED

3.1 Package Contents

Upon receiving your PaiPaitek Remote Dog Training Collar remote, please verify that all components are present:

- PaiPaitek PD519V Remote Control
- USB Charging Cable
- User Manual



Image: The PaiPaitek PD519V remote control, a compatible collar receiver, and a training clicker. Note: This product listing is for the remote only; collar and clicker are shown for illustrative purposes of a complete system.

3.2 Charging the Remote

Before first use, fully charge the remote control. The remote features a built-in rechargeable lithium-ion battery.

1. Connect the USB charging cable to the charging port on the remote control.
2. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the remote's display will show charging status.
4. Once fully charged, the indicator will show a full battery icon. Disconnect the charger.

A full charge typically provides up to 20 days of battery life, depending on usage frequency.



Image: The remote control displaying its battery life, indicating up to 20 days of use on a single charge. Also illustrates the ability to train up to three dogs with one remote.

3.3 Pairing the Remote and Receiver

This remote is designed to work with the PaiPaitek PD519V receiver. If you are using a new remote or a new receiver, you may need to pair them. Refer to your PD519V receiver's manual for specific pairing instructions, as the process typically involves putting the receiver into pairing mode and then activating the remote's pairing function.

4. OPERATING YOUR TRAINING COLLAR REMOTE

4.1 Understanding Training Modes

The PaiPaitek PD519V remote offers two humane training modes:

- **Beep Mode (Sound):** Emits an audible tone from the receiver. This is often used as a warning or a positive reinforcement signal. There are 9 types of sound available.
- **Vibration Mode:** Causes the receiver to vibrate. This provides a physical sensation to get your dog's attention. Vibration intensity can be adjusted from levels 1-9.

This specific model of the PaiPaitek remote does **not** include a static shock mode, ensuring a gentle and humane training approach.

A gentle Reminder Doesn't Hurt



The image shows a woman with a braid and a white dog looking at each other. The woman is holding a PaiPaitek remote. Below the image are three circular icons representing the training modes: Sound (9 Types), Vibration (1-9 Levels), and Sound + Vibration (1-9 Levels). Each icon shows the remote with a corresponding symbol (sound waves, vibration lines, or both).



Sound
(9 Types)



Vibration
(1-9 Levels)



Sound + Vibration
(1-9 Levels)

Image: Visual representation of the three available training modes: Sound (9 types), Vibration (1-9 levels), and a combination of Sound + Vibration (1-9 levels). This highlights the non-shock training options.



Image: A visual reminder that the collar is designed for humane training, explicitly stating "More Humane NO SHOCK NO PRONGS" to prevent discomfort or injury to the dog.

4.2 Using the Remote Control

The remote control features an intuitive button layout and a clear display for easy operation.



Image: A close-up view of the PaiPaitek PD519V remote control, showing its display, mode buttons, and channel selection. The display indicates the current channel (e.g., '06') and battery level.

- **Power Button:** Located on the side, press and hold to turn the remote ON/OFF.
- **Channel Button (CH):** Allows you to switch between different dog channels (1, 2, or 3) if training multiple dogs.
- **Beep Button:** Activates the audible beep tone on the receiver.
- **Vibration Button:** Activates the vibration on the receiver.
- **Intensity Adjustment Buttons (+/-):** Used to increase or decrease the vibration intensity level (1-9).
- **Accidental Activation Lock:** A physical switch on the side of the remote (often labeled 'Lock'/'Unlock') prevents accidental button presses. Slide it to 'Lock' when not actively training.

The remote offers an impressive range of up to 3300 feet, providing ample distance for outdoor training sessions.

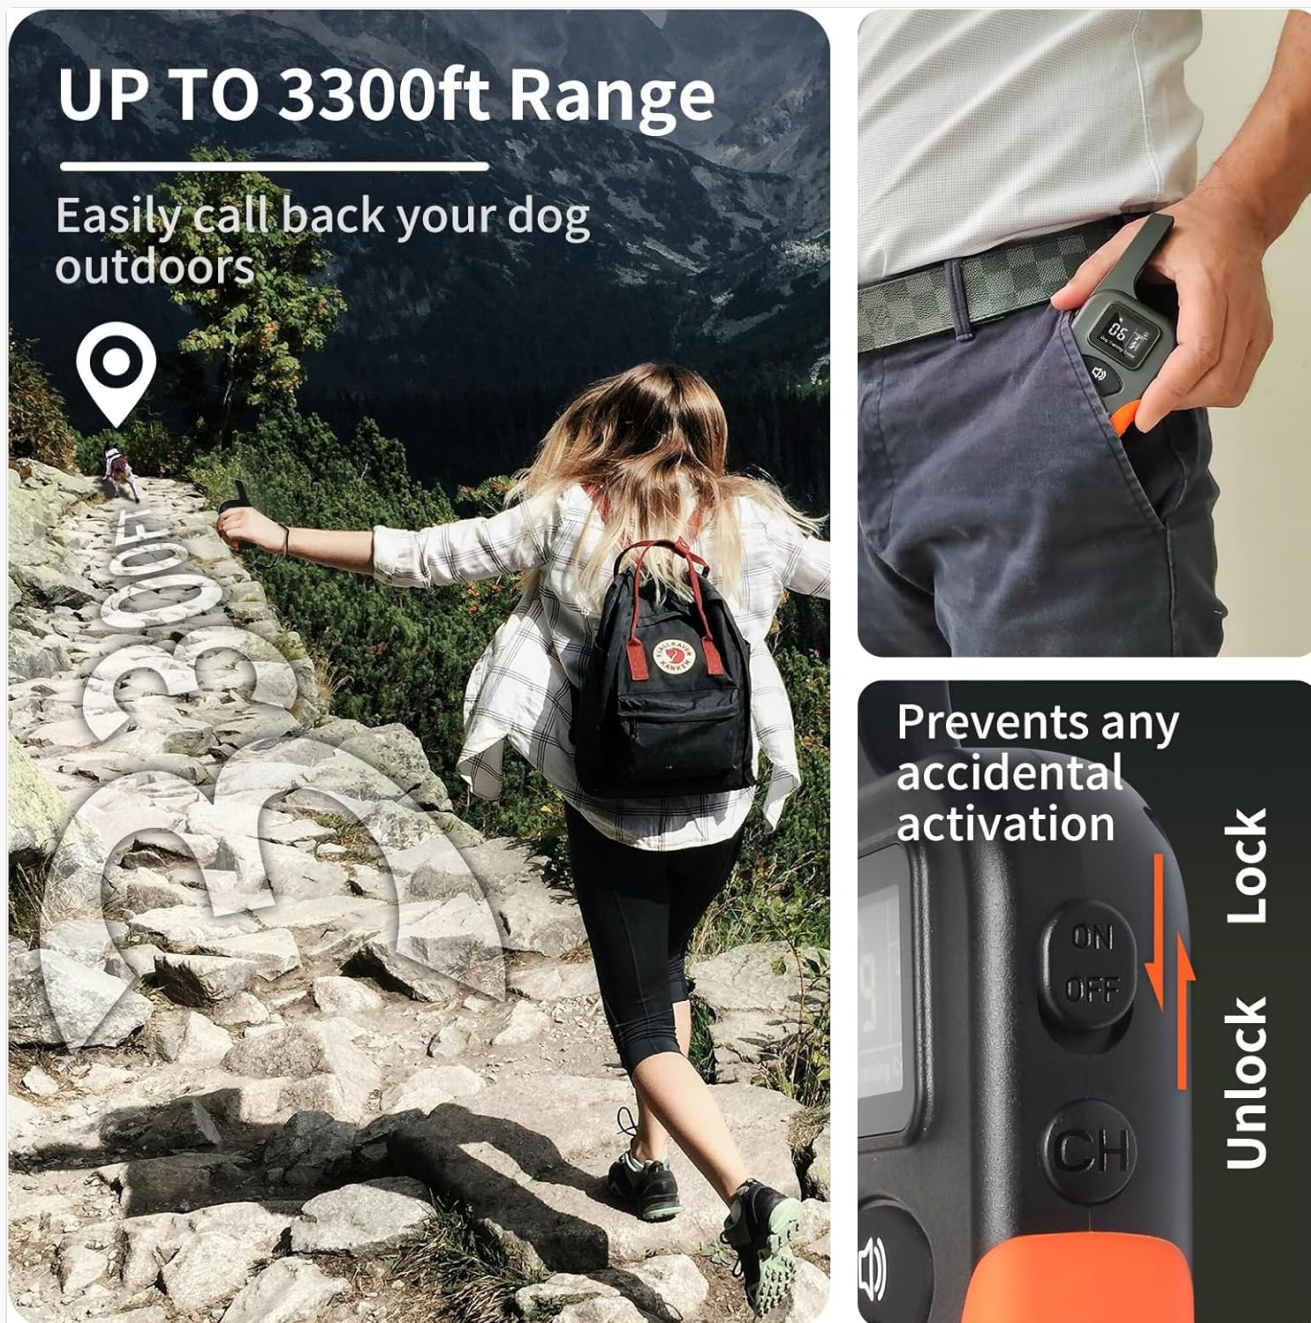


Image: A composite image demonstrating the remote's long range (up to 3300ft) for outdoor use and a close-up of the accidental activation lock switch on the side of the remote.

4.3 Training Multiple Dogs

The PD519V remote can control up to three separate collar receivers (sold separately). To switch between dogs, press the 'CH' (Channel) button on the remote. The display will show the current channel (e.g., '1', '2', or '3'). Ensure each receiver is paired to a unique channel.



Image: The PaiPaitek remote alongside three collar receivers in different colors (pink, orange, blue), illustrating the capability to manage multiple dogs with one remote.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The remote is waterproof. However, avoid prolonged submersion or exposure to high-pressure water jets. Ensure the charging port cover is securely closed when not charging.
- **Storage:** Store the remote in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Life:** To prolong battery life, avoid fully discharging the remote frequently. Charge it regularly, especially before extended periods of non-use.

100% Waterproof



Adjustable Collar for 5 - 120lbs of Dogs



Fits 8-27 inch dog necks

Image: A golden retriever swimming with a PaiPaitek collar, highlighting the 100% waterproof capability of the system. Also shows various dog breeds and collar adjustability.

6. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Remote not turning on	Low battery; Power button not held long enough	Charge the remote; Press and hold the power button for 3-5 seconds.
Remote not controlling receiver	Not paired; Out of range; Incorrect channel selected; Receiver off/low battery	Re-pair remote and receiver; Move closer to the receiver; Select the correct channel; Ensure receiver is on and charged.
No beep/vibration from receiver	Receiver off/low battery; Remote not paired; Incorrect mode selected; Intensity too low (for vibration)	Check receiver power/charge; Re-pair devices; Ensure beep/vibration mode is active; Increase vibration intensity.

Problem	Possible Cause	Solution
Remote display is blank or flickering	Low battery; Malfunction	Charge the remote fully; If issue persists, contact customer support.
Accidental commands	Lock switch is off	Engage the accidental activation lock switch when not in use.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	PD519V
Brand	Paipaitek
Training Modes	Beep (9 types), Vibration (1-9 levels)
Remote Range	Up to 3300 feet (1000 meters)
Waterproof Rating	Waterproof (for remote)
Battery Type	Rechargeable Lithium-ion
Battery Life (Remote)	Up to 20 days (typical usage)
Number of Items	1 (Remote Control)
Target Audience	Dogs (Small, Medium breeds recommended)
Material	Nylon (for compatible collar, not included)
Color	PD 519 remote (Black/Orange)

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information





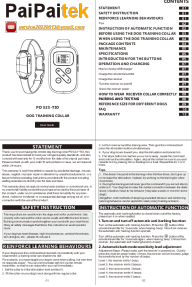

This PaiPaitek product comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

If you encounter any issues with your PaiPaitek Remote Dog Training Collar remote or have questions not covered in this manual, please contact PaiPaitek customer support. For the quickest assistance, refer to the contact information provided on the product packaging or the official PaiPaitek website.

When contacting support, please have your product model number (PD519V) and purchase details ready.

Related Documents - PD519V

	<p>PaiPaitek PD 526-TIO Dog Training Collar User Guide</p> <p>Comprehensive user guide for the PaiPaitek PD 526-TIO dog training collar, covering setup, operation, safety instructions, auto anti-barking function, maintenance, specifications, pairing, testing, and troubleshooting.</p>
	<p>PD 518 Dog Training Collar User Guide</p> <p>Comprehensive user guide for the PD 518 Dog Training Collar, covering safety instructions, training techniques, operation, maintenance, specifications, and troubleshooting.</p>
	<p>PaiPaitek PD 526V Dog Training Collar User Manual</p> <p>Comprehensive user manual for the PaiPaitek PD 526V remote dog training collar. Learn about its features, specifications, how to effectively train your dog using sound and vibration modes, proper collar fitting, charging instructions, pairing procedures, troubleshooting, and safety guidelines.</p>
	<p>PaiPaitek PD 520V Dog Training Collar: User Manual & Guide</p> <p>Learn how to effectively train your dog using the PaiPaitek PD 520V no-shock dog training collar. This user guide covers setup, operation, training tips, and troubleshooting for the PD 520V, PD 520V-1, and PD 520V-2 models.</p>
	<p>PaiPaitek PD 523-TIO Dog Training Collar User Guide</p> <p>Comprehensive user guide for the PaiPaitek PD 523-TIO Dog Training Collar, covering features, operation, safety instructions, maintenance, specifications, and troubleshooting.</p>
	<p>PaiPaitek PC 559-TIO Remote Cat Training Collar User Guide</p> <p>Comprehensive user guide for the PaiPaitek PC 559-TIO remote cat training collar, detailing its features, operation, training methods, and safety precautions. Includes information on pairing, charging, and testing the device.</p>

