

Hiicam Speed 10

Hiicam Speed 10 Action Camera User Manual

Model: Speed 10

INTRODUCTION

Welcome to the user manual for your Hiicam Speed 10 Action Camera. This guide provides detailed instructions on how to set up, operate, and maintain your camera to ensure optimal performance. The Hiicam Speed 10 is designed to capture high-quality 5K 30FPS videos and 30MP photos, featuring Electronic Image Stabilization (EIS), WiFi connectivity, and waterproof capabilities up to 131 feet (40 meters) with its included housing. Please read this manual thoroughly before using your camera.

PRODUCT OVERVIEW

Key Features

- **5K30FPS Video & 30MP Image:** Capture ultra-sharp video at 5K resolution and high-resolution 30-megapixel photos.
- **131FT (40M) Waterproof:** Utilize the included waterproof housing for underwater recording up to 131 feet.
- **Built-in EIS & 170° Wide Angle:** Benefit from Electronic Image Stabilization for smooth footage and a 170° ultra-wide-angle lens to capture expansive scenes.
- **WiFi + Smart App Control:** Connect to your smartphone via WiFi to control the camera, preview footage, and download content using the dedicated app.
- **Remote Control:** Operate the camera remotely for convenient photo and video capture.
- **Dual Screens:** Features both front and rear screens for versatile viewing and selfie composition.

Package Contents

The Hiicam Speed 10 Action Camera package typically includes the following items:

- Hiicam Speed 10 Action Camera
- Waterproof Housing
- Rechargeable Li-ion Batteries (2x 1350mAh)

- Remote Control
- Battery Charger
- USB Cable
- Various Mounting Accessories (e.g., helmet mount, bike mount, adhesive pads, straps)
- User Manual

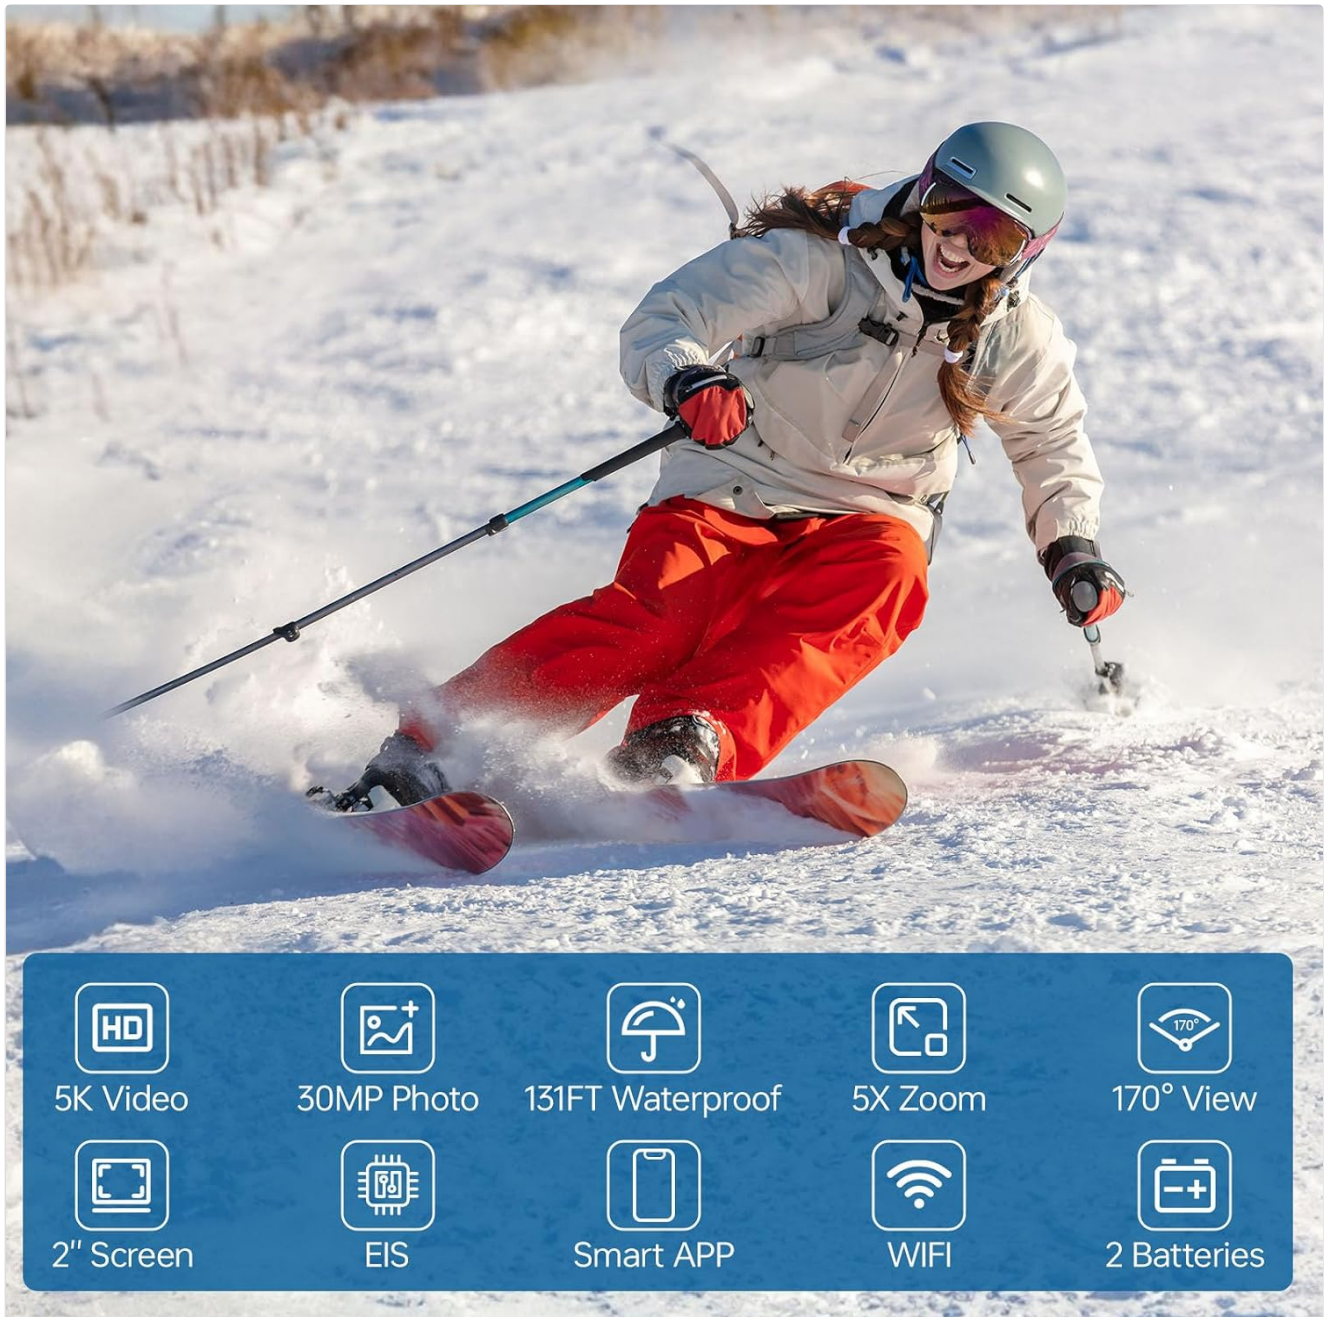


Image: Hiicam Speed 10 Action Camera and its included accessories.

SETUP

1. Battery Installation

1. Locate the battery compartment on the bottom of the camera.
2. Slide the latch to open the compartment cover.
3. Insert a fully charged 1350mAh Li-ion battery, ensuring the contacts align correctly.
4. Close the compartment cover securely until it clicks into place.

2. Memory Card Installation

The Hiicam Speed 10 supports MicroSD cards up to 256GB. A Class 10 or UHS-I (U1/U3) speed rating is recommended for optimal performance, especially for 5K video recording.

1. Locate the MicroSD card slot on the side of the camera.
2. Insert the MicroSD card with the gold contacts facing the front of the camera until it clicks into place.
3. To remove, gently push the card in until it springs out.
4. It is recommended to format the memory card in the camera's settings menu before first use and periodically thereafter to ensure stable recording.

3. Waterproof Case Usage

The included waterproof housing allows the camera to be used underwater up to 131 feet (40 meters).

1. Before placing the camera inside, ensure the waterproof case is clean and free of debris. Check the rubber seal for any damage.
2. Place the camera gently into the housing.
3. Close the latch securely.
4. **Important:** Before using the camera underwater, perform a leak test with the empty housing to ensure it is sealed correctly.

WATERPROOF UP TO 131FT/40M

waterproof case required

131 FT



Image: Hiicam Speed 10 Action Camera in its waterproof case during underwater use.

4. Mounting the Camera

The Hiicam Speed 10 comes with various mounts for different activities. Attach the camera to the desired mount (e.g., helmet, bicycle, chest strap) using the provided accessories. Ensure all connections are secure before engaging in any activity.

OPERATING THE CAMERA

1. Power On/Off

- **To Power On:** Press and hold the Power/Mode button for approximately 3 seconds.
- **To Power Off:** Press and hold the Power/Mode button for approximately 3 seconds.

2. Mode Switching

After powering on, short press the Power/Mode button to cycle through the available modes:

- Video Recording Mode
- Photo Mode
- Playback Mode
- Settings Menu

3. Video Recording

1. Switch to Video Recording Mode. The video icon will be displayed on the screen.
2. Press the Shutter/OK button to start recording. A red dot or timer will indicate recording is in progress.
3. Press the Shutter/OK button again to stop recording.



Image: Camera screen showing 5K 30FPS video recording.

4. Photo Capture

1. Switch to Photo Mode. The photo icon will be displayed on the screen.
2. Press the Shutter/OK button to take a photo.

5. Electronic Image Stabilization (EIS)

The Hiicam Speed 10 features Electronic Image Stabilization (EIS) to reduce blur and shake in your videos, especially during active movements.

- To enable or disable EIS, navigate to the Settings Menu and locate the EIS option.
- EIS is most effective in resolutions up to 4K.

Image Stabilization

Ensuring steady and smooth Image



Image: Visual comparison of video footage with EIS off and EIS on.

6. WiFi and App Control

The camera can be controlled remotely using the dedicated smartphone app.

1. Download the appropriate app (refer to the camera's packaging or on-screen QR code for the app name).
2. On the camera, navigate to the Settings Menu and enable WiFi. The camera's WiFi name and password will be displayed.
3. On your smartphone, go to WiFi settings and connect to the camera's WiFi network.
4. Open the app. You can now preview live footage, control recording, change settings, and download files directly to your phone.

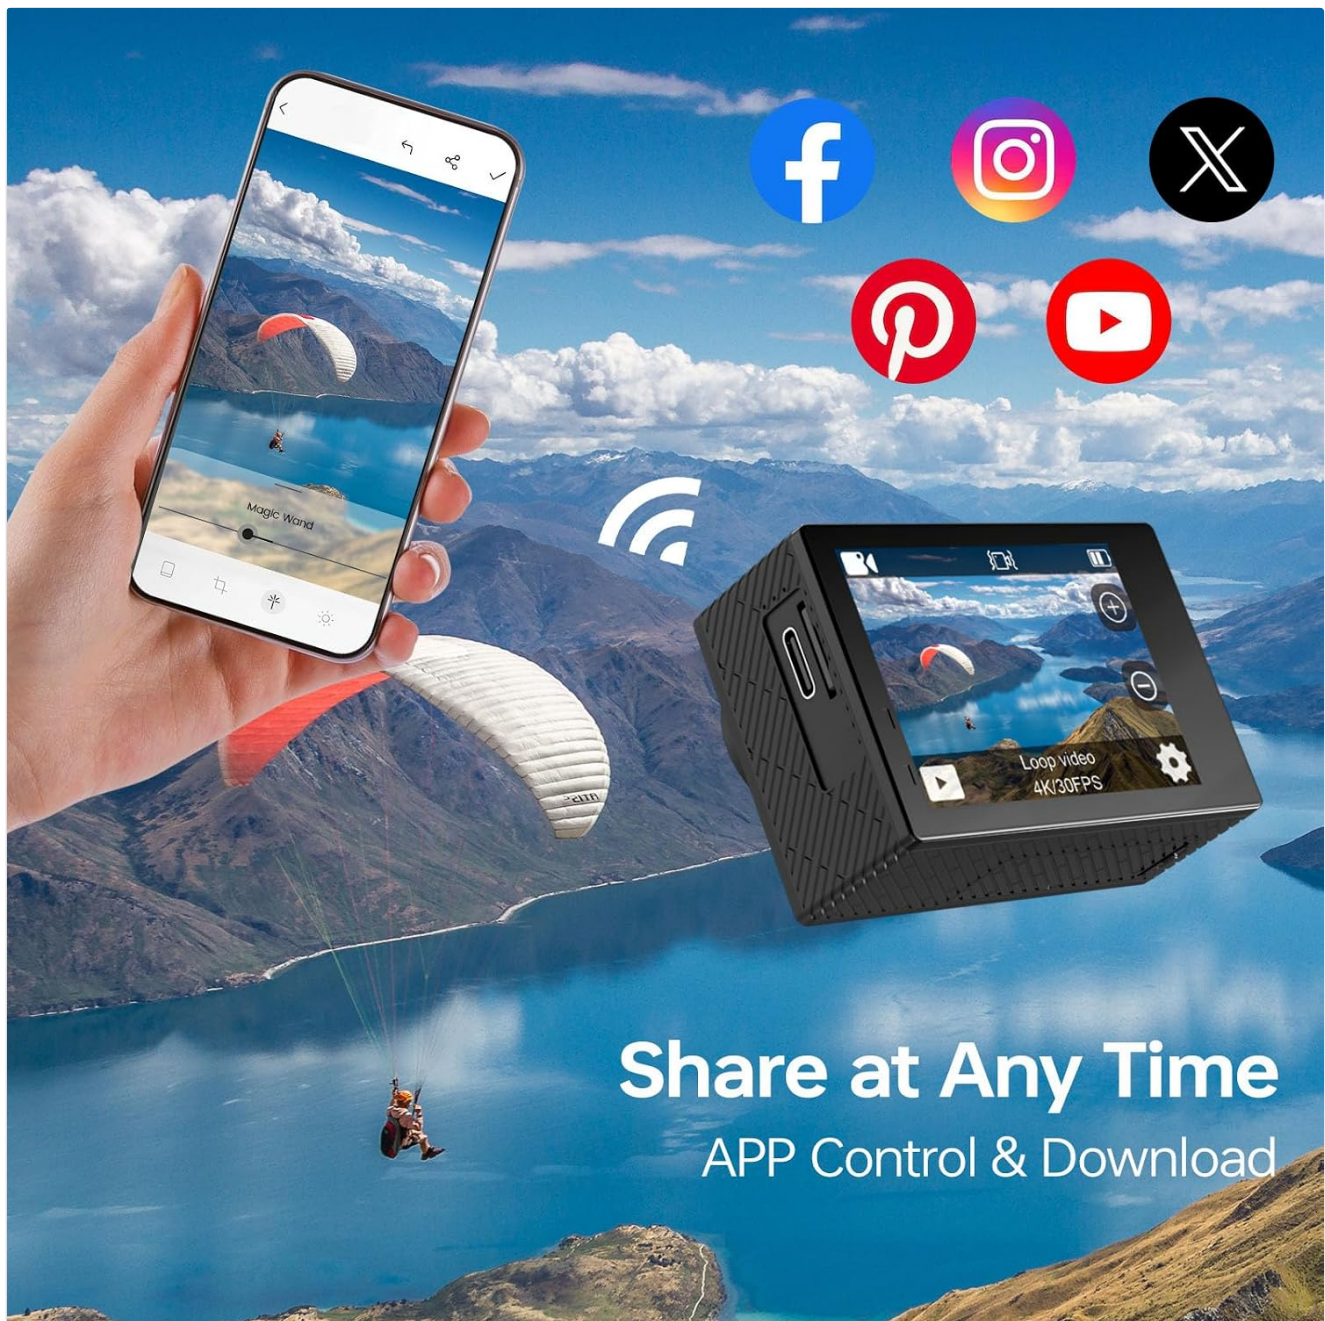


Image: Smartphone displaying the camera control app interface.

7. Remote Control

The included remote control allows for convenient operation without directly touching the camera.

- Ensure the remote control has a working battery.
- To pair, turn on the camera and then activate the remote (specific pairing steps may vary, refer to the quick start guide if provided).
- Use the designated buttons on the remote to start/stop video recording or take photos.

8. Settings Menu

Access the Settings Menu by cycling through modes. Use the Up/Down buttons to navigate and the Shutter/OK button to select options. Common settings include:

- Video Resolution (e.g., 5K30FPS, 4K60FPS, 1080P120FPS)
- Photo Resolution (e.g., 30MP, 20MP)
- Loop Recording

- Time-Lapse Video/Photo
- Exposure Compensation
- White Balance
- Date Stamp
- Screen Saver
- Frequency
- Date/Time
- Format SD Card
- Factory Reset

MAINTENANCE

1. Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Avoid touching the lens with fingers.
- **Camera Body:** Wipe with a soft, damp cloth. Do not use harsh chemicals or solvents.
- **Waterproof Case:** After underwater use, rinse the case with fresh water and allow it to air dry. Ensure no salt or debris remains on the seals.

2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, remove the batteries from the camera.

3. Battery Care

- Fully charge batteries before each use.
- Avoid exposing batteries to extreme heat or cold.
- If a battery appears damaged or swollen, discontinue use immediately.

TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted. Try using the second battery if available.
- **Recording issues (freezing, corrupted files):** Ensure you are using a Class 10 or UHS-I (U1/U3) MicroSD card. Format the memory card in the camera's settings.
- **WiFi connection problems:** Ensure WiFi is enabled on the camera and your smartphone. Try restarting both devices. Check for app updates.
- **Blurry images/videos:** Clean the camera lens. Ensure EIS is enabled for video recording if desired. Check focus settings if applicable (most action cameras are fixed focus).
- **Short battery life:** Ensure batteries are fully charged. Reduce screen brightness, turn off WiFi when not in use, and disable unnecessary features to conserve power.
- **Camera overheating:** It is normal for the camera to warm up during extended use, especially when recording in high resolutions. If it becomes excessively hot or shuts down, allow it to cool down before further use.

SPECIFICATIONS

Feature	Specification
Brand	Hiicam
Model Name	Speed 10
Video Resolution	Up to 5K30FPS
Photo Resolution	Up to 30MP
Waterproof Depth	131FT / 40M (with waterproof case)
Image Stabilization	Digital (EIS)
Lens Angle	170° Wide Angle
Connectivity	WiFi
Storage	MicroSD Card (up to 256GB, Class 10/UHS-I recommended)
Batteries	2x 1350mAh Lithium Ion (included)
Product Dimensions	2.2 x 0.95 x 1.61 inches
Item Weight	1.1 pounds
Photo Sensor Technology	CMOS
Supported File Format	JPEG

WARRANTY AND SUPPORT

Your Hiicam Speed 10 Action Camera comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including coverage duration and claim procedures. For technical support, troubleshooting assistance, or warranty inquiries, please contact Hiicam customer service through the contact information provided on the product packaging or the official Hiicam website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question