

[Manuals.plus](#) /

› [MAXSHOT](#) /

› MAXSHOT Electric Scooter V1/SPRO/MAX/V1PRO User Manual

MAXSHOT V1/SPRO/MAX/V1PRO

MAXSHOT Electric Scooter User Manual

Models: V1, SPRO, MAX, V1PRO

1. INTRODUCTION

Thank you for choosing the MAXSHOT Electric Scooter. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your scooter. Please read this manual thoroughly before your first ride to ensure optimal performance and safety.

Important Safety Information

- Always wear a helmet and appropriate safety gear when riding.
- Do not ride in heavy rain or through puddles deeper than 1 inch.
- Ensure all components are securely fastened before each ride.
- Adhere to local traffic laws and regulations.
- The maximum load capacity is 264 lbs (120 kg).
- Regularly check the battery and charging device. Use only the matching battery and correct charging method in a well-ventilated, non-flammable environment.

2. PRODUCT OVERVIEW

The MAXSHOT Electric Scooter is designed for efficient and enjoyable urban commuting. It features a powerful motor, long-range battery, and smart app control for an enhanced riding experience.



Figure 2.1: MAXSHOT Electric Scooter with its accompanying smartphone application interface.

Key Features

- **Motor:** Equipped with a 350W or 500W motor, providing speeds up to 19 mph or 22 mph.
- **Range:** Offers a range of 21 to 28 miles under specific conditions.
- **Tires:** Features 8.5", 10", or 14" maintenance-free solid honeycomb tires, eliminating the need for inflation or repairs.
- **Suspension:** Dual suspension system for a comfortable ride.
- **Braking System:** Dual braking system including drum braking and EABS anti-lock braking for enhanced safety.
- **Folding Design:** Lightweight and portable, folds in approximately 3 seconds for easy transport and storage.
- **Smart App Control:** Connects to a smartphone app for functions like locking/unlocking, customized speed limits, and cruise control.
- **LED Display:** Integrated display shows current speed, speed mode, and battery life.

350W

POWERFUL MOTOR



19MPH
Top Speed



15%
Uphill Climbing

Figure 2.2: Detailed view of the scooter's motor, illustrating its power and performance capabilities.

SMART APP CONTROL



Bluetooth Pairing



Lock&Unlock Your Scooter



Headlight Control



Cruise Control



Customized Speed Limit



Switch Riding Modes

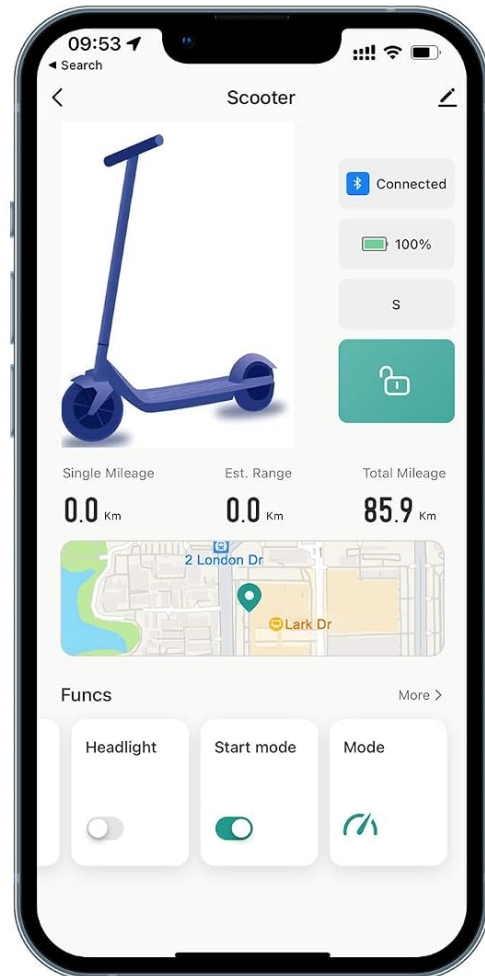


Figure 2.3: Overview of the smart app control features available for the scooter.



Figure 2.4: The scooter's LED display and handlebar controls.

3. SETUP

3.1 Unboxing and Initial Assembly

Your MAXSHOT Electric Scooter comes partially assembled. Carefully remove all packaging materials. The main assembly involves unfolding the scooter and securing the handlebar.

1. Place the scooter on a flat surface.
2. Locate the folding mechanism near the base of the steering column.
3. Release the locking lever and carefully lift the steering column until it clicks into an upright, locked position. Ensure the locking mechanism is fully engaged.
4. Attach the handlebars if they are separate, ensuring all cables are properly connected and secured.



Figure 3.1: The scooter's folding mechanism for portability.

3.2 Initial Charging

Before your first ride, fully charge the scooter's battery. This helps to optimize battery life and performance.

1. Locate the charging port on the scooter.
2. Connect the charger to the scooter, then plug the charger into a standard power outlet.
3. The charging indicator light on the charger will typically turn red during charging and green when fully charged.
4. Do not overcharge the battery. Disconnect the charger once charging is complete.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- To power on: Press and hold the power button on the LED display for a few seconds.
- To power off: Press and hold the power button again until the display turns off.

4.2 Riding

1. Place one foot firmly on the deck and push off with the other foot to gain initial momentum.
2. Once moving, gently press the accelerator lever to engage the motor.
3. Maintain a balanced posture and keep both hands on the handlebars.

4.3 Speed Modes and Cruise Control

- **Speed Modes:** Your scooter may have multiple speed modes (e.g., Eco, Standard, Sport). Cycle through these modes using the designated button on the display or via the smartphone app.
- **Cruise Control:** To activate cruise control, maintain a consistent speed for a few seconds. The scooter will beep, and the cruise control icon will appear on the display. To deactivate, press the brake lever or accelerator.

4.4 Braking System

The scooter is equipped with a dual braking system for effective stopping.

- To brake, gently squeeze the brake lever(s) on the handlebars.
- Apply brakes smoothly to avoid sudden stops, especially at higher speeds.
- The EABS anti-lock braking system assists in preventing wheel lock-up during braking.



Keep You Safe —.



Lighting System



Dual Braking System

Figure 4.1: Safety features including lighting and dual braking system.

4.5 Smartphone App Connectivity

Download the official MAXSHOT app from your device's app store. Follow the in-app instructions to pair your scooter via Bluetooth. The app allows you to:

- Lock/Unlock the scooter.
- Monitor riding data (single mileage, total mileage, estimated range).
- Control the headlight.
- Activate/deactivate cruise control.
- Set customized maximum speed limits.
- Switch riding modes.

5. MAINTENANCE

5.1 Battery Care

- Charge the battery regularly, even if the scooter is not in use for extended periods (at least once a month).
- Avoid completely draining the battery.
- Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures.
- Use only the original charger provided with your scooter.

5.2 Tire Maintenance

Your MAXSHOT scooter is equipped with maintenance-free solid honeycomb tires. These tires do not require inflation, repair, or regular pressure checks, offering convenience and durability.

- Inspect tires periodically for any signs of damage or excessive wear.
- Clean tires as needed to remove dirt and debris.

5.3 General Cleaning

- Wipe down the scooter with a damp cloth. Avoid using high-pressure water jets or harsh cleaning agents.
- Do not immerse the scooter in water.

5.4 Regular Checks

Perform the following checks before each ride:

- Ensure the folding mechanism is securely locked.
- Check brake functionality.
- Verify that the handlebars are tight and stable.
- Inspect the frame for any visible damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on.	Low battery; loose connections; power button issue.	Charge the battery fully. Check all visible connections. Contact support if issue persists.
Motor not engaging.	Scooter not pushed off to gain initial speed; accelerator malfunction.	Ensure you push off to at least 2-3 mph before engaging the accelerator. Check app for error codes.
App not connecting via Bluetooth.	Bluetooth off on phone; scooter not in pairing mode; app issue.	Ensure phone Bluetooth is on. Restart scooter and app. Try pairing again.
Brakes feel loose or ineffective.	Brake cable adjustment needed; worn brake pads.	Inspect brake cables and pads. Seek professional assistance for adjustment or replacement.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	MAXSHOT
Model Names	V1, SPRO, MAX, V1PRO
Motor Power	350W / 500W (depending on model)
Max Speed	19 mph / 22 mph (depending on model)
Max Range	21-28 miles (under specific conditions)
Tire Size	8.5" / 10" / 14" (Solid Honeycomb)
Weight Limit	264 lbs (120 kg)
Product Dimensions	44.49"L x 21"W x 6.2"H (folded)
Frame Material	Aluminum
Special Features	Cruise Control, Digital Display, Dual Braking System, Foldable, Lightweight, App Control

8. WARRANTY AND SUPPORT

MAXSHOT Electric Scooters are engineered for consistent performance. Components are tested to last up to 180 days of regular use.

- **Warranty Period:** Components are covered for up to 180 days from the date of purchase for manufacturing defects.
- **Customer Support:** Our team is committed to responding to inquiries within 24 hours. For support, please refer to the contact information provided with your purchase documentation or visit the official MAXSHOT website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I find a replacement charger for my MAXSHOT V1SPRO electric scooter?

To find a replacement charger for your MAXSHOT V1SPRO, it is important to ensure you get a compatible unit to avoid damaging the battery. The manual emphasizes using only the original or a matching...

[Read full answer](#)