

[Manuals.plus](#) /

› [Yoidesu](#) /

› Yoidesu 2.7K HD Camcorder User Manual (Model: Yoidesu5ns20h3q8b)

Yoidesu Yoidesu5ns20h3q8b

Yoidesu 2.7K HD Camcorder User Manual (Model: Yoidesu5ns20h3q8b)

Comprehensive instructions for operating your Yoidesu 2.7K HD Camcorder.

1. INTRODUCTION

Thank you for purchasing the Yoidesu 2.7K HD Camcorder. This manual provides detailed instructions for the proper use, setup, and maintenance of your device. Please read this manual thoroughly before operating the camcorder to ensure optimal performance and longevity.

2. SAFETY INFORMATION

- Do not expose the camcorder to water or moisture.
- Avoid dropping the device or subjecting it to strong impacts.
- Keep out of reach of children.
- Use only the specified battery type (NP-40 3.7V 1500mAh lithium battery).
- Do not attempt to disassemble or modify the camcorder.
- Clean the lens with a soft, dry cloth.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Yoidesu 2.7K HD Camcorder
- User Manual
- Battery (NP-40 3.7V 1500mAh lithium battery)
- USB Cable
- Storage Bag

MULTIFUNCTIONAL CAMERA

This video camcorder comes with built in fill light, face recognition, timer shooting, self timer, continuous shooting, silent shooting, webcam function, pause function, delay recording, and a whole lot more! It supports recording while charging, so you don't need to worry about missing any moments when the battery runs out during shooting.



Image: Yoidesu 2.7K HD Camcorder with included accessories.

4. PRODUCT OVERVIEW

The Yoidesu 2.7K HD Camcorder is designed for capturing high-quality video and photos. Key features include:

- 2.7K Video Resolution and 50MP Image Resolution
- 2.8-inch TFT LCD Rotatable Screen (270-degree rotation)
- 16x Digital Zoom
- Built-in LED Fill Light
- Webcam Functionality via USB
- Support for Recording While Charging
- 1/4 inch Threaded Connector for Tripod Mounting
- Multiple functions: Face Recognition, Timer Shooting, Self-Timer, Continuous Shooting, Silent Shooting, Pause Function, Delay Recording.



Image: Front view of the camcorder, highlighting the lens and screen.



Image: Side view of the camcorder with the screen open, showing control buttons and ports.

5. SETUP

5.1. Battery Installation

1. Locate the battery compartment on the bottom of the camcorder.
2. Slide the battery compartment cover to open it.
3. Insert the provided NP-40 lithium battery, ensuring the correct orientation.
4. Close the battery compartment cover until it clicks securely.



1/4 inch Threaded Connector

There is a standard 1/4 inch threaded connector on the bottom of the camera

You can mount the camcorder on a tripod for more stable photo and video shooting

Long term recording

Built in 1x 3.7V 1500mAh lithium battery

Catch up to 80 minutes of video in Full HD mode

Suitable for growth records, travel, wedding, school records, etc



Image: Steps for installing the battery into the camcorder.

Your browser does not support the video tag.

Video: Demonstrates the process of installing the battery, powering on, and using the screen rotation and zoom functions.

5.2. Powering On/Off

To power on the camcorder, open the LCD screen. To power off, close the LCD screen or press and hold the power button (if available, refer to specific button layout).

5.3. Memory Card Installation (Not Included)

This camcorder requires a compatible SD card (not included) for storing videos and photos. Locate the SD card slot, typically near the battery compartment or under the LCD screen. Insert the SD card with the contacts facing the correct direction until it clicks into place.

6. OPERATING INSTRUCTIONS

6.1. Basic Video Recording

1. Ensure the camcorder is powered on and a memory card is inserted.
2. Open the LCD screen and rotate it to your desired viewing angle.
3. Press the **Record** button (usually marked with a red dot) to start recording.
4. Press the **Record** button again to stop recording.



Image: The camcorder's rotatable screen displaying a live view, demonstrating its 2.7K video capability.

6.2. Digital Zoom (16x)

Use the zoom lever (marked 'W' for Wide and 'T' for Telephoto) to adjust the 16x digital zoom. Slide the lever towards 'T' to zoom in and towards 'W' to zoom out.



Image: Visual representation of the 16x digital zoom feature, showing a zoomed-in comparison.

6.3. Webcam Function

Connect the camcorder to your computer using the provided USB cable. The camcorder can be used as a webcam for video calls or live streaming. Select the webcam mode on the camcorder if prompted, or select it as the video input device in your computer's software settings.



Image: The camcorder functioning as a webcam, connected to a laptop for video calls.

6.4. Built-in LED Fill Light

Activate the built-in LED fill light for improved illumination in low-light conditions. Refer to the camcorder's button layout for the specific light control button.



Image: Demonstrates the effect of the built-in LED fill light, showing improved clarity with the light on.

6.5. Recording While Charging

The camcorder supports recording while connected to a power source via the USB cable. This feature allows for extended shooting sessions without interruption due to battery depletion.



Image: The camcorder actively recording video while connected to a power source for continuous operation.

6.6. Tripod Mounting

A standard 1/4 inch threaded connector is located on the bottom of the camcorder. This allows for mounting the device on a tripod (not included) for stable video recording and photography.



Image: The bottom of the camcorder, showing the 1/4 inch threaded connector for tripod attachment.

6.7. Additional Functions

The camcorder includes several advanced features:

- **Face Recognition:** Automatically detects and focuses on faces.
- **Timer Shooting:** Set a delay before taking a photo.
- **Self-Timer:** Allows for delayed photo capture.
- **Continuous Shooting:** Capture multiple photos in quick succession.
- **Silent Shooting:** Disables shutter sounds.
- **Pause Function:** Temporarily pause video recording.
- **Delay Recording:** Start recording after a set delay.

2.7K CAMCORDER

50MP IMAGE RESOLUTION

2.7K Video Camera/Capture 50MP Clear Photo
Allows you to record wonderful moments



Image: Overview of the camcorder's multi-functional capabilities, including photo, face detection, selfie, and continuous shooting modes.

7. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution.
- **Storage:** When not in use, store the camcorder in a dry, cool place, away from direct sunlight and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Fully charge the battery before first use. Avoid completely draining the battery frequently to prolong its lifespan.

8. TROUBLESHOOTING

Problem	Possible Solution
Camcorder does not power on.	Ensure the battery is correctly installed and fully charged. Try charging the camcorder with the USB cable.
Cannot record video/take photos.	Check if a memory card is inserted and has sufficient free space. Ensure the camcorder is in the correct mode (video or photo).
Poor image/video quality.	Clean the lens. Ensure adequate lighting; use the built-in fill light if necessary. Check resolution settings.
Camcorder not recognized as webcam.	Ensure the USB cable is securely connected. Select webcam mode on the camcorder. Check computer's device manager or camera settings.

9. SPECIFICATIONS

Feature	Detail
Video Resolution	Up to 2.7K
Image Resolution	50 MP
Screen	2.8 inch TFT LCD (270-degree rotatable)
Digital Zoom	16x
Image Stabilization	Digital
Battery	NP-40 3.7V 1500mAh Lithium Battery
Recording Time (Full HD)	Up to 80 minutes
Webcam Function	Yes
Fill Light	Built-in LED
Tripod Mount	Standard 1/4 inch threaded connector
Dimensions	5.51 x 3.94 x 3.15 inches
Item Weight	13.5 ounces
Model Number	Yoidesu5ns20h3q8b

10. WARRANTY AND SUPPORT

Yoidesu products come with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the contact information provided on the product packaging or visit the official Yoidesu website.

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D8JKNK37>

More documents and user manuals: <https://manuals.plus/>