

AGLUCKY AL-TB8776-WHITE-FBA

AGLUCKY Towel Warmer (Model AL-TB8776-WHITE-FBA) Instruction Manual

Your guide to safe and effective use of your AGLUCKY Towel Warmer.

1. INTRODUCTION

Thank you for choosing the AGLUCKY 25L Towel Warmer. This appliance is designed to provide warm towels, blankets, bathrobes, and other delicate clothes, enhancing your comfort. Featuring two heating modes, an LCD screen with adjustable auto shut-off times, and a large capacity, this towel warmer is a convenient addition to any home. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Read all instructions before using this appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the cord away from heated surfaces.
- Do not use outdoors. This appliance is for indoor household use only.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not allow children to operate this appliance. Close supervision is necessary when any appliance is used by or near children.
- Do not use the appliance for anything other than its intended use.
- Ensure the appliance is placed on a stable, flat surface.
- Do not block the ventilation openings on the lid.
- The interior of the warmer can become very hot. Avoid direct contact with the inner surfaces when the unit is operating or recently operated.

3. PRODUCT OVERVIEW

The AGLUCKY Towel Warmer is designed for convenience and comfort. Key features include:

- **25L Capacity:** Large enough to accommodate multiple towels, bathrobes, blankets, or other garments.
- **Fast & Uniform Heating:** Heats up quickly, reaching high temperatures in approximately 6 minutes.
- **Two Heating Modes:** Select between High (approx. 140°F) and Low (approx. 120°F) temperature settings.
- **LCD Smart Display:** Digital screen shows the remaining heating time.
- **Auto Shut-Off Timer:** Customizable timer settings for 20, 40, 60, or 90 minutes.
- **Fragrance Disc Holder:** Integrated into the lid for optional aromatherapy (fragrance disc not included).
- **Overheat Protection:** Built-in safety feature to prevent overheating.
- **Stable Footing:** Equipped with wooden feet for stability.



Image: AGLUCKY Towel Warmer showing its 25L capacity and dimensions (14.49 inches width, 18.43 inches height).

Fast & Uniform Heating

Every day is like a SPA

Quick
Heating

1

Min

High
Temp

6

Min



Image: Illustration of the towel warmer's fast and uniform heating, reaching high temperatures in 6 minutes.



Image: Close-up of the towel warmer's lid, highlighting the integrated fragrance disc holder for aromatherapy.

4. SETUP

1. **Unpack:** Carefully remove the towel warmer from its packaging.
2. **Placement:** Place the unit on a dry, level, and stable surface in your desired location, ensuring it is away from water sources and flammable materials.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.
4. **Initial Cleaning:** Before first use, wipe the interior and exterior with a damp cloth. Ensure the unit is completely dry before plugging it in.

Your browser does not support the video tag.

Video: AGLUCKY Towel Warmer for bathroom. This video demonstrates the towel warmer's setup and use, including placing a towel inside and operating the controls.

5. OPERATING INSTRUCTIONS

1. **Load Items:** Open the lid and place your dry towels, blankets, or robes inside the warmer. For best results, loosely fold or roll items to allow for even heat distribution. Do not overfill.
2. **Close Lid:** Securely close the lid.

3. **Power On:** Press the power button () on the LCD display. The display will illuminate.
4. **Set Timer:** Press the timer button () to cycle through the available auto shut-off times: 20, 40, 60, or 90 minutes. Select your desired duration.
5. **Select Heating Mode:** Choose between High (HI) or Low (LO) heating modes by pressing the corresponding button. High mode provides a thermal towel temperature of approximately 140°F, while Low mode provides approximately 120°F.
6. **Heating Process:** The unit will begin heating. The LCD screen will count down the remaining time.
7. **Automatic Shut-Off:** The towel warmer will automatically turn off once the set time has elapsed.
8. **Retrieve Items:** Carefully open the lid and remove your warm items. Be cautious as items may be hot.



Image: Close-up of the AGLUCKY Towel Warmer's LCD smart display, showing the power button, timer button, and high/low heating mode indicators.

Your browser does not support the video tag.

Video: Bathroom Towel Warmer, Soft Heating, Auto Shut-Off Timer. This video demonstrates the towel warmer's operation, including setting the timer and heating modes.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your AGLUCKY Towel Warmer.

- **Cleaning:** Always unplug the unit and allow it to cool completely before cleaning. Wipe the exterior with a soft, damp cloth. For the interior, use a damp cloth with mild soap if necessary, then wipe with a clean, damp cloth and dry thoroughly. Do not use abrasive cleaners or scourers.
- **Storage:** When not in use, store the towel warmer in a cool, dry place.
- **Fragrance Disc Holder:** If using a fragrance disc, clean the holder regularly to prevent residue buildup.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outage; unit malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. Contact customer support if the issue persists.
Items are not warm enough.	Incorrect heating mode; insufficient heating time; overfilled.	Select the High heating mode. Increase the timer duration. Ensure items are loosely placed and not overfilling the unit.
Uneven heating.	Items are too tightly packed.	Rearrange items loosely inside the warmer to allow for better air circulation and even heat distribution.
Unit automatically shuts off prematurely.	Overheat protection activated.	Unplug the unit and allow it to cool down for at least 30 minutes before attempting to use it again. Ensure proper ventilation.

8. SPECIFICATIONS

- **Model Number:** AL-TB8776-WHITE-FBA
- **Capacity:** 25 Liters
- **Material:** Plastic, Stainless Steel
- **Package Dimensions:** 18.75 x 16.13 x 16 inches
- **Item Weight:** 11.48 pounds
- **Heating Modes:** High (approx. 140°F), Low (approx. 120°F)
- **Auto Shut-Off Timer:** 20, 40, 60, 90 minutes
- **Manufacturer:** AGLUCKY

9. WARRANTY AND SUPPORT

AGLUCKY is committed to providing quality products and customer satisfaction. For any questions, concerns, or support needs regarding your towel warmer, please contact our customer service team. We offer 24-hour customer support to assist you.

Please refer to your purchase documentation for specific warranty details.