

Qaba US370-267V00GN0131

Qaba Toddler Tricycle (Model US370-267V00GN0131) Instruction Manual

For children aged 2-5 years

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Qaba Toddler Tricycle, Model US370-267V00GN0131. Please read all instructions carefully before assembly and use to ensure proper function and safety for your child. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Always monitor your children while they are riding. Adult supervision is required at all times.

- Ensure all parts are securely fastened before each use.
- Do not use the tricycle near stairs, hills, roads, or swimming pools.
- Children should wear appropriate safety gear, including a helmet, when riding.
- The tricycle is designed for children aged 2-5 years.
- Maximum weight capacity: 55 lbs (25 kg).
- Only one rider at a time.
- Inspect the tricycle regularly for wear and tear, especially on wheels, pedals, and steering components.

3. PACKAGE CONTENTS

Please check that all components are present before beginning assembly:

- Tricycle Frame
- Front Wheel (1)
- Rear Wheels (2)
- Handlebars
- Seat
- Pedals (2)
- Basket

- Bell
- Assembly Tools (e.g., wrench)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is required. Please follow these steps carefully. It is recommended to have an adult perform the assembly.

1. **Attach Rear Wheels:** Securely attach the two rear wheels to the tricycle frame using the provided hardware. Ensure they are firmly in place and spin freely.
2. **Install Front Wheel and Pedals:** Insert the front wheel into the fork of the tricycle frame. Attach the pedals to the front wheel axle. Make sure pedals are tightened to prevent loosening during use.
3. **Mount Handlebars:** Insert the handlebar stem into the front fork tube. Adjust the height if necessary and tighten the clamp bolt securely. Ensure the handlebars are aligned with the front wheel.
4. **Attach Seat:** Slide the seat post into the frame's seat tube. Adjust the seat height to fit the child and tighten the quick-release lever or bolt.
5. **Install Basket and Bell:** Attach the basket to the front of the handlebars. Mount the bell onto the handlebars in an easily accessible position for the child.
6. **Final Check:** Before first use, double-check all bolts, nuts, and fasteners to ensure they are tight and secure. Verify that the wheels spin smoothly and the steering operates correctly.



Image: Tricycle with a wrench, illustrating the ease of assembly.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Seat

The tricycle features an adjustable seat to accommodate growing children. To adjust the seat height, loosen the quick-release lever or bolt located beneath the seat. Slide the seat up or down to the desired position, ensuring the child's feet can comfortably reach the pedals. Once adjusted, firmly tighten the lever or bolt to secure the seat in place.



Image: Close-up of the seat adjustment mechanism, showing a 1.25-inch range.

5.2. Using the Bell and Basket

The tricycle is equipped with a functional bell and a convenient storage basket. The bell can be rung by the child to alert others of their presence. The front basket provides a space for children to carry small toys or snacks during their ride.

Kids Tricycle

Learns to ride and go on countless adventures



Suitable Age:
2-5 years old



Weight Capacity:
55 lbs. (25 kg)



Sturdy & Safe Material



Stylish Appearance

Image: Detailed view of the tricycle's features including the bell, easy-grip handle, front basket, and EVA wheels.

5.3. Riding the Tricycle

Instruct your child on how to sit properly on the seat, place their feet on the pedals, and grip the handlebars. Encourage them to pedal forward and steer by turning the handlebars. Always ensure they ride in a safe, open area away from hazards.

6. MAINTENANCE

Regular maintenance will extend the life of your tricycle:

- **Cleaning:** Wipe down the tricycle with a damp cloth and mild soap. Avoid harsh chemicals.
- **Inspection:** Periodically check all bolts, nuts, and screws for tightness. Tighten any loose fasteners.
- **Wheels:** Ensure the EVA wheels are free from debris and rotate smoothly.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

- **Tricycle feels unstable:** Check all assembly points, especially the handlebar and seat connections, to ensure they are fully tightened.
- **Wheels not spinning freely:** Inspect for any obstructions (e.g., dirt, debris) caught in the wheel axles. Ensure wheels are properly aligned.
- **Pedals are loose:** Re-tighten the pedals to the front wheel axle.
- **Squeaking noises:** Apply a small amount of lubricant to moving parts if necessary, avoiding contact with the child's hands or clothing.

8. SPECIFICATIONS

Model Number	US370-267V00GN0131
Overall Dimensions (L x W x H)	27.8" x 20.9" x 22.8" (70.6 cm x 53.1 cm x 57.9 cm)
Seat Size (W x D)	9.8" x 9.8" (24.9 cm x 24.9 cm)
Seat Height	11.8" (30 cm)
Adjustable Seat Range	1.2" (3 cm)
Weight Capacity	55 lbs (25 kg)
Recommended Age	2-5 Years (18-60 Months)
Material	Ethylene Vinyl Acetate (EVA), Metal, Polyethylene, Polypropylene
Item Weight	10 lbs (4.5 kg)



Image: Diagram showing the overall dimensions of the Qaba Toddler Tricycle.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the retailer's return policy or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Aosom LLC

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question