

[Manuals.plus](#) /

› [Omethey](#) /

› Omethey 1-2 Digital Gun Safe Instruction Manual

## Omethey c1c6c541-f02a-4eb0-8156-c97290f29a34

# Omethey 1-2 Digital Gun Safe Instruction Manual

Model: c1c6c541-f02a-4eb0-8156-c97290f29a34

## INTRODUCTION

This manual provides essential information for the safe and effective use of your Omethey 1-2 Digital Gun Safe. Please read these instructions carefully before installation and operation to ensure proper functionality and security. This gun safe is designed to provide secure storage for rifles, pistols, and other valuables, featuring a quick access digital keypad, silent mode, and an alarm system.



**Figure 1:** Overview of the Omethey 1-2 Digital Gun Safe, showing the exterior with the digital keypad and key override, along with internal views highlighting the removable shelf and adjustable gun slots.

## SETUP AND INSTALLATION

### Unpacking and Inspection

Carefully unpack all components and inspect for any damage. Retain packaging for future transport if needed. Verify all accessories listed in the specifications are present.

### Battery Installation

Locate the battery compartment, typically behind the keypad or inside the door. Insert the required batteries (usually AA, refer to the battery type specified on the compartment) ensuring correct polarity. Test the keypad to confirm power.

### Assembly

The safe may require minor assembly, such as installing the internal shelf or gun rack. Follow the included instruction manual for specific steps. Ensure all screws and fasteners are securely tightened.

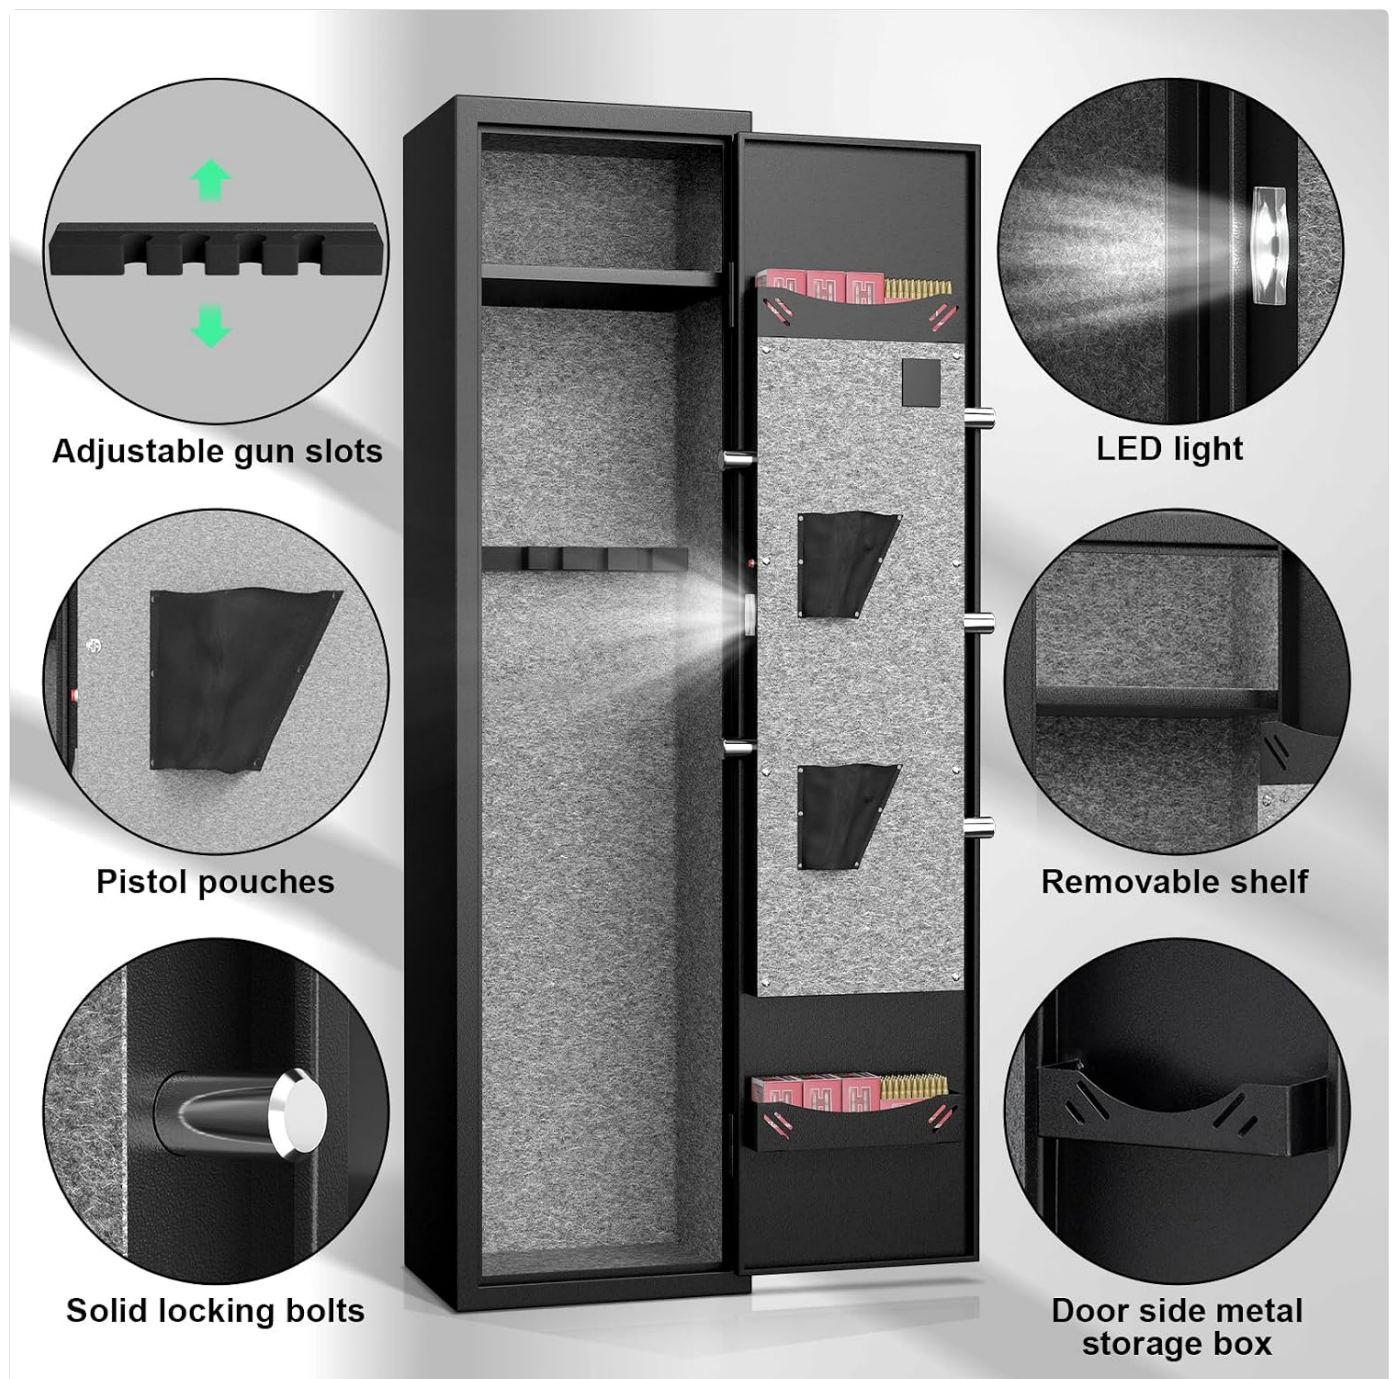


**Figure 2:** Detailed view of the safe's interior, highlighting features such as adjustable gun slots, pistol pouches, a removable shelf, an internal LED light, solid locking bolts, and a door-mounted storage box.

## Securing the Safe

For maximum security, it is highly recommended to anchor the safe to a wall or floor using the provided expansion screws. This prevents unauthorized removal of the safe. Choose a discreet and secure location for installation.

# SIZE AND ACCESSORIES



Figure 3: Visual representation of the safe's dimensions and the complete set of accessories included for setup and operation.

## OPERATING INSTRUCTIONS

### Opening the Safe

Your Omethey gun safe offers multiple methods for access:

1. **Code + Knob:** Enter your programmed digital code on the keypad, then turn the knob to open the door.
2. **Key + Knob:** In case of battery failure or forgotten code, insert the emergency key into the hidden keyhole, turn it, and simultaneously turn the knob to open.
3. **USB Cable + Code + Knob:** If batteries are depleted and you don't have the emergency key, connect a USB power source to the emergency power jack, enter your code, and turn the knob.

# 3 WAYS TO OPEN



Code + Knob



Key + Knob



USB Cable + Code + Knob

**Figure 4:** A visual guide to the three distinct methods for accessing your safe, ensuring entry even in various circumstances.

## Setting/Changing Digital Code

Refer to the specific instructions in the included manual for programming your personal digital code. Typically, this involves pressing a reset button (often inside the door), entering your new code, and confirming it.

## Alarm System

The safe is equipped with a dual vibration and input error alarm system. If the wrong code is entered 3 times consecutively, the system will lock, and the keypad will be disabled for a period to prevent unauthorized entries. Any significant vibration or tampering may also trigger the alarm.

## Silent Mode

To enable silent mode for discreet access, refer to your specific manual for the key combination or button press. This mode disables keypad beeps and alarm sounds, ensuring quiet operation.

# ALARM SYSTEM AND SILENT MODE



## ALARM SYSTEM



If the wrong code is entered 3 times in a row, the system will be locked, and the keypad will be disabled to prevent any further unauthorized entries.



## SILENT MODE



The silent mode of a gun safe allows for silent and discreet access to firearms, ensuring security and privacy in critical situations.

**Figure 5:** Explanation of the alarm system's function upon incorrect code entry and the benefit of the silent mode for discreet access.

## MAINTENANCE

### Battery Replacement

Replace batteries annually or when the low battery indicator appears. Always use new, high-quality batteries of the specified type. Do not mix old and new batteries.

### Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components. Keep the keypad free of dust and debris.

### Locking Mechanism Check

Periodically check the locking bolts and door hinges for smooth operation. Ensure no obstructions prevent the door from closing and locking completely.

TROUBLESHOOTING

- Keypad Not Responding:** Check battery levels and replace if necessary. Ensure the USB power cable is securely connected if using external power.
- Forgotten Code:** Use the emergency key to open the safe. Once open, refer to the manual to reset your digital code.
- Alarm Triggering Unexpectedly:** Check for loose items inside the safe that might cause vibrations. Ensure the safe is securely mounted and not subject to external impacts.
- Door Not Closing/Locking:** Inspect for any obstructions around the door frame or locking bolts. Ensure the safe is on a level surface.

SPECIFICATIONS

| Feature                | Detail                                |
|------------------------|---------------------------------------|
| Brand                  | Omethey                               |
| Model Number           | c1c6c541-f02a-4eb0-8156-c97290f29a34  |
| Lock Type              | Electronic Combination Lock           |
| Color                  | Black                                 |
| Mounting Type          | Freestanding                          |
| Alarm                  | Dual Vibration and Input Error Alarms |
| Water Resistance Level | Not Water Resistant                   |
| Chamber Depth          | 9.06 Inches                           |
| Style                  | 1-2 Digital Gun                       |

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact Omethey customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question