

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SJCAM](#) /

› [SJCAM C110+ Action Camera User Manual](#)

SJCAM C110+

SJCAM C110+ Action Camera User Manual

Model: C110+

Brand: SJCAM

1. INTRODUCTION

Welcome to the user manual for your new SJCAM C110+ Action Camera. This manual provides essential information on setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using your device.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- SJCAM C110+ Action Camera
- Waterproof Case
- Bicycle Mount
- Adhesive Tape
- 6 Adhesive Mounts
- 2 Velcro Straps
- USB Cable
- User Manual
- 32GB MicroSD Card
- MicroSD Card Protective Case



Image: All components included with the SJCAM C110+ Action Camera.

3. PRODUCT OVERVIEW

The SJCAM C110+ is a compact and lightweight action camera designed for capturing high-quality video and photos in various environments. It features 4K video recording, 20MP photo capabilities, and 6-axis Electronic Image Stabilization (EIS).



Image: Front view of the SJCAM C110+ Action Camera, showing the lens and indicator lights.

Thumb Sized Mini Pocket Action Camera



Image: The Sjcam C110+ Action Camera's compact size, shown held in a hand and in a pocket, highlighting its portability.

4. SETUP

4.1 Battery and MicroSD Card Installation

The Sjcam C110+ uses a Lithium-ion battery and supports MicroSD cards. A 32GB MicroSD card is included. Refer to the camera's physical design for the battery and MicroSD card slot locations, typically found under a protective cover. Ensure the MicroSD card is inserted correctly with the contacts facing the camera's interior.

4.2 Charging the Camera

Connect the camera to a power source using the provided USB cable. The camera's indicator light will show the charging status. A full charge is recommended before first use.

4.3 Mounting the Camera

The Sjcam C110+ comes with various mounting accessories, including a bicycle mount, adhesive mounts, and Velcro straps. Choose the appropriate mount for your activity and ensure the camera is securely attached before use.

Slow Motion - Relive Wonderful Moments

The C110 camera records outdoor activities, sports, and adventures in high-definition slow motion for capturing great moments.



Image: Examples of the Sjcam C110+ Action Camera mounted in various scenarios, including on a helmet, chest, and bicycle.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To power on the camera, press and hold the Power button. To power off, press and hold the Power button again until the camera shuts down.

5.2 Mode Selection

The C110+ supports various modes, including Video, Photo, Time-Lapse, and Slow Motion. Use the Mode button to cycle through the available modes. The LCD screen will display the current mode.

4K 30FPS VIDEO/20MP PHOTO

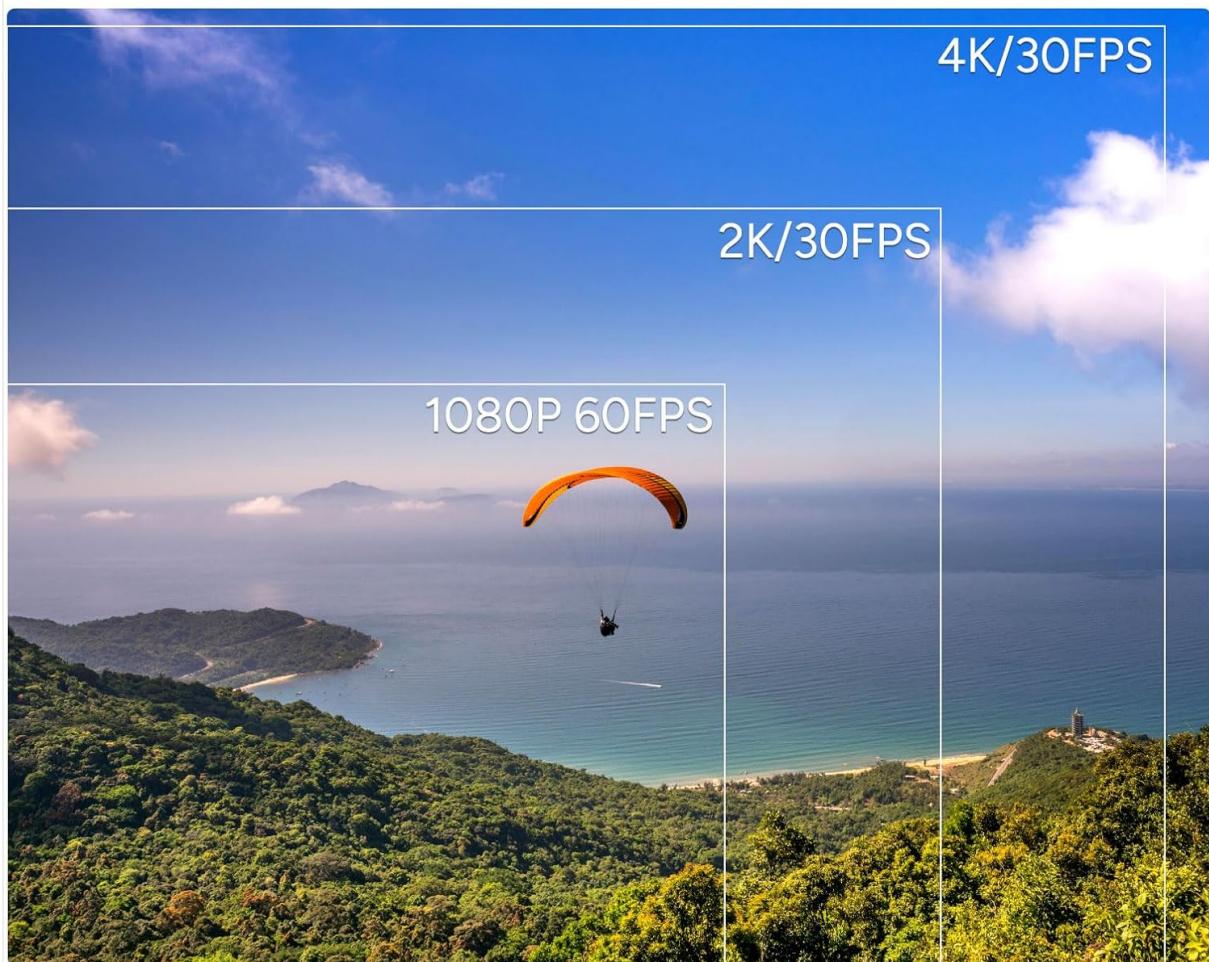


Image: Visual comparison demonstrating the clarity differences between 4K 30FPS, 2K 30FPS, and 1080P 60FPS video resolutions.

5.3 Recording Video

In Video mode, press the Shutter/Record button to start recording. Press it again to stop recording. The camera supports 4K at 30 frames per second (FPS).

5.4 Taking Photos

In Photo mode, press the Shutter/Record button to take a picture. The camera captures photos at 20 megapixels.

5.5 Time-Lapse Photography

Select Time-Lapse mode to capture a series of photos over time, which are then compiled into a video. This allows for condensing long events into short, dynamic footage.

Time Lapse-Capture Wonderful Moments

Time-lapse photography lets you capture stunning dynamic footage, condensing hours or days into just a few seconds.



Image: An example of time-lapse photography, showing light trails from vehicles on a city bridge at night, illustrating how hours can be condensed into seconds.

5.6 Slow Motion Recording

Activate Slow Motion mode to record high-definition footage that plays back at a reduced speed, ideal for capturing fast-paced action with greater detail.

Shot from anywhere

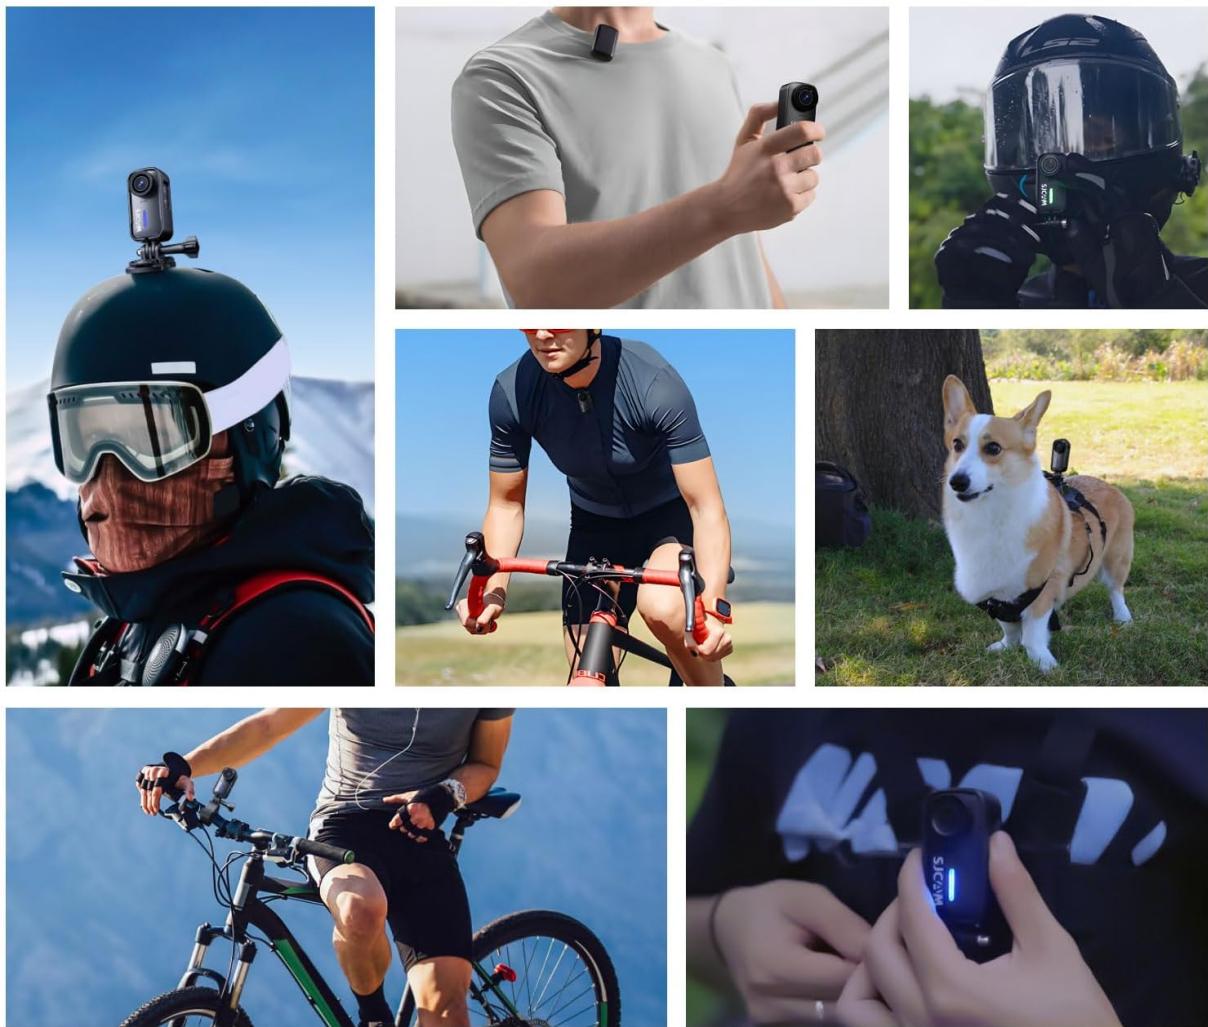


Image: An example of slow motion video, depicting motocross riders mid-air during a jump, highlighting the ability to capture detailed movement.

5.7 Electronic Image Stabilization (EIS)

The C110+ features 6-axis EIS to reduce blur and shake, ensuring smoother and more stable footage, especially during dynamic activities.

Upgraded Image Stabilization 3.0

Upgraded 6-axis gyro stabilization provide more stable and clearer videos and pictures

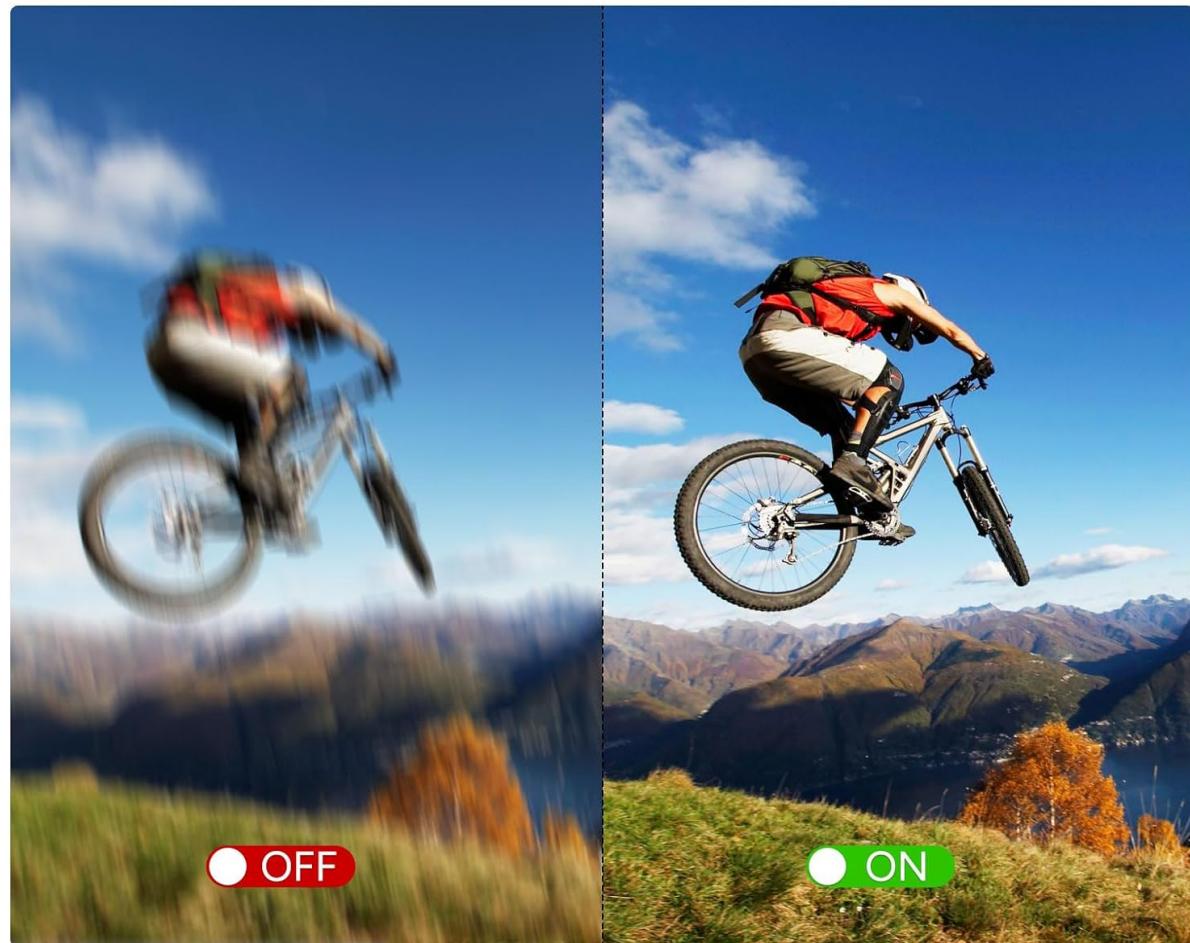


Image: A side-by-side comparison showing the effect of 6-axis gyro stabilization, with a blurred image on the left (EIS off) and a clear, stable image on the right (EIS on) of a mountain biker.

5.8 Using the Waterproof Case

The included waterproof case allows the C110+ to be submerged up to 30 meters (approximately 98 feet). Ensure the case is properly sealed before taking the camera underwater. Regularly check the case for any damage or debris that could compromise its waterproof seal.

Flashing Light bike camera

The flashing light function can also provide you with safety when riding at night



Image: The SJCAM C110+ Action Camera mounted on a motorcycle helmet, demonstrating its use in outdoor activities. The camera's robust design and waterproof capabilities make it suitable for such environments.

6. SETTINGS

Access the camera's settings menu via the LCD screen to adjust various parameters such as video resolution, photo resolution, EIS activation, exposure, white balance, and more. Navigate through the menu using the camera's buttons.

7. MAINTENANCE

7.1 Cleaning

Use a soft, lint-free cloth to clean the camera lens and body. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.

7.2 Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.

8. TROUBLESHOOTING

If you encounter issues with your SJCAM C110+, try the following basic troubleshooting steps:

- **Camera not turning on:** Ensure the battery is charged.
- **Recording issues:** Check if the MicroSD card is inserted correctly and has sufficient free space.
- **Poor image quality:** Clean the lens and ensure settings like resolution and EIS are configured appropriately.
- **Water leakage:** Immediately cease use and inspect the waterproof case for damage or improper sealing.

For more complex issues, please refer to the official SJCAM support resources.


9. SPECIFICATIONS

Brand	SJCAM
Model	C110+
Video Resolution	4K
Photo Resolution	20 Megapixels
Image Stabilization	6-axis EIS (Dynamic)
Waterproof Depth	30 meters (with waterproof case)
Weight	79g
Connectivity	USB
Battery Type	Lithium-ion
Display	LCD
Focal Length	20mm
Aperture	f/2
Memory Card Support	SD (32GB card included)


10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official SJCAM website or contact your local distributor. Keep your proof of purchase for warranty claims.

 Related Documents - C110+

 <small>C110 Action Camera User Manual Pyeongguen neuvonsho und anleitung C110 Manual de usuario de la Cámara de acción C110 C110 Action Camera User Manual C110運動相機操作說明書</small>	<p>SJCAM C110 Action Camera User Manual</p> <p>Explore the SJCAM C110 Action Camera with this comprehensive user manual. Learn about product features, specifications, setup, operation, and safety guidelines for capturing your adventures.</p>
 <small>SJCAM EMPOWER YOUR DREAMS SJ4K USER MANUAL SJ4K 2021</small>	<p>SJCAM SJ4K Action Camera User Manual</p> <p>User manual for the SJCAM SJ4K action camera, covering setup, operation, features, and accessories. Learn how to install batteries and memory cards, charge the device, navigate modes, and connect via Wi-Fi.</p>
 <small>Action Camera C100 SERIES SJCAM Please read this manual carefully and store it for future reference</small>	<p>SJCAM C100 Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C100 Series action camera, covering operating instructions, functional operations, camera accessories, status indicators, model comparison, and Wi-Fi connectivity.</p>
 <small>Action Camera C100 SERIES SJCAM Please read this manual carefully and store it for future reference</small>	<p>SJCAM C100 Series Action Camera User Manual</p> <p>Comprehensive user manual for the SJCAM C100 Series action camera, detailing operating instructions, features, accessories, and specifications. Learn how to use your SJCAM C100 for various activities.</p>
 <small>SJ4000 AIR SERIES SJCAM EMPOWER YOUR DREAMS</small>	<p>SJ4000 AIR SERIES User Manual</p> <p>User manual for the SJ4000 AIR SERIES action camera, covering safety guidelines, specifications, button functions, and operating instructions for video and photo modes, as well as Wi-Fi connectivity.</p>
 <small>SJ4K USER MANUAL</small>	<p>SJCAM SJ4K User Manual: Features, Operation, and Accessories</p> <p>Comprehensive user manual for the SJCAM SJ4K action camera. Learn about product features, basic operations, waterproof case usage, camera functions, Wi-Fi connectivity, and accessory installation.</p>

Documents - SJCAM – C110

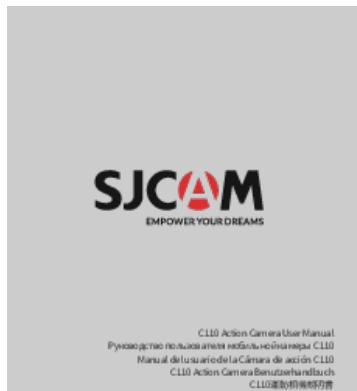

[\[pdf\] User Manual Specifications Guide Accessories Catalog](#)


SJ10Pro 2021 01 05 Download sjcamstores C110 action camera user manual v 1743586984 cdn shopify s files 1 0674 2248 6694 |||

C110 Action Camera User Manual **C110** Manual del usuario de la Cámara de acción

C110 C110 Action Camera Benutzerhandbuch **C110 Catalog User Guide** 2 Product

Overview 3 Accessories 4 Product Specifications 5 Start Using 7 1. micro SD Card Installation 7 2. Charging 7 Operation Introdu...

lang:es **score:31** filesize: 8.95 M page_count: 88 document date: 2025-04-02

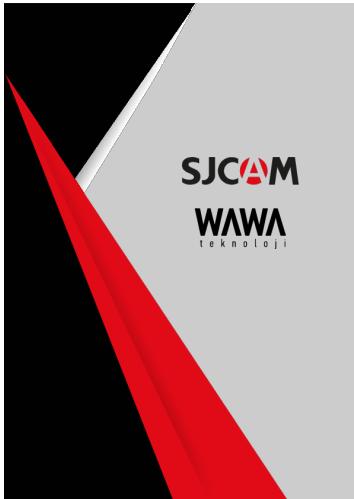

[pdf]

Sjcam 2024 25 Katalog SJ4000 WiFi Dual Screen Page 5 SJ6 Pro Aksiyon Kamerası 6 SJ20 Lens 7 C110 8 C300 Pocket C200 9 wawateknoloji 10 |||

SJCAM, ster profesyonel ster amatr olsun her e t kullaniciya aks yon kamerasi alaninda ayni oranda ... Webcam 15 v.09.26 SJ4000 W F SJ4000 Dual Screen SJ6 Pro Aks yon Kamerasi SJ20 Dual Lens **C110 C110** C300 Pocket C200 Pro C300 8 9 10 11 D er Kameralar 12 D er Kameralar 13...

lang:id **score:27** filesize: 3.54 M page_count: 16 document date: 2024-10-07



SJCAM C110 Action Camera User Manual

Explore the SJCAM C110 Action Camera with this comprehensive user manual. Learn about product features, specifications, setup, operation, and safety guidelines for capturing your adventures.

lang:id **score:23** filesize: 4.49 M page_count: 88 document date: 2024-12-25



[pdf] Test Report

RADIO TEST REPORT For Shenzhen Zhencheng Technology Co SJCAM Test Model SJ11 active Ratings SJ8Dual Screen SJ4000Air M20 A10 A20 C110 C300 C300POCKET 219 248230 02 007 tele soumu go jp giteki SearchServlet2 PageID jt01 ATF 169070007 |||

...

lang:id **score:9** filesize: 1.17 M page_count: 23 document date: 0000-00-00