

Minetom B0D8KFWTQ1

Minetom RGB LED String Lights User Manual

Model: B0D8KFWTQ1

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Safety Instructions](#) [Package](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Minetom RGB LED String Lights. This manual provides essential information for the safe and efficient use of your new string lights. Please read it thoroughly before installation and operation, and retain it for future reference.



Image 1: Minetom RGB LED String Lights, showing the string of globe lights, the battery box, and the remote control.

2. IMPORTANT SAFETY INSTRUCTIONS

- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar heat sources.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let the product rest on the power supply cord or on any electric cord.
- Do not use this product for other than its intended use.
- Do not hang other decoration or objects on cord, wire, or light string.
- Do not close doors or windows if clamping or damaging the product or cord.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Read and follow all instructions on this product.

3. PACKAGE CONTENTS

Verify that all components are present:

- 1 x Minetom RGB LED String Lights (21FT, 60 LED Globe Bulbs)
- 1 x Remote Control
- 1 x Battery Box (requires 3x AA batteries, not included)
- 1 x User Manual

4. SETUP

4.1 Battery Installation

1. Open the battery compartment on the battery box.
2. Insert 3 AA batteries (not included) according to the polarity markings (+/-).
3. Close the battery compartment securely.



Image 2: Close-up of the battery box, showing where to insert AA batteries.

4.2 Placement

These string lights are suitable for both indoor and outdoor use. The IP44 waterproof rating ensures protection against splashes, making them suitable for various environments. They can be easily installed using cable ties, cup hooks, or grippers.

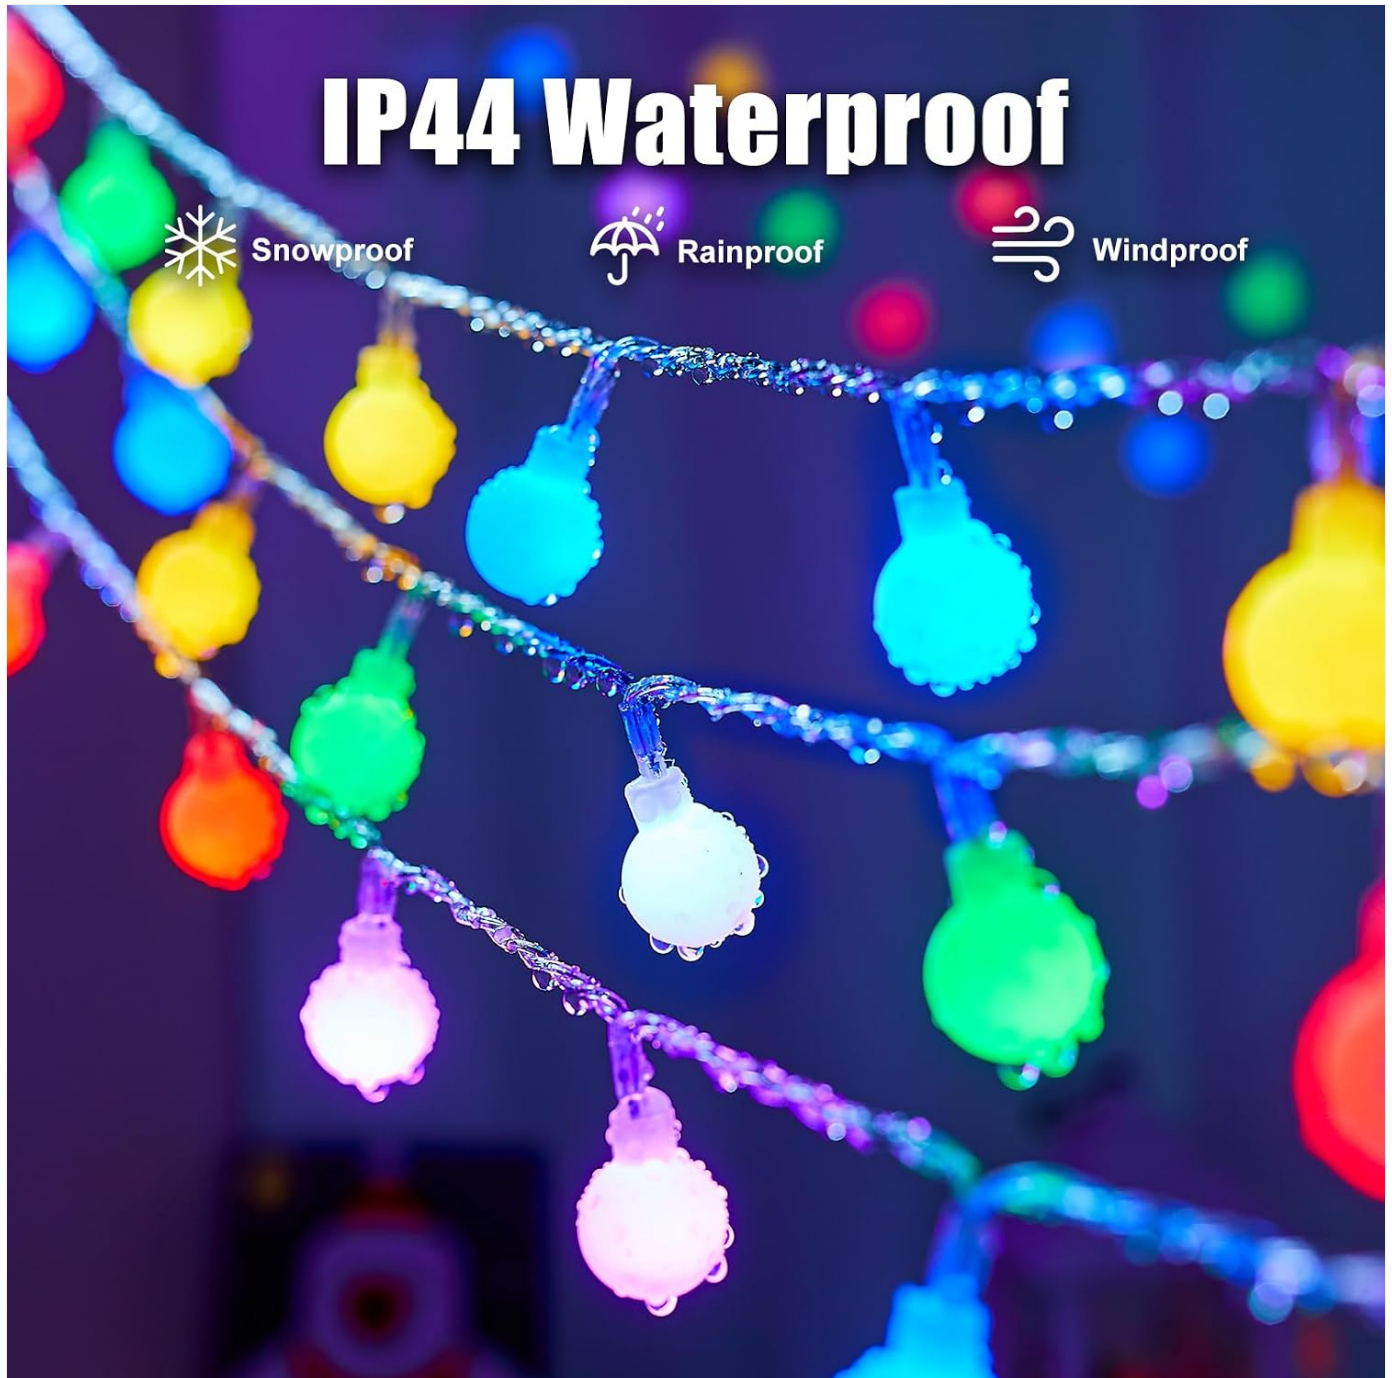


Image 3: Illustration of IP44 waterproof rating, indicating snowproof, rainproof, and windproof features.

Ensure the chosen location is free from obstructions and allows for the full length of the 21-foot string to be displayed as desired. The globe bulbs are shatterproof plastic, offering durability.

LED Globe String Lights



Image 4: Diagram showing the dimensions of the LED globe string lights: 21 ft string length, 0.73 inch bulb diameter, and 3.9 inches spacing between globes.

5. OPERATING INSTRUCTIONS

5.1 Remote Control Functions

The included remote control allows for comprehensive management of your string lights:

IR Control RGB String Lights



Timer Function



IR Control



Brightness +/-



Lighting Modes

Image 5: Diagram of the IR remote control for Minetom RGB string lights, detailing buttons for power, 16 color selections, 7 dynamic modes (Fade, Jump, Asyn Fade, Asyn Jump, In Waves, Strobe, Twinkle), and timer settings (4H, 6H, 8H, Timer Off).

- **ON/OFF:** Power the lights on or off.
- **RGB Color Selection:** Choose from 16 single colors and mixed hues.
- **Dynamic Modes:** Select from 7 lighting modes including Fade, Jump, Asyn Fade, Asyn Jump, In Waves, Strobe, and Twinkle.
- **Timer:** Set the lights to operate for 4, 6, or 8 hours daily. Press "Timer Off" to cancel.
- **Brightness Adjustment (DIM +/-):** Increase or decrease the light intensity.



Image 6: Grid display of 16 different monochromatic colors achievable with the Minetom RGB LED string lights.

5.2 Manual Operation

In case the remote control is unavailable, you can cycle through the lighting modes using the button located on the battery case.

6. MAINTENANCE

- **Cleaning:** Gently wipe the globe bulbs with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the string lights in a cool, dry place, away from direct sunlight and extreme temperatures. Carefully coil the string to prevent tangling.
- **Battery Replacement:** Replace all 3 AA batteries simultaneously when the lights dim or stop functioning. Ensure correct polarity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or incorrectly installed. Remote control battery is dead. Power button not pressed.	Replace batteries in the battery box, ensuring correct polarity. Replace the remote control battery (CR2025 coin cell, typically). Press the "ON" button on the remote or the button on the battery box.
Lights are dim.	Low battery power. Brightness setting is too low.	Replace batteries in the battery box. Increase brightness using the "DIM +" button on the remote.
Remote control not working.	Remote battery is dead. Obstruction between remote and receiver. Remote is too far from the battery box.	Replace the remote control battery. Ensure a clear line of sight to the battery box. Move closer to the battery box.

8. SPECIFICATIONS

- **Brand:** Minetom
- **Model:** B0D8KFWTQ1
- **Light Source Type:** LED
- **Light Color:** RGB (Red, Green, Blue)
- **Number of Light Sources:** 60
- **String Length:** 21 Feet
- **Bulb Diameter:** 0.73 inches
- **Spacing Between Globes:** 3.9 inches
- **Power Source:** Battery Powered (3x AA batteries, not included)
- **Controller Type:** Remote Control, Touch (on battery box)
- **Special Features:** Color Changing, Cordless, Remote Controlled
- **Indoor/Outdoor Usage:** Indoor, Outdoor (IP44 Waterproof)
- **Material:** Plastic
- **Item Weight:** 12 ounces

9. WARRANTY AND SUPPORT

For customer service and warranty inquiries, please contact Minetom support:

- **Email:** support@brighttown.com
- **Phone:** +1 (888) 550 1310
- **Operating Hours:** Mon-Fri, 8 AM - 10 PM (EST)

Please have your product model number (B0D8KFWTQ1) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question