

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [King Lucky](#) /

› [King Lucky Open Ear Headphones True Wireless Bluetooth 5.3 Wireless Earbuds with Mic, Dual Link Open Owls Hanging Earphones Lightweight 7.3g 60Hrs Playtime,for Sports Running\(White\) User Manual](#)

King Lucky i31pma

King Lucky Open Ear Headphones User Manual

Model: i31pma

1. PRODUCT OVERVIEW

The King Lucky Open Ear Headphones (Model i31pma) are true wireless Bluetooth 5.3 earbuds designed for comfort, stability, and high-quality audio. Their open-ear design ensures awareness of surroundings while providing immersive sound. Ideal for sports, daily use, and communication, these headphones feature advanced connectivity, long battery life, and durable construction.



Image: King Lucky Open Ear Headphones (Model i31pma) with their charging case.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- King Lucky Open Ear Headphones (Left and Right Earbuds)
- Charging Case
- USB Charging Cable
- User Manual

3. KEY FEATURES

- **Comfortable, Lightweight, and Stable Wearing:** Made from soft silicone with an 'open owls hanging ear' design for unmatched comfort and stability during activities. Disperses ear pressure for a feeling of freedom.
- **Superior Sound Quality and Clear Calls:** Features an 18.7mm racetrack-shaped custom driver for outstanding clarity in high notes, stable mid-tones, and deep bass. Dual mic ENC noise reduction ensures clear communication by filtering background noise.

runway customized driver

18.7 mm



Image: Detailed view of the 18.7mm racetrack-shaped custom driver, highlighting its larger motor coil compared to conventional drivers.

Dual mics Clear call

ENC call noise reduction tech filters up to 98% noise

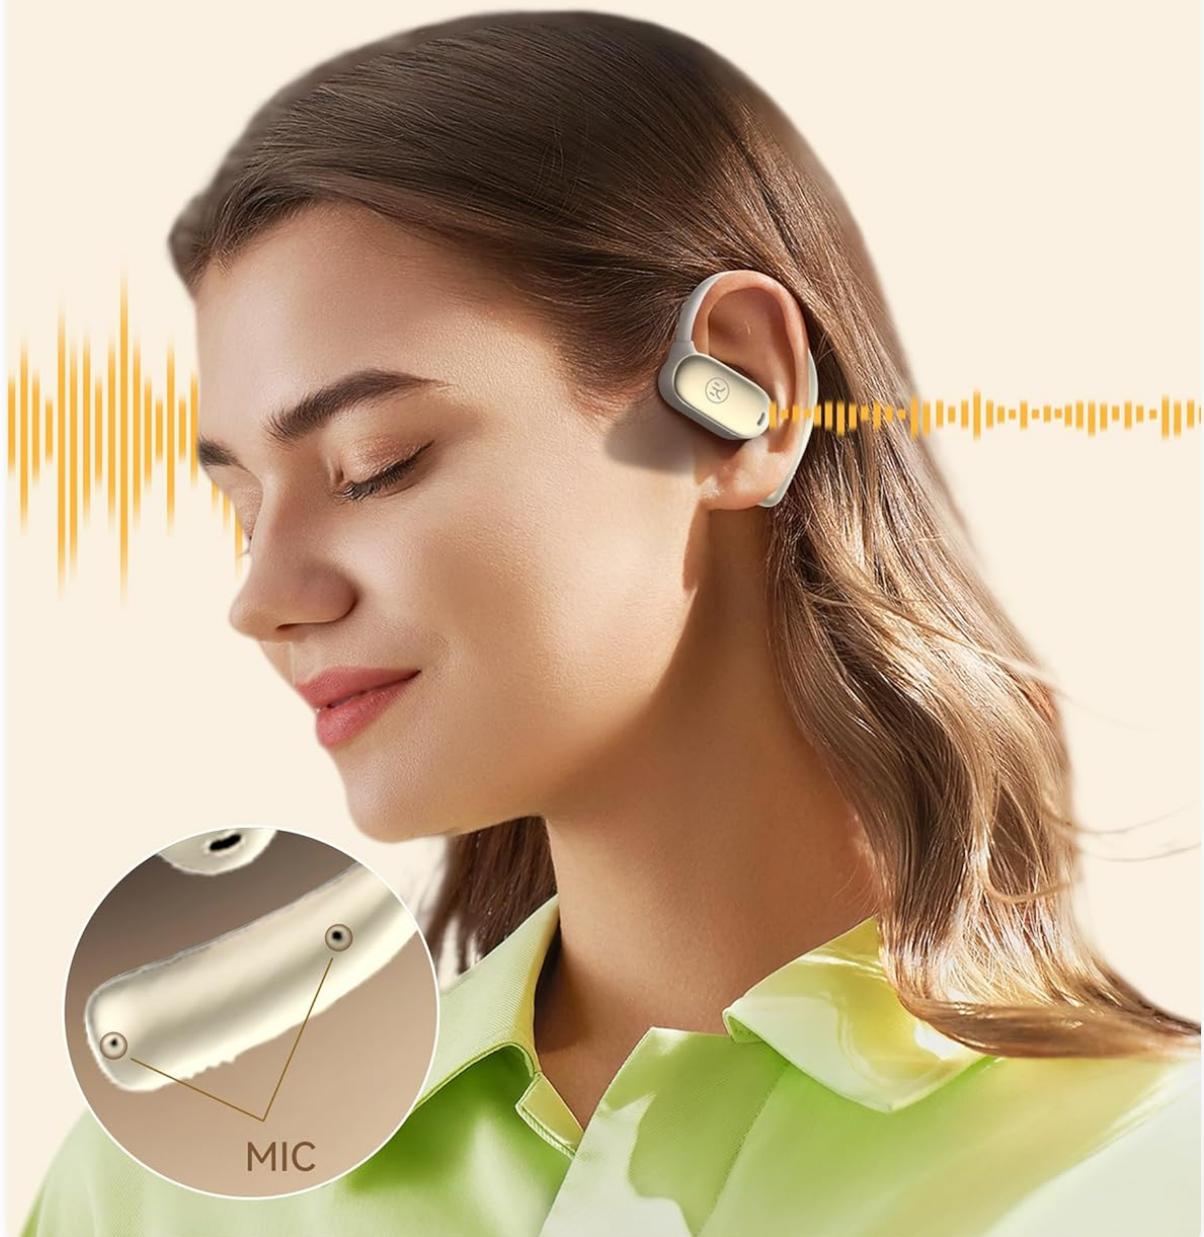


Image: Illustration demonstrating the dual microphone system for clear calls, with a close-up of the microphone placement on the earbud.

- **LED Digital Display and Extended Playtime:** The charging case features an LED digital liquid crystal display to easily check battery levels. Enjoy up to 8 hours of playtime on a single charge, extended to 60 hours with the charging case. A 5-minute quick charge provides 1 hour of playtime.
- **Bluetooth 5.3 and Multi-Point Connection:** Equipped with the latest Bluetooth 5.3 chip for stable and efficient wireless connectivity. Multi-point connection allows seamless switching between two paired devices (e.g., phone and laptop).

Multi-connection capability

Pair with two devices, never miss calls or notifications

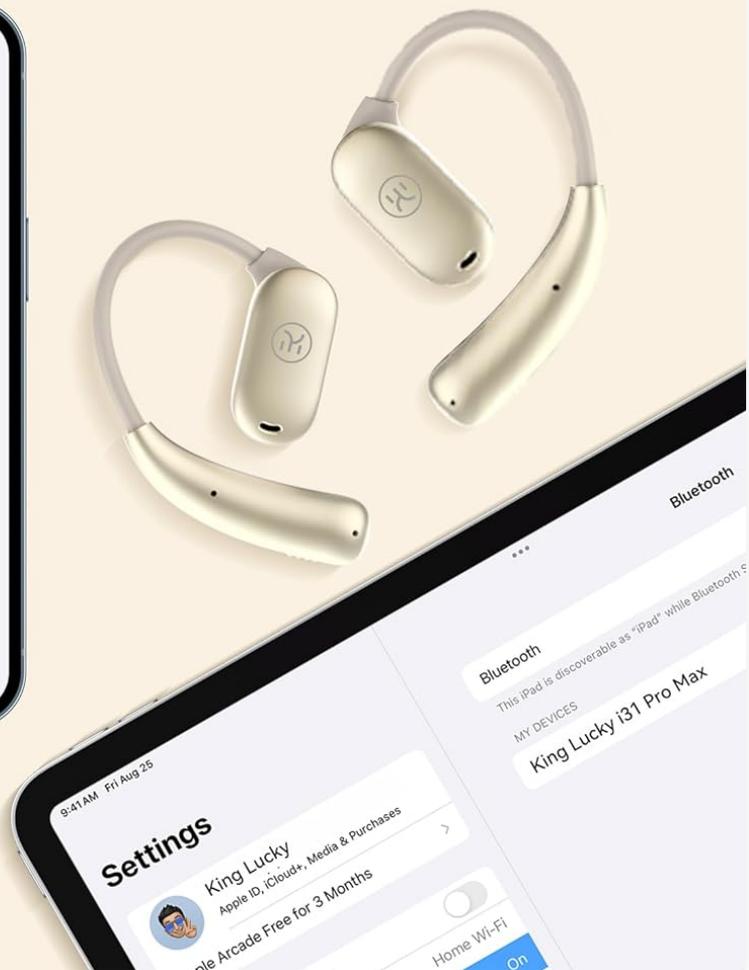


Image: Depiction of the multi-connection capability, showing the headphones simultaneously connected to a smartphone and a tablet.

- **Humanized Touch Control and IPX5 Waterproof:** Optimized touch control area on the side of the mic prevents accidental touches during vigorous activities. Each earbud has an IPX5 waterproof nano-coating, protecting against sweat and humidity.

Humanized touch control

The side touch area with feedback sound can prevent the annoyance of accidental touch

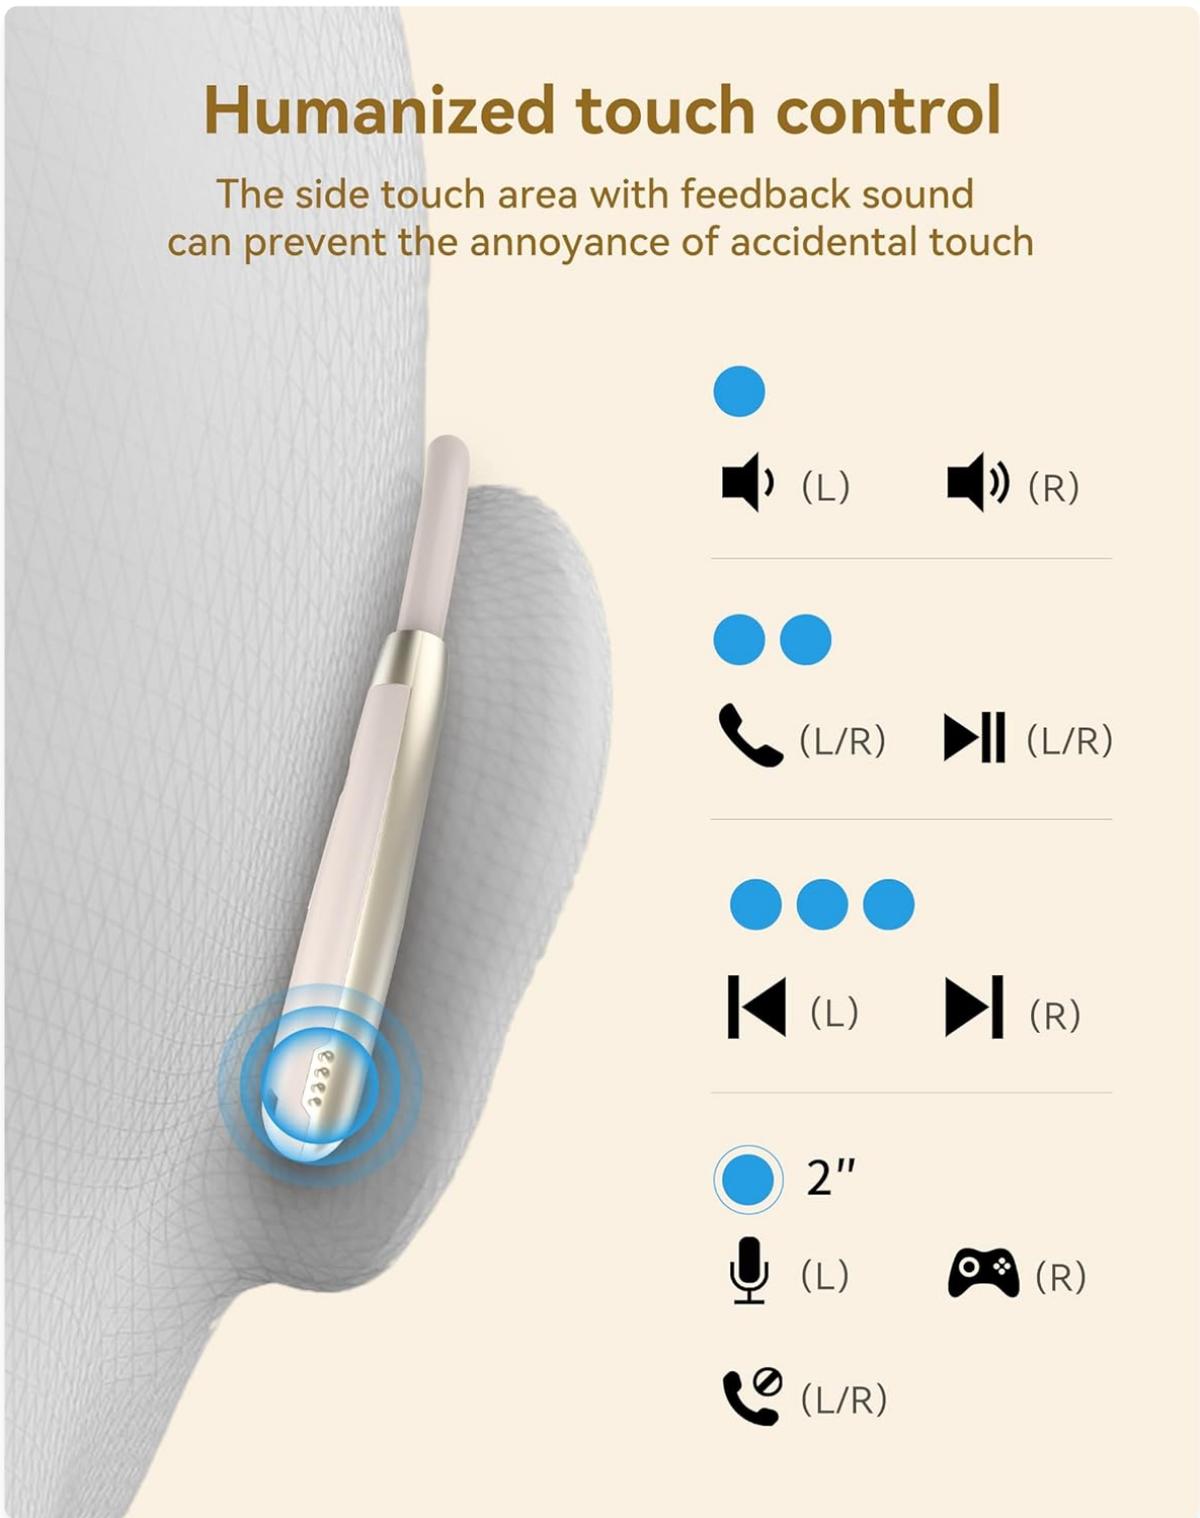


Image: Diagram illustrating the touch control functions on the earbud, including single, double, and triple taps for various commands.

IPX5 waterproof grade

Nano-hydrophobic coat Prevent sweat penetration

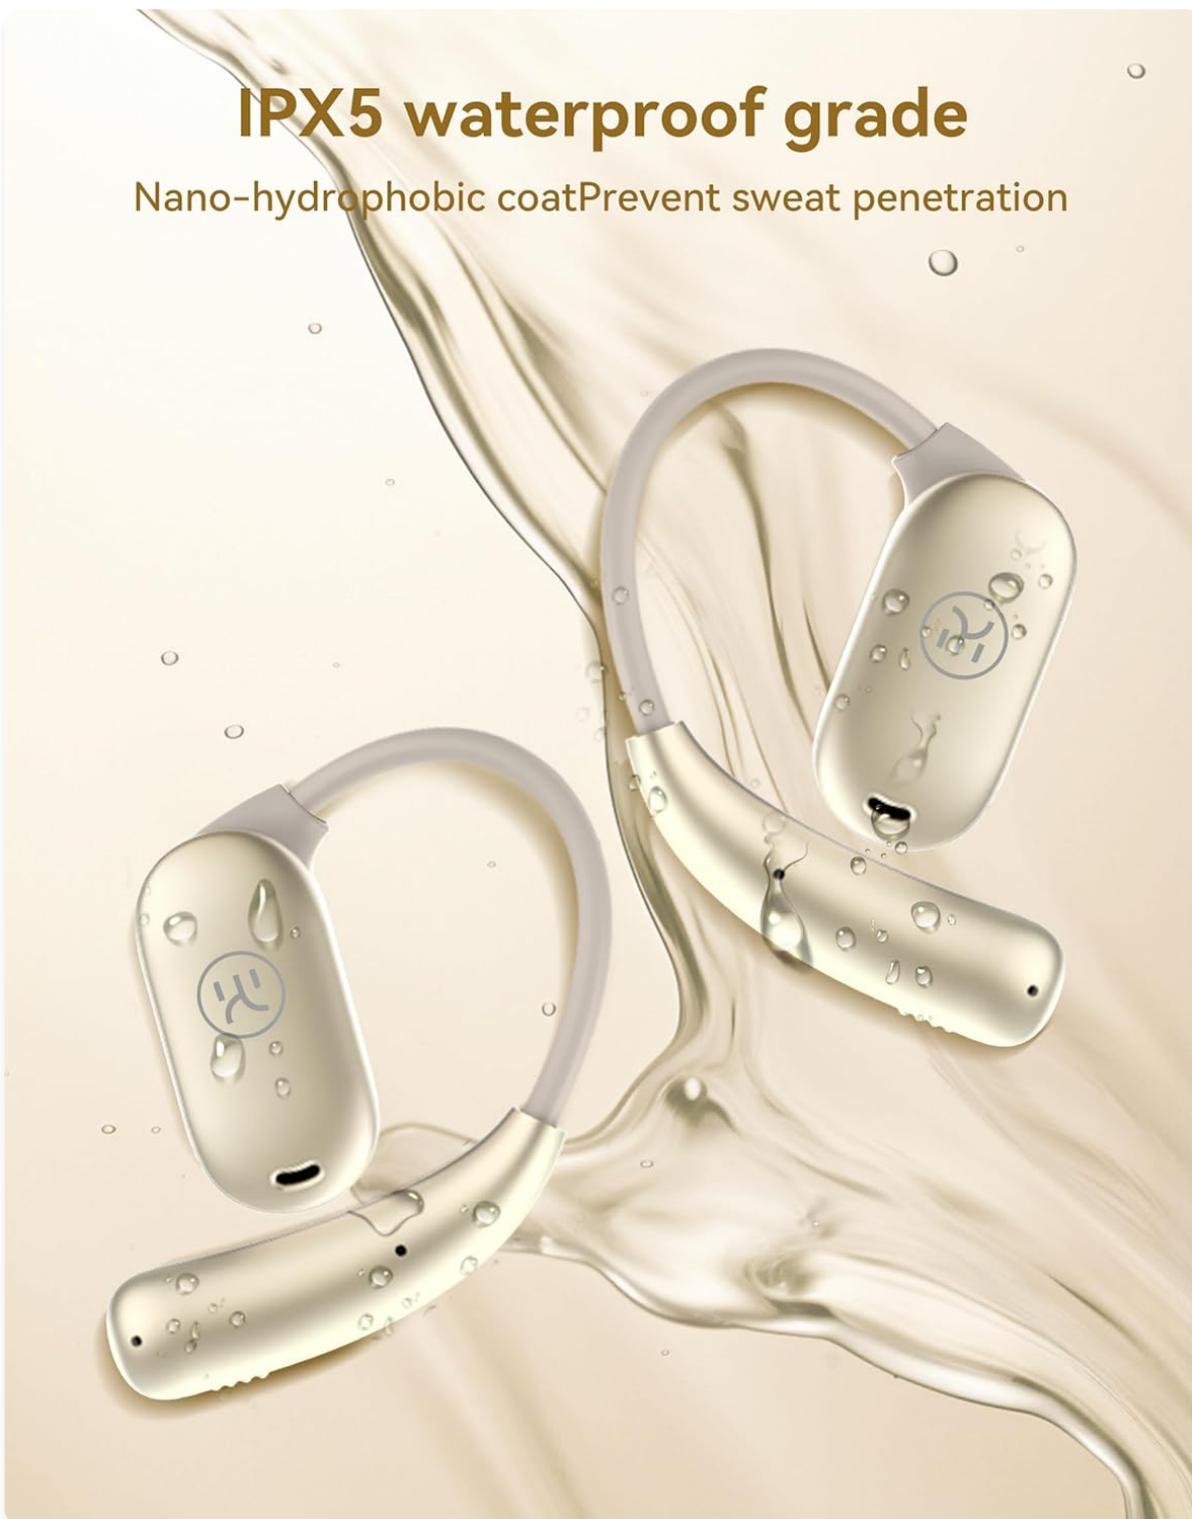


Image: Visual representation of the IPX5 waterproof rating, showing the earbuds resistant to water splashes.

4. SETUP

4.1 Initial Charging

1. Place both earbuds into the charging case.
2. Connect the charging case to a USB power source using the provided USB cable.
3. The LED digital display on the charging case will show the battery level. Allow the case and earbuds to

fully charge before first use.

4.2 Pairing with a Device

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. Select "King Lucky i31 Pro Max" from the list.
5. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or LED indicator change).

4.3 Multi-Point Connection

To connect to two devices simultaneously:

1. Pair the earbuds with your first device as described above.
2. Disable Bluetooth on the first device.
3. Pair the earbuds with your second device.
4. Re-enable Bluetooth on the first device. The earbuds should automatically connect to both devices.
5. You can now seamlessly switch audio playback between the two connected devices.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Open the charging case lid, or take the earbuds out of the case. They will power on automatically.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically.

5.2 Touch Controls

The touch control area is located on the side of each earbud, near the microphone.

Action	Left Earbud (L)	Right Earbud (R)
Play/Pause	Single Tap	Single Tap
Answer/End Call	Double Tap	Double Tap
Reject Call	Press and Hold (2 seconds)	Press and Hold (2 seconds)
Next Track	Triple Tap	
Previous Track		Triple Tap
Activate Voice Assistant	Press and Hold (2 seconds)	Press and Hold (2 seconds)

6. MAINTENANCE

6.1 Cleaning

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.
- Ensure the charging contacts on both the earbuds and the case are clean and dry to maintain proper charging.

6.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

7.1 Earbuds Not Pairing/Connecting

- Ensure both earbuds are charged.
- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid again to re-initiate pairing mode.
- Turn off and on your device's Bluetooth.
- Forget/delete "King Lucky i31 Pro Max" from your device's Bluetooth list and try pairing again.
- Ensure no other Bluetooth devices are interfering or already connected to the earbuds.

7.2 No Sound or Low Volume

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.
- Clean any debris from the earbud speakers.
- Try playing audio from a different application or source.

7.3 Charging Issues

- Ensure the charging cable is securely connected to both the case and the power source.
- Check if the charging contacts on the earbuds and inside the case are clean and free of obstruction.
- Try a different USB cable or power adapter.


8. SPECIFICATIONS

Feature	Specification
Model Name	i31pma
Connectivity Technology	Wireless (Bluetooth 5.3)
Ear Placement	Open Ear
Driver Size	18.7mm Racetrack-shaped Custom Driver
Noise Control	Adaptive Noise Cancellation (ENC for calls)
Playtime (Single Charge)	Up to 8 hours
Total Playtime (with Charging Case)	Up to 60 hours
Quick Charge	5 minutes for 1 hour playtime
Charging Time	1.5 Hours
Waterproof Rating	IPX5
Control Type	Touch Control
Item Weight	0.25 oz per earbud (7.3g) / 2.79 ounces (total)
Material	Plastic, Metal, Rubber
Compatible Devices	Cellphones, Gaming Consoles, Laptops, Desktops, Smart Watch
Color	White

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official King Lucky website. If you encounter any issues not covered in this manual, please contact King Lucky customer service for assistance.

King Lucky 100-Day Return Guarantee: For details on returns, please refer to the seller's policy on the purchase platform.

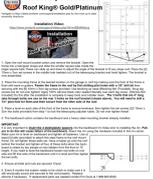 <p>KING LUCKY True Wireless Earphones i20 Mini Instruction Manual</p>	<p>KING LUCKY i20 Mini True Wireless Earphones Instruction Manual</p> <p>This instruction manual provides comprehensive guidance for the KING LUCKY i20 Mini True Wireless Earphones, covering safety precautions, setup, charging, pairing, operation, maintenance, and troubleshooting for optimal user experience.</p>
	<p>KING LUCKY i31Pro Wireless Open-Ear Headsets User Manual</p> <p>User manual for the KING LUCKY i31Pro Wireless Open-Ear Headsets, detailing product specifications, appearance, functions, operations, and important notes.</p>
	<p>RECRSI LP30 Pro Wireless Earbuds User Manual</p> <p>Comprehensive user manual for RECRSI LP30 Pro wireless earbuds, detailing product features, operation, specifications, and safety warnings. Includes packing list, LED indicators, touch controls, and charging information.</p>
	<p>W-KING D10 Portable Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the W-KING D10 portable Bluetooth speaker, covering setup, features, operation, and troubleshooting. Learn how to connect, use various modes, and maintain your speaker for optimal performance.</p>
	<p>Roof King Gold/Platinum Assembly Instructions</p> <p>Step-by-step assembly instructions for the Pro Dunk Roof King Gold/Platinum basketball hoop, including important safety and maintenance tips.</p>
	<p>King Lucky K36 User Manual: Wireless Microphone System Features and Specifications</p> <p>Detailed user manual for the King Lucky K36 wireless microphone system. Covers product accessories, function descriptions, Bluetooth connectivity, sound parameters, microphone technical specifications, and after-sales service information.</p>