

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WAMPAT](#) /

› [WAMPAT 70" Floating TV Stand \(Model W15A218CB\) Instruction Manual](#)

WAMPAT W15A218CB

WAMPAT 70" Floating TV Stand Instruction Manual

Model: W15A218CB | Brand: WAMPAT

1. INTRODUCTION

Thank you for choosing the WAMPAT 70" Floating TV Stand. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and proper use of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Important Safety Information

WARNING:

- This product requires assembly. Always follow the provided instructions for safe assembly. Do not attempt to assemble if you are not comfortable with the process.
- This product has a maximum weight capacity of 55 lbs (25 kg). Do not exceed this weight limit.
- The rattan doors should be handled with care to prevent injury.
- This product includes a power outlet. Always follow electrical safety guidelines when using the outlet.
- Keep the product away from water and do not use it in a damp environment.
- Keep the product out of reach of children and pets.
- Ensure the TV stand is securely mounted to a suitable wall type (wood stud, concrete, or brick wall). Do not mount to hollow walls or gypsum board walls.

2. PACKAGE CONTENTS

Before assembly, verify that all parts and hardware are present by comparing them with the parts list included in your product packaging. If any parts are missing or damaged, please contact WAMPAT customer support for assistance.

3. ASSEMBLY INSTRUCTIONS

Follow the steps below and refer to the assembly video for visual guidance. It is recommended to have at least two people for assembly and wall mounting.

Assembly Video Guide

Your browser does not support the video tag.

Official assembly video for the WAMPAT Floating TV Stand, Model W15A218CB. This video demonstrates the step-by-step process for constructing and preparing the unit for installation.

Step-by-Step Assembly

- 1. Prepare Panels:** Insert dowels and cam locks into the designated holes on the main panels as shown in the assembly video (0:03 - 0:34). Secure cam locks by rotating them 90 degrees.
- 2. Assemble Base Structure:** Attach the side panels to the main base panel using dowels and cam locks (0:35 - 2:15). Ensure all connections are tight and secure.
- 3. Attach Doors:** Secure the hinges to the rattan doors and then attach the doors to the main unit (2:16 - 2:53). Ensure doors open and close smoothly.
- 4. Install Power Outlet:** Place the power outlet unit into its designated slot on the top panel and secure it (2:54 - 3:03).
- 5. Complete Top Panel:** Attach the top panel to the assembled base structure, ensuring all dowels and cam locks align and are secured (3:04 - 3:38).
- 6. Insert Cable Grommet:** Place the cable grommet into the cable management hole on the top panel (3:39 - 3:43).
- 7. Install Adjustable Shelf:** Insert the shelf supports into the desired holes within the central compartment and place the adjustable shelf onto the supports (3:44 - 3:50).

Wall Mounting

This floating TV stand is designed for mounting on wood stud, concrete, or brick walls. **It is not suitable for hollow walls or gypsum board walls.**

- Locate wall studs or use appropriate anchors for concrete/brick walls.
- Measure and mark the desired height and position for the TV stand.
- Securely attach the mounting hardware to the wall according to the instructions provided in your package.
- Carefully lift and attach the TV stand to the mounted hardware. Ensure it is level and stable before placing any items on it.



Concrete Wall



Brick Wall



Wooden Wall




Hollow Wall

Ensure your wall type is suitable for mounting this floating TV stand.

4. OPERATING INSTRUCTIONS

Power Outlet Usage

The built-in power strip features 4 outlets, ideal for connecting your TV, DVD player, WiFi router, phone, tablet, and other media components. Plug the TV stand's power cord into a wall outlet. Use the integrated cable holes to manage and hide messy cables, maintaining a neat and organized appearance.

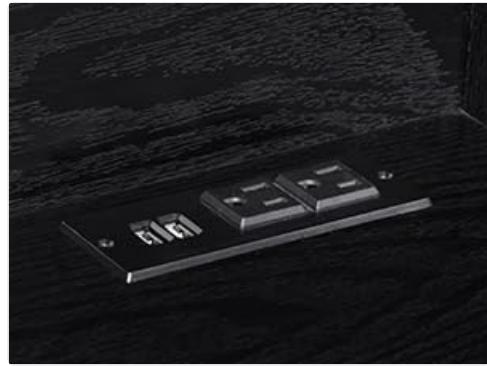

The integrated power outlet provides convenient charging for your devices.

Storage Compartments

The TV stand features two storage compartments with rattan doors and an open central shelf. These are perfect for holding DVD players, gaming accessories, books, and decorative items. The rattan doors provide ventilation for electronics and add a unique aesthetic.



Utilize the ample storage space for media devices and decorative items.

5. MAINTENANCE

Cleaning and Care

- Wipe the surfaces with a dry cloth to remove dust and dirt.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- For spills, wipe immediately with a soft, damp cloth and then dry thoroughly.
- Periodically check all screws and connections to ensure they remain tight.



The surface is designed to be waterproof and easy to clean.

6. TROUBLESHOOTING


- **Difficulty with Assembly:** If you encounter issues with parts fitting or alignment, double-check the instruction manual and video. Ensure all parts are correctly oriented before tightening screws. Do not force parts together.
- **Loose Connections:** If the stand feels wobbly after assembly, re-tighten all cam locks and screws. Avoid over-tightening to prevent stripping.
- **Damaged or Missing Parts:** If any components arrived damaged or are missing, do not proceed with assembly. Contact WAMPAT customer support immediately for replacement parts.
- **Power Outlet Not Working:** Ensure the TV stand's power cord is securely plugged into a functional wall outlet. Check if the wall outlet itself is receiving power.

7. SPECIFICATIONS

Feature	Detail
Model	W15A218CB
Dimensions (L x W x H)	69.2 x 11.8 x 6.6 inches (176 x 30 x 16.8 cm)

Item Weight	55 pounds (25 kg)
Material	Engineered Wood
Number of Shelves	1 (adjustable)
Special Feature	Wall Mount, Integrated Power Outlet (4 AC outlets)
Color	Black
Assembly Required	Yes
Product Care Instructions	Wipe with Dry Cloth

Display Personality

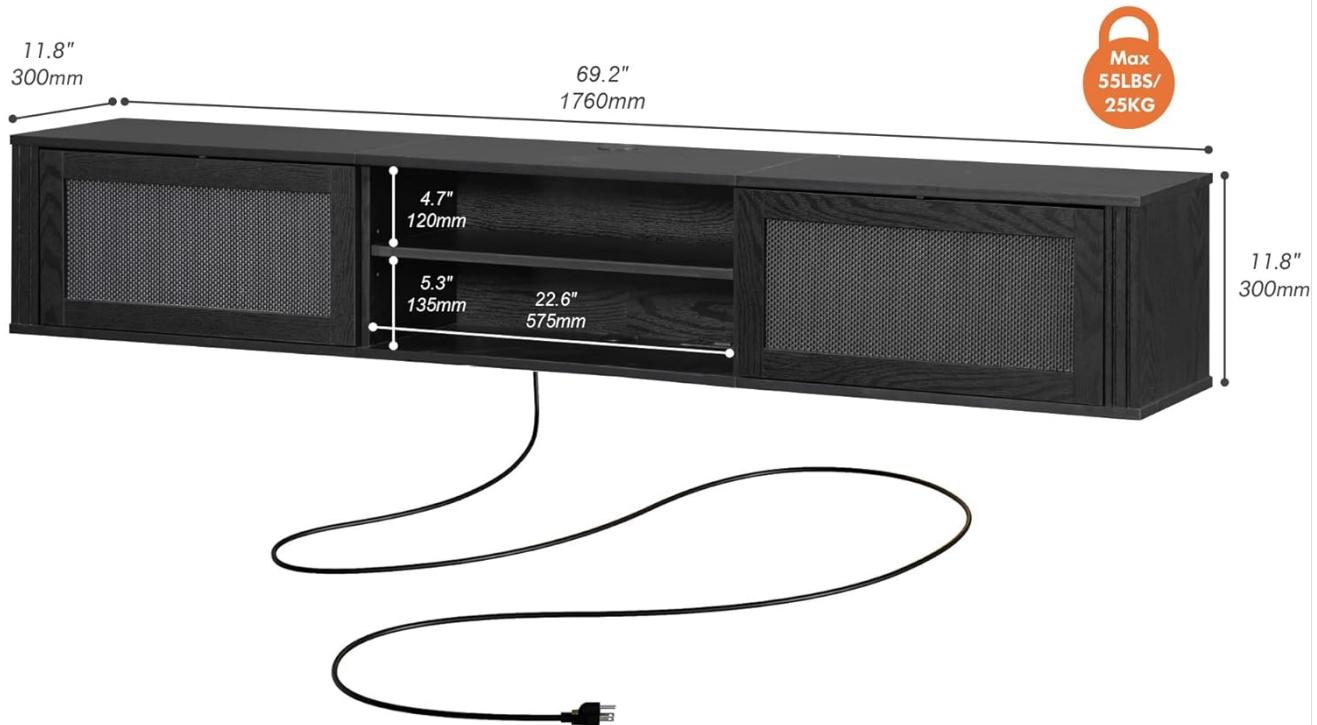

Waterproof



55lbs Bearing



120V/12A 4 AC outlets



Easy Installation

Detailed dimensions and weight capacity of the TV stand.

8. WARRANTY & SUPPORT

Warranty Information

WAMPAT offers a **Lifetime Guaranty** on this product. Additionally, a **100-day return and exchange program** is available. If you experience any inconvenience after purchasing, including damaged or lost accessories, WAMPAT guarantees to replace them for you at any time.

Customer Support

For any questions, concerns, or assistance with your WAMPAT Floating TV Stand, please contact the retailer or WAMPAT customer support directly. Have your model number (W15A218CB) and purchase information ready to expedite service.