

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WORKPRO](#) /

› [WORKPRO W125296A Carpet and Upholstery Cleaner Instruction Manual](#)

## WORKPRO W125296A

# WORKPRO W125296A Carpet and Upholstery Cleaner Instruction Manual

Model: W125296A

## 1. INTRODUCTION

Thank you for choosing the WORKPRO W125296A Carpet and Upholstery Cleaner. This powerful and versatile cleaning device is designed to effectively remove stains and dirt from carpets, upholstery, car interiors, and more. Featuring a 450W motor, 13kPa suction power, and a dual-tank system, it ensures a thorough and hygienic cleaning experience. Please read this manual carefully before use to ensure safe and optimal operation.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Use only cleaning products recommended by the manufacturer.
- Unplug from outlet when not in use and before cleaning or servicing.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

## 3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your WORKPRO W125296A cleaner:

1. Switch
2. Handle
3. Power Cord Hook
4. Power Cord

5. Clean Water Tank (1600 ml)
6. Small Brush
7. Dirty Water Tank (750 ml)
8. Brush Hook
9. Hose
10. Large Brush
11. Hose Hook
12. Multi-fabric Cleaner (750 ml, packed inside clean water tank)
13. Measuring Cup



Figure 3.1: Overview of the WORKPRO W125296A Carpet and Upholstery Cleaner and its labeled components.

## 4. SETUP

Before first use, ensure all components are present and undamaged.

### 4.1 Preparing the Cleaning Solution

1. Remove the clean water tank (5) from the main unit.
2. Unscrew the cap of the clean water tank.
3. Fill the clean water tank with water up to the MAX line.
4. Add the multi-fabric cleaner (12) to the clean water tank. The recommended ratio is 1 part cleaner to 35 parts water. Use a low-foaming cleaning solution.
5. Securely screw the cap back onto the clean water tank and place it back into the main unit, ensuring it clicks into place.

# ÉTAPES DE PRÉPARATION



Figure 4.1: Visual guide for filling the clean water tank and adding cleaning solution.

# ÉTAPES DE PRÉPARATION



Figure 4.2: Recommended dilution ratio for cleaning solution and note on using low-foaming cleaner.

## 4.2 Attaching the Hose and Brush

1. Insert the hose (9) into the designated port on the main unit, ensuring the locking tab is securely fixed.
2. Select the desired brush head (small brush (6) or large brush (10)) and attach it firmly to the end of the hose handle.
3. Attach the power cord hook (3) and brush hook (8) to the main unit for organized storage.

# FONCTION TOUT EN UN



Figure 4.3: Attaching the hose and organizing hooks for the cleaner.

## 5. OPERATING INSTRUCTIONS

The WORKPRO W125296A operates with a simple three-step process: spray, brush, and vacuum.

### 5.1 General Cleaning Procedure

1. Plug the power cord into a suitable electrical outlet.
2. Turn on the appliance using the switch (1).
3. **Spray:** Hold the brush head over the stained area and press the trigger on the handle to spray the cleaning solution onto the surface.
4. **Brush:** Gently scrub the stained area with the brush head to loosen dirt and stains.
5. **Vacuum:** Release the spray trigger and slowly move the brush head over the treated area to vacuum up the dirty solution. Ensure the brush head is held at an appropriate angle for optimal suction.
6. Repeat steps 3-5 as necessary until the stain is removed and the area is clean.



Figure 5.1: The all-in-one function for effective stain removal.

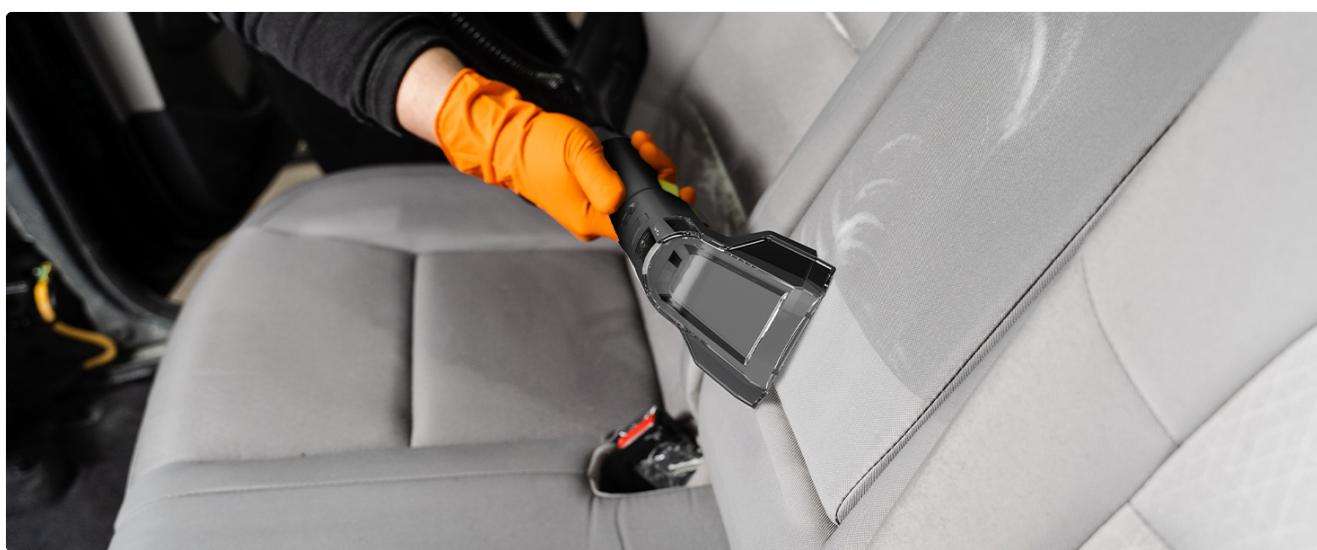


Figure 5.2: Important note on maintaining the correct brush head angle for efficient water absorption.

### 5.2 Using Different Brush Heads

- **Large Brush (10):** Ideal for deep cleaning larger areas such as carpets, rugs, and wide upholstery sections.
- **Small Brush (6):** Perfect for localized cleaning, delicate fabrics, tight spaces, and intricate areas like car seats or

furniture crevices.

# CONCEPTION À DOUBLE RÉSERVOIR

## Rejet des Pollutions Secondaires

Il arrêtera d'aspirer l'eau lorsque le niveau d'eau atteindra la ligne **MAX**, veuillez vider le réservoir.

Réservoir d'Eau Sale  
750 ML

Réservoir d'Eau Propre  
1600 ML



nettoyant multi-tissu inclus de 750 ml  
(\* emballé à l'intérieur du réservoir d'eau propre)



Figure 5.3: The two included brush heads for versatile cleaning tasks.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your cleaner.

### 6.1 Emptying and Cleaning Tanks

1. After each use, or when the dirty water tank (7) reaches its MAX level, turn off and unplug the appliance.
2. Remove the dirty water tank from the main unit.
3. Carefully empty the dirty water into a sink or drain.
4. Rinse both the dirty water tank and the clean water tank thoroughly with clean water.
5. Allow both tanks to air dry completely before reassembling or storing the unit.



Figure 6.1: Reminder to empty the dirty water tank to prevent overflow and maintain suction.



Figure 6.2: Cleaning the dirty water tank after use.

## 6.2 Cleaning Brush Heads and Hose

- Detach the brush head from the hose handle.
- Rinse the brush head under running water to remove any debris or residue.
- If necessary, use a small brush or cloth to clean the bristles.
- Wipe down the exterior of the hose and the main unit with a damp cloth.
- Ensure all parts are dry before storing.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No suction or weak suction	Dirty water tank is full.	Empty the dirty water tank (7). The unit has an automatic shut-off when full.
	Hose or brush head is clogged.	Check and clear any blockages in the hose or brush head.
	Brush head angle is incorrect.	Adjust the brush head angle to ensure proper contact and suction (refer to Figure 5.2).

Problem	Possible Cause	Solution
No spray or weak spray	Clean water tank is empty.	Refill the clean water tank (5) with cleaning solution.
	Spray nozzle is clogged.	Clean the spray nozzle on the brush head.
Appliance does not turn on	Not plugged in or power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

## 8. SPECIFICATIONS

<b>Brand</b>	WORKPRO
<b>Model Number</b>	W125296A
<b>Power</b>	450 W
<b>Suction Power</b>	13 kPa
<b>Noise Level</b>	75 dB
<b>Clean Water Tank Capacity</b>	1.6 Liters
<b>Dirty Water Tank Capacity</b>	0.75 Liters
<b>Product Dimensions (L x W x H)</b>	17.3 x 32.6 x 30.6 cm
<b>Item Weight</b>	5.44 Kilograms
<b>Power Source</b>	Corded Electric
<b>Power Cord Length</b>	350 cm
<b>Hose Length</b>	110 cm
<b>Recommended Surfaces</b>	Carpets, Upholstery, Car Interiors

## 9. PRODUCT VIDEOS

Watch these official product videos for visual guidance on using your WORKPRO W125296A cleaner.

### HAUSHOF StainZapper Carpet Cleaner Demonstration

Your browser does not support the video tag.

This video demonstrates the effective stain removal capabilities of a similar carpet cleaner, showcasing the spray, scrub, and vacuum functions on a car mat.

### Olvy Carpet Cleaner 2.0 Usage

Your browser does not support the video tag.

This video illustrates the process of filling the cleaner with water and solution, and then using it to clean upholstery and outdoor mats, highlighting its versatility.

### Product Features Overview

Your browser does not support the video tag.

A brief video showcasing the key features and benefits of the carpet cleaner, including its ease of use and effectiveness on various surfaces.

## **10. WARRANTY AND SUPPORT**

---

WORKPRO products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the warranty card included with your purchase or visit the official WORKPRO website.

For technical support, troubleshooting assistance, or to order replacement parts, please contact WORKPRO Customer Service. Contact information can typically be found on the product packaging or the official WORKPRO website.