

AKASO Brave 4 Pro

AKASO Brave 4 Pro Action Camera and Magnetic Neck Mount Holder User Manual

Model: Brave 4 Pro

1. INTRODUCTION

This manual provides comprehensive instructions for the AKASO Brave 4 Pro Action Camera and its Magnetic Neck Mount Holder. Please read this manual carefully before using the product to ensure proper operation and to maximize your experience. Keep this manual for future reference.

2. WHAT'S IN THE BOX

The AKASO Brave 4 Pro Action Camera and Magnetic Neck Mount Holder kit includes the following items:

- AKASO Brave 4 Pro Action Camera
- Magnetic Neck Mount Holder
- 64GB microSDXC Canvas Memory Card
- USB Dual Charger
- 2 rechargeable 1350mAh batteries
- Remote control wristband
- Other accessories kit (compatible with various cameras, including GoPro)

Note: An external microphone is not included and must be purchased separately if required. The remote wristband is not waterproof.

3. PRODUCT OVERVIEW

3.1 AKASO Brave 4 Pro Action Camera

The AKASO Brave 4 Pro is a high-performance action camera designed for capturing dynamic footage in various

environments. Key features include:

- **Dual-Display Design:** Features an innovative dual-color screen, allowing for framing and monitoring from both the front and back. The vivid front screen is suitable for selfies, while the 2-inch back touch screen provides intuitive control.
- **High-Resolution Capture:** Records video at up to 4K30FPS and captures still photos at 20MP resolution.
- **Electronic Image Stabilization (EIS) 2.0:** Equipped with a 6-axis gyroscope to detect and compensate for motion changes, ensuring stable video footage even during movement or impact.
- **Waterproof Capability:** With the included waterproof case, the camera is submersible up to 131 feet (40 meters), suitable for underwater activities.

Intuitive Touch Screen



Image: The AKASO Brave 4 Pro's intuitive touch screen interface.

Waterproof up to

**131FT/
40M**



Image: The AKASO Brave 4 Pro camera shown underwater, highlighting its 131ft (40m) waterproof capability with the case.

Image Stabilization



OFF

Image: A visual representation of the image stabilization feature, showing a clear image of a cyclist with EIS enabled.

3.2 Magnetic Neck Mount Holder

The Magnetic Neck Mount Holder provides a convenient and comfortable way to wear your action camera for hands-free recording. Its design focuses on comfort and ease of use.


- **Ergonomic Design:** Streamlined shape made from soft silicone material for comfortable wear over extended periods.
- **Durable Construction:** Features a durable stainless steel core that allows bending to any angle for flexible positioning.
- **Magnetic Attachment:** Strong magnetic attraction ensures fast and secure assembly of the camera.
- **90° Rotation:** Allows easy switching between landscape and portrait orientations for diverse shooting perspectives.



Image: A person wearing the AKASO Magnetic Neck Mount Holder with an action camera attached, demonstrating hands-free use.


Ergonomic Design

Streamlined shape fits the neck and is comfortable to wear for long time

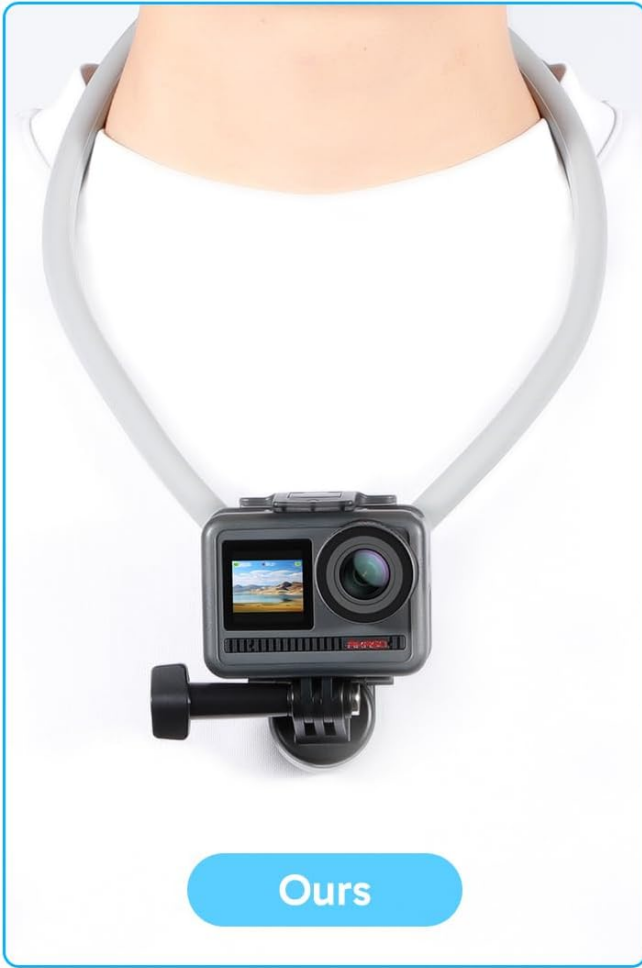

Ours

 Main material is silicon
Soft and comfortable to wear

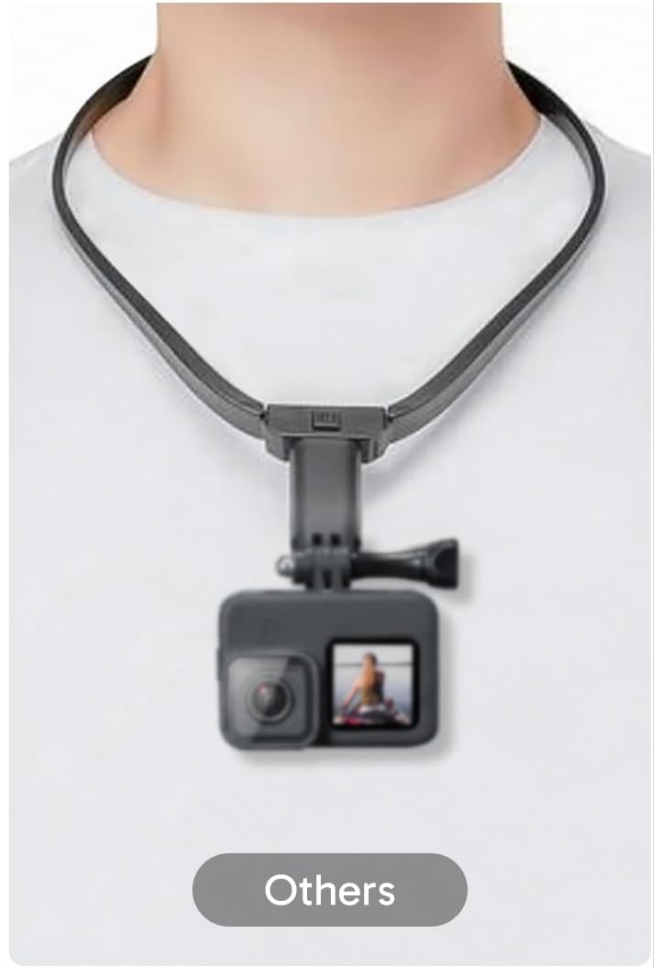

Others

Main material is plastic
uncomfortable

Image: A comparison showing the ergonomic design of the AKASO neck mount (silicon) versus a less comfortable plastic alternative.

Soft and Comfortable, Bends to Any Angle



Image: Close-up view detailing the soft silicone material, durable stainless steel core, and high-quality screws of the neck mount.

4. SETUP

4.1 Camera Preparation

1. **Charge Batteries:** Use the provided USB Dual Charger to fully charge both 1350mAh batteries. Each battery provides up to 90 minutes of recording time.
2. **Insert Memory Card:** Insert the 64GB microSDXC Canvas Memory Card into the camera's memory card slot. Ensure the card is inserted correctly.
3. **Install Battery:** Open the battery compartment and insert a charged battery. Close the compartment securely.

4.2 Attaching Camera to Neck Mount

1. **Prepare the Neck Mount:** To open the neck mount, press the buttons on the side to unlock the magnetic connection.
2. **Attach Camera:** Secure your AKASO Brave 4 Pro Action Camera to the mount using the standard action

camera screw attachment. Ensure it is tightened firmly.

3. **Close Neck Mount:** Bring the two ends of the neck mount together. The strong magnetic attraction will snap them into place, securing the camera.

Easy to Install the Magnetic Neck Strap



Press button to unlock



Fast assembly



Easily switches between landscape and portrait orientation for shooting

Image: Visual guide demonstrating how to press buttons to unlock, attach the camera, and use the magnetic attraction for fast assembly and 90° rotation.

5. OPERATING THE AKASO BRAVE 4 PRO ACTION CAMERA

1. **Power On/Off:** Press and hold the power button to turn the camera on or off.
2. **Mode Switching:** Use the mode button or the touch screen to navigate between video recording, photo capture, and other settings.
3. **Recording/Shutter:** Press the shutter button to start/stop video recording or to take a photo.
4. **Dual Screen Usage:** Utilize the front screen for framing selfies or vlogs, and the rear touch screen for general operation and detailed settings.
5. **Image Stabilization:** Ensure EIS 2.0 is enabled in the camera settings for smoother footage, especially during active use.
6. **Waterproof Use:** When using the camera underwater, ensure it is securely enclosed within the waterproof

case. Verify all seals are clean and properly closed before submersion.

7. **Remote Control:** The included remote control wristband can be used to remotely operate the camera for convenience. Refer to the remote control's specific instructions for pairing and functions.

Fulfills the Need for Shooting Perspectives

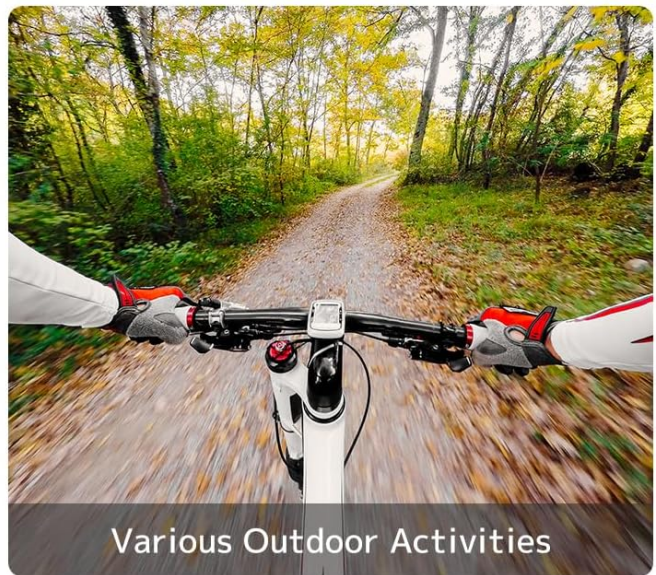


Image: Examples of diverse shooting scenarios, including cooking photography, travel vlogging, family time recording, and outdoor activities, demonstrating the camera's versatility.

6. OPERATING THE MAGNETIC NECK MOUNT HOLDER

1. **Wearing the Mount:** Place the neck mount around your neck. Adjust its position for comfort and optimal camera angle. The flexible design allows for custom shaping.
2. **Adjusting Camera Angle:** The camera can be rotated 90 degrees on the mount to switch between landscape and portrait video modes without removing the camera. Gently rotate the camera to the desired orientation.
3. **Removing the Camera:** To remove the camera, press the side buttons on the neck mount to release the magnetic connection, then detach the camera from its screw mount.

7. MAINTENANCE

- **Cleaning the Camera:** Use a soft, lint-free cloth to clean the camera lens and screens. For stubborn dirt, a slightly damp cloth can be used, followed by a dry one.
- **Waterproof Case Care:** After underwater use, rinse the waterproof case with fresh water and allow it to air dry. Inspect the seals regularly for any debris or damage.
- **Neck Mount Care:** Wipe the silicone neck mount with a damp cloth to remove any dirt or sweat. Avoid harsh chemicals.
- **Storage:** Store the camera and accessories in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.

8. TROUBLESHOOTING

- **Camera Not Turning On:** Ensure the battery is fully charged and correctly inserted. Try using a different charged battery.
- **Recording Issues:** Check if the memory card is properly inserted and has sufficient free space. Ensure the card is of a compatible type (Micro SDXC, U1 or above).
- **Unstable Footage:** Verify that Electronic Image Stabilization (EIS) 2.0 is enabled in the camera settings.
- **Remote Control Not Working:** Check the remote control's battery. Ensure it is properly paired with the camera.
- **Magnetic Mount Not Holding:** Ensure the magnetic surfaces are clean and free of obstructions. Verify the camera is securely attached to the screw mount.

9. SPECIFICATIONS

Feature	Detail
Brand	AKASO
Model Name	Brave 4 Pro
Video Capture Resolution	4K
Photo Resolution	20MP
Image Stabilization	Electronic Image Stabilization (EIS) 2.0 with 6-axis gyroscope
Water Resistance Level	Waterproof up to 131ft (40m) with case
Screen Size	2 Inches (rear touch screen), Front display also available
Flash Memory Type	Micro SDXC (U1 or above recommended)
Supported Audio Format	AAC, MP3
File Format	MP4 (Video), JPEG (Image)
Lens Type	Wide Angle
Focus Type	Auto Focus
Batteries	2 x 1350mAh rechargeable batteries (included)
Built-In Media	64GB microSDXC Canvas Memory Card, USB Dual Charger, remote control wristband
Compatible Devices	Smartphone, Personal Computer

10. WARRANTY AND SUPPORT

AKASO products are designed and manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please visit the official AKASO website or contact AKASO customer support directly. Please retain your proof of purchase for warranty claims.

Official AKASO Store: [AKASO Store on Amazon](#)